

olivetti



d-Copia 1800MF

d-Copia 2200MF

OPERATION GUIDE



550505en

PUBLICATION ISSUED BY:

Olivetti S.p.A.

Gruppo Telecom Italia

Via Jervis, 77 - 10015 Ivrea (ITALY)

www.olivetti.com

Copyright © 2009, Olivetti

All rights reserved

The mark affixed to the product certifies that the product satisfies the basic quality requirements.



The manufacturer reserves the right to carry out modifications to the product described in this manual at any time and without any notice.



ENERGY STAR is a U.S. registered mark.

The ENERGY STAR program is an energy reduction plan introduced by the United States Environmental Protection Agency in response to environmental issues and for the purpose of advancing the development and utilization of more energy efficient office equipment.

Your attention is drawn to the following actions which could compromise the conformity attested to above, as well as the characteristics of the product:

- incorrect electrical power supply;
 - incorrect installation, incorrect or improper use or use not in compliance with the warnings provided in the User's Manual supplied with the product;
 - replacement of original components or accessories with others of a type not approved by the manufacturer, or performed by unauthorised personnel.
-

All rights reserved. No part of this material may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from the Publisher.

Introduction

Thank you for your purchase of d-Copia 1800MF/d-Copia 2200MF.

This Operation Guide is intended to help you operate the machine correctly, perform routine maintenance and take a simple troubleshooting action as necessary, so that you can always use the machine in good condition. Please read this Operation Guide before you start using the machine, and keep it close to the machine for easy reference. We recommend the use of our own brand supplies. We will not be liable for any damage caused by the use of third party supplies in this machine. In this Operation Guide, d-Copia 1800MF is referred to as '18-ppm model'; and d-Copia 2200MF as '22-ppm model', respectively.

CONTENTS

1	Names of Parts	1-1
	Main Body	1-1
	Operation Panel	1-4
2	Preparations	2-1
	Loading Paper	2-1
	Note for Adding Paper	2-1
	Loading Paper into the Cassette	2-2
	Setting Paper in the Multi Purp+ ose Tray	2-4
	Loading postcards or envelopes in the MP tray	2-6
	Multi PurposeTray Settings	2-7
	Connecting Cables	2-9
	Connecting the Network Cable	2-9
	Connecting the USB Cable	2-9
	Connecting the Power Cord	2-10
	Turning Power On	2-11
	Network (TCP/IP) Settings	2-12
	Setting Date and Time	2-14
	User Interface language	2-16
3	Basic Operation	3-1
	Basic Copying Procedure	3-1
	Zoom Copying	3-4
	3-4
	Auto Zoom Ratio Selection Mode	3-4
	Zoom Mode	3-5
	Preset Zoom Mode	3-5
	Duplex Copying	3-6
	Collated Copying	3-9
	Combined Copying	3-10
	2-in-1	3-11
	4-in-1 (horizontal)	3-12
	4-in-1 (vertical)	3-13
	Interrupt Mode	3-14
	Low Power Mode	3-16
	Sleep Mode	3-17
	Basic Printing Procedure	3-18
	Installing the Printer Driver	3-18
	Printing from Application Software	3-18
4	Optional Equipment	4-1
	Document Processor	4-1
	Acceptable Originals	4-1
	Notes on Use	4-2
	Names of Parts	4-2
	Setting Originals in the Document Processor	4-2
	Setting Originals on the Platen	4-4
	Paper Feeder	4-5
	Duplex Unit	4-5
	Finisher	4-6
	Names of Parts	4-6
	Adding Staples	4-7
	Clearing Staple Jam	4-8
	Job Separator	4-9
	Key Counter	4-10

	Fax Kit	4-10
	Network Scanner Kit	4-10
	Network Interface Card (IB-23)	4-10
	Additional Memory	4-11
	Optional Equipment	4-12
5	Maintenance	5-1
	Cleaning the Machine	5-1
	Replacing the Toner Container and the Waste Toner Box	5-5
6	Troubleshooting	6-1
	If Trouble Occurs	6-1
	Displayed Messages	6-4
	Paper Jams	6-9
	Jam Location Indicators	6-9
	Notes	6-10
	Removal Procedures	6-10
	Appendix	Appendix-1
	Specifications	Appendix-1
	Main Body	Appendix-1
	Copier Functions	Appendix-2
	Printer Functions	Appendix-2
	Document Processor (optional)	Appendix-3
	Paper Feeder (optional)	Appendix-3
	Duplex Unit (optional)	Appendix-3
	Finisher (optional)	Appendix-4
	Job Separator (optional)	Appendix-4
	Environmental Specifications	Appendix-4
	Index	Index-1

Notice The information in this guide is subject to change without notification. Additional pages may be inserted in future editions. The user is asked to excuse any technical inaccuracies or typographical errors in the present edition.

No responsibility is assumed if accidents occur while the user is following the instructions in this guide. No responsibility is assumed for defects in the printer's firmware (contents of its read-only memory).

This guide, any copyrightable subject matter sold or provided with or in connection with the sale of the machine, are protected by copyright. All rights are reserved. Copying or other reproduction of all or part of this guide, any copyrightable subject matter without the prior written consent of Olivetti is prohibited. Any copies made of all or part of this guide, any copyrightable subject must contain the same copyright notice as the material from which the copying is done.

Regarding Tradenames

PRESCRIBE, ECOSYS, KPDL and KIR (Kyocera Image Refinement) are trademarks of Kyocera Corporation.

Diablo 630 is a product of Xerox Corporation. IBM Proprinter X24E is a product of International Business Machines Corporation. Epson LQ-850 is a product of Seiko Epson Corporation. Hewlett-Packard, PCL, and P.J.L are registered trademarks of Hewlett-Packard Company. Adobe Acrobat, Acrobat Reader and PostScript are registered trademarks of Adobe Systems Incorporated.

Macintosh, AppleTalk, and TrueType are a registered trademarks of Apple Computer, Inc.. Microsoft, Windows, Windows NT, Windows XP, Windows Vista and Internet Explorer are registered trademarks of Microsoft Corporation. PowerPC is a trademark of IBM in the U.S.A. and other countries. ENERGY STAR is a U.S. registered mark. All other brand and product names are registered trademarks or trademarks of their respective companies.

CompactFlash and CF are trademarks of SanDisk Corporation of America.

This machine has been developed using embedded real-time operating system Tornado™ by Wind River Systems, Inc.

All European language fonts installed in this machine are used under licensing agreement with Monotype Imaging Inc. UFST™ MicroType® fonts by Monotype Imaging Inc. are installed in this machine

Helvetica, Palatino and Times are registered trademarks of Linotype-Hell AG.

ITC Avant Garde Gothic, ITC Bookman, ITC ZapfChancery and ITC ZapfDingbats are registered trademarks of International Type-face Corporation.

TypeBankG-B, TypeBankM-M and Typebank-OCR are trademarks of TypeBank®

Legal Restriction On Copying

- It may be prohibited to copy copyrighted material without permission of the copyright owner.
- It is prohibited under any circumstances to copy domestic or foreign currencies and securities, etc., including: Paper money, Bank notes, Securities, Stamps, Passports, Certificates
- Local laws and regulations may prohibit or restrict copying or scanning of other items not mentioned above.

Energy Saving Control Function



The device comes equipped with a **Low Power Mode** where energy consumption is reduced after a certain amount of time elapses since the device was last used, as well as a **Sleep Mode** where printer and fax functions remain in a waiting state but power consumption is still reduced to a minimum when there is no activity with the device within a set amount of time. If the auto low power time is equal to the auto sleep time, a Sleep Mode is proceeded.

Low Power Mode

The device automatically enters Low Power Mode when one minute has passed since the device was last used. The amount of time of no activity that must pass before Low Power Mode is activated may be lengthened.

Sleep Mode

The device automatically enters Sleep Mode when one minute has passed since the device was last used. The amount of time of no activity that must pass before Sleep Mode is activated may be lengthened. For more information see **Sleep Mode** on page **3-17**.

Optional Automatic 2-Sided Copy Function

This device can include a 2-sided copying as an optional function. For example, by copying two 1-sided originals onto a single sheet of paper as a 2-sided copy, it is possible to lower the amount of paper used.

Paper Recycling

This device supports the recycled paper which reduces the load on the environment. Your sales or service representative can provide information about recommended paper types.

Energy Star (ENERGY STAR®) Program

We have determined as a participating company in the International Energy Star Program that this product is compliant with the standards laid out in the International Energy Star Program.

Please read this Operation Guide before using this machine. Keep it close to the machine for easy reference.

The sections of this guide and parts of the machine marked with symbols are safety warnings meant to protect the user, other individuals and surrounding objects, and ensure correct and safe usage of the machine. The symbols and their meanings are indicated below.



DANGER: Indicates that serious injury or even death will very possibly result from insufficient attention to or incorrect compliance with the related points.




WARNING: Indicates that serious injury or even death may result from insufficient attention to or incorrect compliance with the related points.



CAUTION: Indicates that personal injury or mechanical damage may result from insufficient attention to or incorrect compliance with the related points.

Symbols

The  symbol indicates that the related section includes safety warnings. Specific points of attention are indicated inside the symbol.




.... [General warning]



.... [Warning of danger of electrical shock]



.... [Warning of high temperature]

The  symbol indicates that the related section includes information on prohibited actions. Specifics of the prohibited action are indicated inside the symbol.



.... [Warning of prohibited action]



.... [Disassembly prohibited]

The ● symbol indicates that the related section includes information on actions which must be performed. Specifics of the required action are indicated inside the symbol.



.... [Alert of required action]



.... [Remove the power plug from the outlet]



.... [Always connect the machine to an outlet with a ground connection]

Please contact your service representative to order a replacement if the safety warnings in this Operation Guide are illegible or if the guide itself is missing. (fee required)

IMPORTANT! PLEASE READ FIRST.

CAUTION LABELS

Caution labels have been attached to the machine at the following locations for safety purposes. Be sufficiently careful to avoid fire or electric shock when removing a paper jam or when replacing toner.


Label 2

High temperature inside. Do not touch parts in this area, because there is a danger of getting burned.



Label 3

Do not attempt to incinerate the toner container. Dangerous sparks may cause burns.

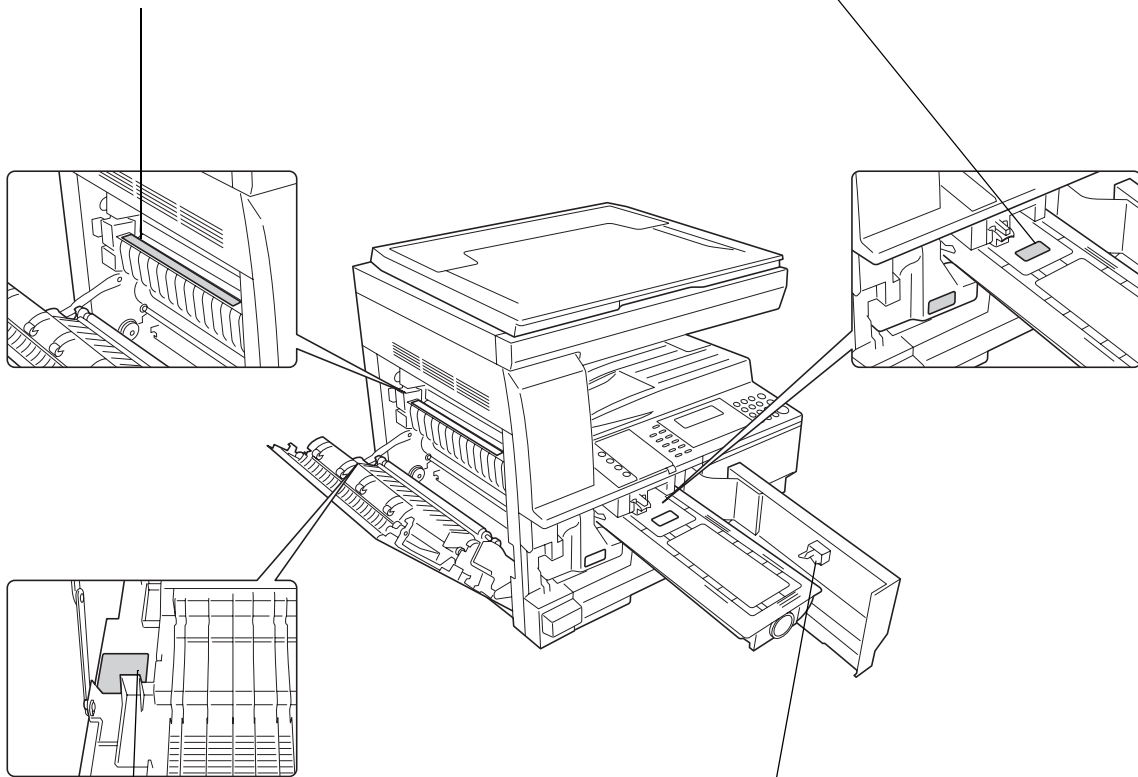

Label 1

High temperature inside. Do not touch parts in this area, because there is a danger of getting burned.



Label 4

Do not attempt to incinerate the waste toner box. Dangerous sparks may cause burns.



NOTE: Do not remove these labels.



INSTALLATION PRECAUTIONS

Environment




 
Caution

Avoid placing the machine on or in locations which are unstable or not level. Such locations may cause the machine to fall down or fall over. This type of situation presents a danger of personal injury or damage to the machine.

Avoid locations with humidity or dust and dirt. If dust or dirt become attached to the power plug, clean the plug to avoid the danger of fire or electrical shock.

Avoid locations near radiators, heaters, or other heat sources, or locations near flammable items, to avoid the danger of fire.

To keep the machine cool and facilitate changing of parts and maintenance, allow access space as shown below. Leave adequate space, especially around the vents, to allow air to be properly ventilated out of the machine.

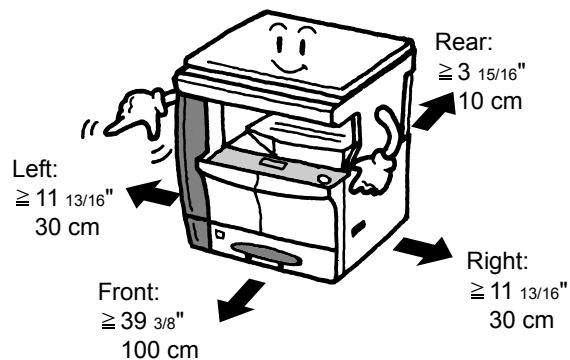

Other precautions

Adverse environmental conditions may affect the safe operation and performance of the machine. Install in an air-conditioned room (recommended room temperature: around 50-90,5 °F (10-32,5 °C), humidity: around 15-80 %), and avoid the following locations when selecting a site for the machine.

- Avoid locations near a window or with exposure to direct sunlight.
- Avoid locations with vibrations.
- Avoid locations with drastic temperature fluctuations.
- Avoid locations with direct exposure to hot or cold air.
- Avoid poorly ventilated locations.

If the floor is delicate, when this product is moved after installation, the floor material may be damaged.

During copying, some ozone is released, but the amount does not cause any ill effect to one's health. If, however, the machine is used over a long period of time in a poorly ventilated room or when making an extremely large number of copies, the smell may become unpleasant. To maintain the appropriate environment for copy work, it is suggested that the room be properly ventilated.

Power supply/Grounding the machine

Warning

Do not use a power supply with a voltage other than that specified. Avoid multiple connections in the same outlet. These types of situations present a danger of fire or electrical shock.

Plug the power cord securely into the outlet. If metallic objects come in contact with the prongs on the plug, it may cause a fire or electric shock.

Always connect the machine to an outlet with a ground connection to avoid the danger of fire or electrical shock in case of an electric short. If an earth connection is not possible, contact your service representative.



Other precautions

Connect the power plug to the closest outlet possible to the machine.

The power supply cord is used as the main disconnect device. Ensure that the socket/outlet is located/installed near the equipment and is easily accessible.

Handling of plastic bags

Warning

Keep the plastic bags that are used with the machine away from children. The plastic may cling to their nose and mouth causing suffocation.



PRECAUTIONS FOR USE

Cautions when using the machine

Warning

Do not place metallic objects or containers with water (flower vases, flower pots, cups, etc.) on or near the machine. This situation presents a danger of fire or electrical shock should they fall and spill liquids inside.

Do not remove any of the covers from the machine as there is a danger of electrical shock from high voltage parts inside the machine.



Do not damage, break or attempt to repair the power cord. Do not place heavy objects on the cord, pull it, bend it unnecessarily or cause any other type of damage. These types of situations present a danger of fire or electrical shock.



Never attempt to repair or disassemble the machine or its parts as there is a danger of fire, electrical shock or damage to the laser. If the laser beam escapes, there is a danger of it causing blindness.



If the machine becomes excessively hot, smoke appears from the machine, there is an odd smell, or any other abnormal situation occurs, there is a danger of fire or electrical shock. Turn the main power switch off (O) immediately, be absolutely certain to remove the power plug from the outlet and then contact your service representative.



If anything harmful (paper clips, water, other fluids, etc.) falls into the machine, turn the main power switch off (O) immediately. Next, be absolutely certain to remove the power plug from the outlet to avoid the danger of fire or electrical shock. Then contact your service representative.



Do not remove or connect the power plug with wet hands, as there is a danger of electrical shock.



Always contact your service representative for maintenance or repair of internal parts.



Caution

Do not pull the power cord when removing it from the outlet. If the power cord is pulled, the wires may become broken and there is a danger of fire or electrical shock. (always grasp the power plug when removing the power cord from the outlet.)



Always remove the power plug from the outlet when moving the machine. If the power cord is damaged, there is a danger of fire or electrical shock.



If the machine will not be used for a short period of time (overnight, etc.), turn the main power switch off (O). If it will not be used for an extended period of time (vacations, etc.), remove the power plug from the outlet for safety purposes during the time the machine is not in use.



Always hold the designated parts only when lifting or moving the machine.



For safety purposes, always remove the power plug from the outlet when performing cleaning operations.



If dust accumulates within the machine, there is a danger of fire or other trouble. It is therefore recommended that you consult with your service representative in regard to cleaning of internal parts. This is particularly effective if accomplished prior to seasons of high humidity. Consult with your service representative in regard to the cost of cleaning the internal parts of the machine.



Other precautions

Do not place heavy objects on the machine or cause other damage to the machine.

Do not open the upper front cover, turn off the main power switch, or pull out the power plug during copying.

When lifting or moving the machine, contact your service representative.

Do not touch electrical parts, such as connectors or printed circuit boards. They could be damaged by static electricity.

Do not attempt to perform any operations not explained in this handbook.

Caution: Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Do not look directly at the light from the scanning lamp as it may cause your eyes to feel tired or painful.

Cautions when handling consumables

Caution

Do not attempt to incinerate the toner container or the waste toner box. Dangerous sparks may cause burns.



Keep the toner container and the waste toner box out of the reach of children.



If toner happens to spill from the toner container or the waste toner box, avoid inhalation and ingestion, as well as contact with your eyes and skin.



- If you do happen to inhale toner, move to a place with fresh air and gargle thoroughly with a large amount of water. If coughing develops, contact a physician.
- If you do happen to ingest toner, rinse your mouth out with water and drink 1 or 2 cups of water to dilute the contents of your stomach. If necessary, contact a physician.
- If you do happen to get toner in your eyes, flush them thoroughly with water. If there is any remaining tenderness, contact a physician.
- If toner does happen to get on your skin, wash with soap and water.

DO NOT attempt to force open or destroy the toner container or the waste toner box.



Other precautions

After use, ALWAYS dispose of the toner container and the waste toner box in accordance with Federal, State and Local rules and regulations.

Store all consumables in a cool, dark location.

If you will not be using the copier for a prolonged period of time, remove all paper from the cassette and the multi-purpose tray and seal in its original packaging.

SAFETY OF LASER BEAM

1. Safety of laser beam

This machine has been certified by the manufacturer to Class 1 level under the radiation performance standards established by the U.S. DHHS (Department of Health and Human Services) in 1968. This indicates that the product is safe to use during normal operation and maintenance. The laser optical system, enclosed in a protective housing and sealed within the external covers, never permits the laser beam to escape.

2. The CDRH Act

A laser-product-related act was implemented on Aug. 2, 1976, by the Center for Devices and Radiological Health (CDRH) of the U.S. Food and Drug Administration (FDA). This act prohibits the sale of laser products in the U.S. without certification, and applies to laser products manufactured after Aug. 1, 1976. The label shown below indicates compliance with the CDRH regulations and must be attached to laser products marketed in the United States. On this machine, the label is on the right.

3. Optical unit

When checking the optical unit, avoid direct exposure to the laser beam, which is invisible. Shown at below is the label located on the cover of the optical unit.

4. Maintenance

For safety of the service personnel, follow the maintenance instructions in the other section of this manual.

5. Safety switch

The power to the laser unit is cut off when the front cover is opened.

Safety Instructions Regarding the Disconnection of Power

Caution: The power plug is the main isolation device! Other switches on the equipment are only functional switches and are not suitable for isolating the equipment from the power source.

VORSICHT: Der Netzstecker ist die Hauptsoliervorrichtung! Die anderen Schalter auf dem Gerät sind nur Funktionsschalter und können nicht verwendet werden, um den Stromfluß im Gerät zu unterbrechen.

Safety Instructions Regarding the Disconnection of Power

Caution: The power plug is the main isolation device! Other switches on the equipment are only functional switches and are not suitable for isolating the equipment from the power source.

Attention: Le débranchement de la fiche secteur est le seul moyen de mettre l'appareil hors tension. Les interrupteurs sur l'appareil ne sont que des interrupteurs de fonctionnement: ils ne mettent pas l'appareil hors tension.

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The use of a non-shielded interface cable with the referenced device is prohibited.

CAUTION — The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of FCC Rules and RSS-Gen of IC Rules.

Operation is subject to the following two conditions; (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

* The above warning is valid only in the United States of America.

Radio Tag Technology

In some countries the radio tag technology used in this equipment to identify the toner container may be subject to authorization and the use of this equipment may consequently be restricted.

MERCURY WARNING



THE LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.

Other precautions (for users in California, the United States)

This product contains a CR Coin Lithium Battery which contains Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.



**DECLARATION OF CONFORMITY
TO
2004/108/EC, 2006/95/EC, 1995/5/EC and 93/68/EEC**

We declare under our sole responsibility that the product to which this declaration relates is in conformity with the following specifications.

EN55024
EN55022 Class B
EN61000-3-2
EN61000-3-3
EN60950-1
EN60825-1
EN300 330-1
EN300 330-2

Guide to this Operation Guide

This operation guide has the following chapters. The content of these chapters is summarized below to be used as a reference.

1 Names of Parts

This chapter contains explanations on the names and functions of the parts of the machine and its operation panel.

2 Preparations

This chapter contains explanations on procedures for loading paper and connection of this product.

3 Basic Operation

This chapter contains explanations on the basic procedures of simple copying and printing.

4 Optional Equipment

This chapter contains explanations on the optional equipment that can be used with this product.

5 Maintenance

This chapter contains explanations on replacement of the toner container and the waste toner box and maintenance of this product.

6 Troubleshooting

This chapter contains explanations on handling problems that may occur, for example, when an error message appears or if a paper jam occurs.

Appendix

The appendix explains the specifications of this product.


Conventions

This guide uses the following conventions:


- 1 **Bold** indicates key names.
- 2 *Courier* indicates messages shown on the message display.
- 3 **Note** contains important information aside from the text.
- 4 *Italic* refers to additional information in other sections or manuals.

1 Names of Parts


Main Body

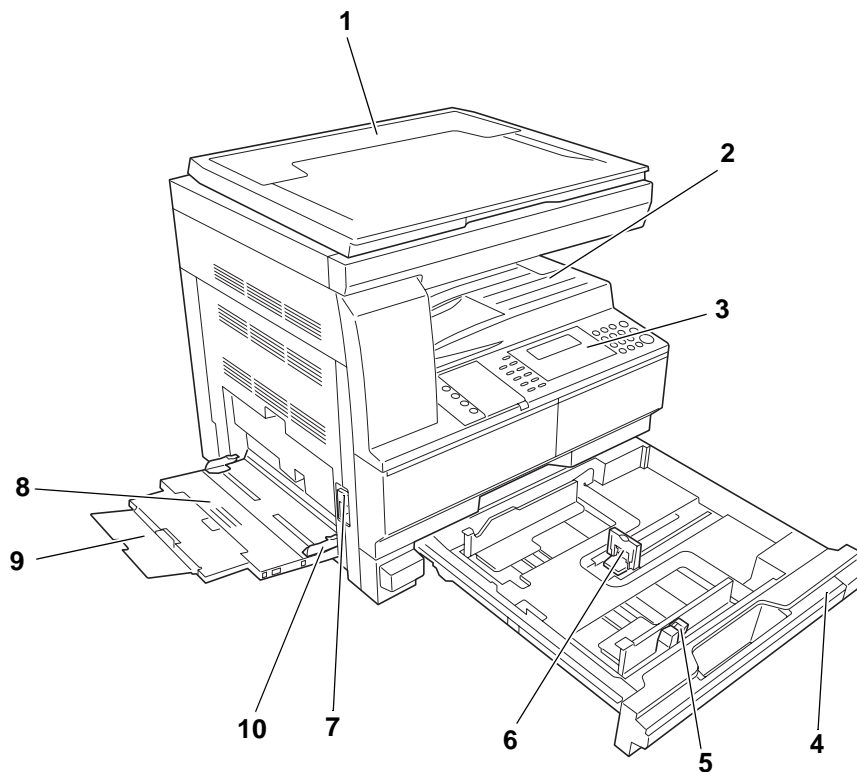

- 1 **Original cover** — Open/close this cover when setting the original on the platen.
- 2 **Output tray** — Finished copies or printouts are stored on this tray. The output tray has a storage capacity of 250 sheets of standard paper (80 g/m²).
- 3 **Operation panel** — Perform operations from the main body here.
- 4 **Cassette** — This cassette has a storage capacity of 300 sheets of standard paper (80 g/m²).
- 5 **Paper width adjusting tab** — Use this tab to adjust the paper width guides to fit to the width of the paper to be loaded in the cassette.
- 6 **Paper length adjusting tab** — Adjust this tab to adjust the paper length guide to fit to the length of the paper to be loaded in the cassette.
- 7 **Left cover handle** — Pull this handle up to open the left cover.
- 8 **Multi-purpose tray** — When using small paper or special paper, set the paper here.
- 9 **MP tray extension** — Pull this to use when setting A4R paper or larger paper.
- 10 **Slider** — Adjust this to fit to the width of paper to be set in the multi-purpose tray.

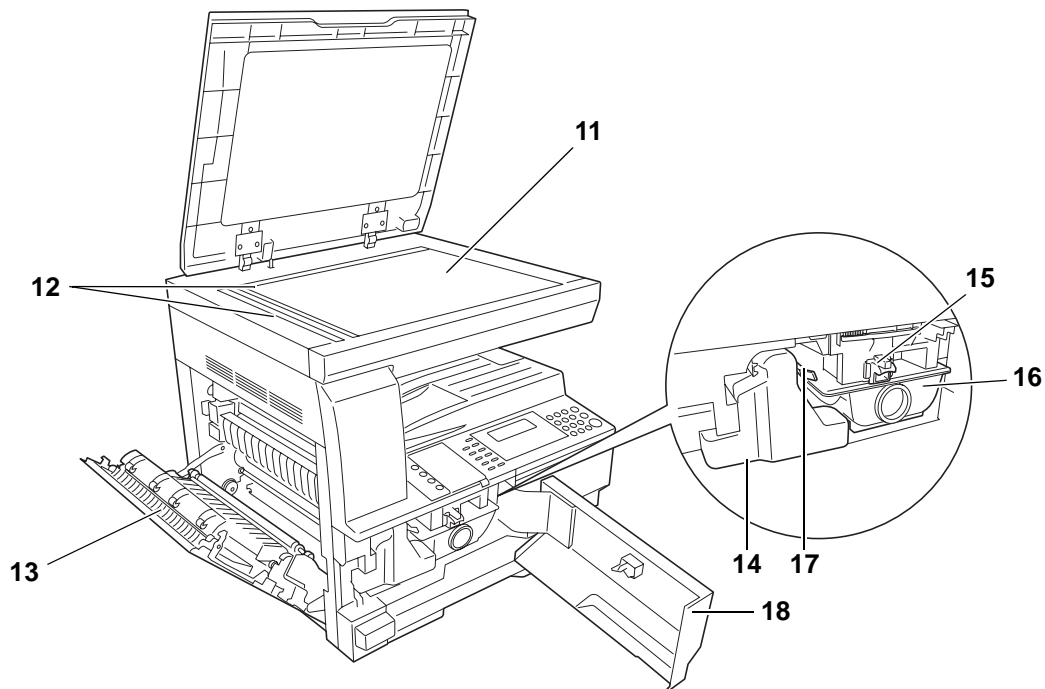


- 11 **Platen** — Set an original here for copying. Be sure to lay the original face-down and align the edge of the original flush up against the left rear corner of the platen.
- 12 **Original size indicator plates** — Be sure to set an original along these plates when setting it on the platen.
- 13 **Left cover** — Open this cover if a paper jam occurs inside the machine.
- 14 **Waste toner box**
- 15 **Toner container release lever** — Operate this lever when replacing the toner container.
- 16 **Toner container**
- 17 **Charger cleaner rod** — Pull this rod and then push it back again after replacing the toner container or when images become dirty.
- 18 **Front cover** — Open this cover when replacing the toner container and the waste toner box or when cleaning this machine.

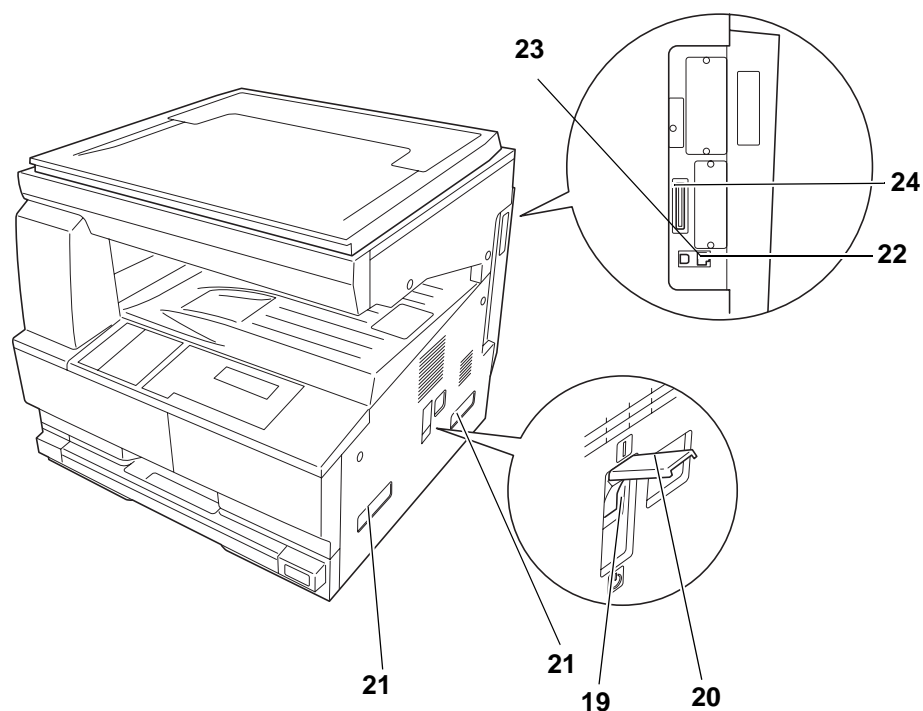

- 19 Main power switch** — Turn this switch on (|) before using this machine.
- 20 Main power switch cover** — Open to operate the main power switch.
- 21 Handles for transport** — Hold the four recessed portions at the right and left when transporting this machine.
- 22 Network interface connector** — When connecting this machine to a network, connect a network cable to this connector.
- 23 USB interface connector** — When connecting this machine to a computer through USB, connect a USB cable to this connector.
- 24 Memory card slot** — Insert an optional memory card to this slot.

Operation Panel

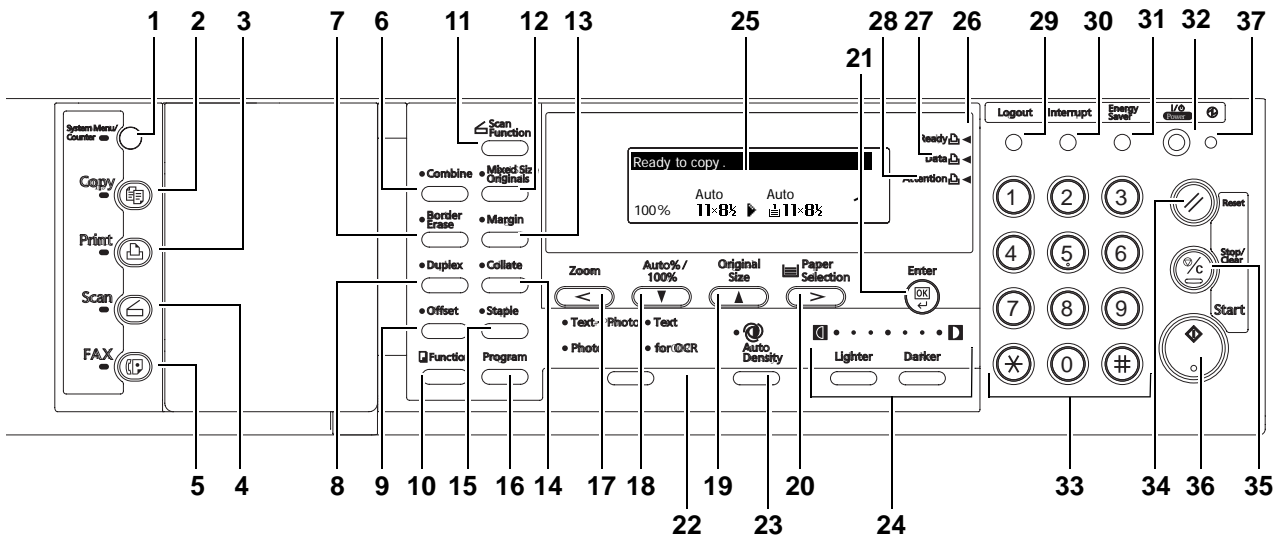

- 1 **System Menu/Counter key and indicator** — Press this key to set the job accounting function, adjust the default settings or set the machine. (For details, refer to **Chapter 3** and **Chapter 4** in **Advanced Operation Guide**.)
- 2 **Copier key and indicator** — Press this key when using the copier functions of this machine. The **Copier** indicator will light up when the machine is in the copier mode.
- 3 **Printer key and indicator** — Press this key when using the printer functions of this machine. The **Printer** indicator will light up when the machine is in the printer mode.
- 4 **Scanner key and indicator** — Press this key when using the scanner functions of this machine. The **Scanner** indicator will light up when the machine is in the scanner mode. For the scanner functions, the optional network scanner kit must be installed.
- 5 **Fax key and indicator** — Press this key when using the fax functions of this machine. The **Fax** indicator will light up when the machine is in the fax mode. For the fax functions, the optional fax kit must be installed.
- 6 **Combine key and indicator** — Press this key to use the combine copy function. The **Combine** indicator will light up. (See page **3-10**.)
- 7 **Border Erase key and indicator** — Press this key to use the border erase function. The **Border Erase** indicator will light up. (For details, refer to **Chapter 1** in **Advanced Operation Guide, Border Erase Mode**.)
- 8 **Duplex key and indicator** — Press this key to perform duplex copying or use the split page function. The **Duplex** indicator will light up. For duplex copying, the optional duplex unit must be installed. (See page **3-6** and **3-7**.)
- 9 **Offset key and indicator** — Press this key to perform offset copying. The **Offset** indicator will light up. (For details, refer to **Chapter 1** in **Advanced Operation Guide, Offset Copying**.)
- 10 **Function key** — Press this key to set the orientation of the originals or perform continuous scanning copying, auto rotation copying or EcoPrint mode. (For details, refer to **Chapter 1** in **Advanced Operation Guide**.)
- 11 **Scanner Function key** — Press this key to adjust various scanner settings. For the scanner functions, the optional network scanner kit must be installed.
- 12 **Mixed size original key and indicator** — Press this key when using the auto selection mode. The **Auto Selection** indicator will light up. For the auto selection mode, the optional document processor must be installed. (For details, refer to **Chapter 1** in **Advanced Operation Guide, Auto Selection Mode**.)
- 13 **Margin key and indicator** — Press this key to use the margin function. The **Margin** indicator will light up. (For details, refer to **Chapter 1** in **Advanced Operation Guide, Margin Mode**.)

- 14 **Collate key and indicator** — Press this key to perform sort copying. The **Sort** indicator will light up. (See page 3-9.)
- 15 **Staple key and indicator** — Press this key to perform staple copying. The **Staple** indicator will light up. For staple copying, the optional finisher must be installed. (For details, refer to **Chapter 1** in *Advanced Operation Guide, Staple Copying*.)
- 16 **Program key** — Press this key to use a registered program for copying. (For details, refer to **Chapter 1** in *Advanced Operation Guide, Program Function*.)
- 17 **Zoom key / < key** — Press this key to perform zoom copying. (See page 3-4.) Also use this key to move the cursor left on the message display.
- 18 **Auto%/100% key / ▼ key** — Press this key to switch between automatic magnification selection and same size copying. Also use this key to move the cursor down on the message display.
- 19 **Original Size key / ▲ key** — Press this key to select the size of the original. Also use this key to move the cursor up on the message display.
- 20 **Paper Select key / > key** — Press this key to switch paper feed between the cassette(s) and the multi-purpose tray. The selected paper size will be indicated on the message display. (See page 3-1.) Also use this key to move the cursor right on the message display.
- 21 **Enter key** — Press this key to register a function or currently selected item on the message display.
- 22 **Image quality mode select key** — Press this key to select the image quality according to the type of the original. (See page 3-2.)
- 23 **Auto Exposure key** — Press this key to select the auto exposure mode. This will detect the density of the original and set the optimal exposure for copying it. (See page 3-2.)
- 24 **Lighter key / Darker key / exposure display** — Press these keys to adjust the exposure. The currently selected exposure is indicated. (See page 3-2.)
- 25 **Message display** — Displays messages on how to operate the machine as well as when trouble occurs. Also use this key to adjust the contrast of the LCD. (For details, refer to **Chapter 3** in *Advanced Operation Guide, Display Contrast Adjustment*.)
- 26 **Ready indicator** (green)
 - Lit — The machine is ready to print.
 - Blinking — An error has occurred. Clear the error referring to *Displayed Messages* on page 6-4.
 - Off — The machine is not ready to print.
- 27 **Data indicator** (green)
 - Lit — The machine is processing print data.
 - Blinking — The machine is receiving print data.
- 28 **Attention indicator** (red)
 - Lit — An error has occurred. Clear the error referring to *Displayed Messages* on page 6-4.
- 29 **Logout key** — In the job accounting mode, press this key after copying is complete. The ID-code entry screen will appear. (For details, refer to **Chapter 4** in *Advanced Operation Guide*.)
- 30 **Interrupt key and indicator** — Press this key to use the interrupt mode. The **Interrupt** indicator will light up. (See page 3-14.)
- 31 **Energy Saver key and indicator** — Press this key to turn the low power mode on. In the low power mode, only the **Energy Saver** indicator, **Power** indicator, and main power indicator will light up and the other indicators on the operation panel will go out. Press the same key again to turn the low power mode off. (See page 3-16.)
- 32 **Power key and indicator** — Press this key to turn the sleep mode on. In the sleep mode, only the main power indicator will light up and all other indicators on the operation panel will go out. Press the same key again to turn the sleep mode off. (See page 3-17.)
- 33 **Numeric keys** — Press these keys to set the number of copies or enter a numerical value.
- 34 **Reset key** — Press this key to reset each function and to return the machine to the initial mode[†].

- 35 Stop/Clear key** — Press this key to stop copying or to change the number of copies. Also press this key to return to the previous screen from a setting screen for copier functions or the like.
 - 36 Start key and indicator** — Press this key to start copying. Copying will start immediately if you press this key when the indicator is lit green.
 - 37 Main power indicator** — Lights up when the main power switch is turned on (|).
- † Initial mode (the state that the machine enters at the end of warm-up or when the **Reset** key is pressed)
In the factory default setting, paper of the same size as the original is selected automatically (auto paper selection mode), the copy magnification ratio is set to 100 %, the number of copies to be made is set to 1 and the image quality is set to the **Text + Photo** mode.

- Notes**
- The settings for the initial mode can be changed using the default setting procedure. This includes changing the cassette selected in the initial mode, the image quality mode, and the exposure (Auto exposure mode).


Auto Clear Function

Once a designated amount of time has passed after copying stops (between 10 and 270 seconds), the machine will return to the same settings as those after warm-up. Copies can continually be made using the same settings (copy mode, number of copies, and exposure mode) if the next batch of copying is started before the auto clear function is activated.

Message Display

The message display on this machine indicates the operation status of the machine.

Copier Basic Screen

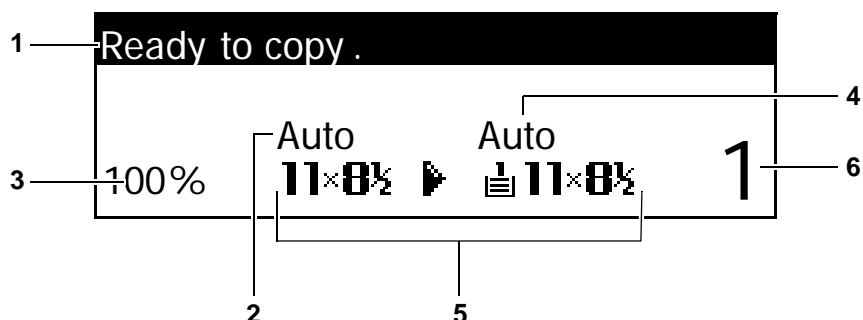

This screen is displayed when the **Copy** key is pressed.

Reference number	Meaning
1	Indicates the current status of the machine and displays the message for required operation.
2	Displayed when the original size is automatically selected.
3	Displays the copy magnification ratio. (See page 3-4.)
4	Displayed in the auto paper selection mode.
5	Displays the original size, paper size, and selected cassette.
6	Displays the number of copies.

Printer Basic Screen




This screen is displayed when the **Print** key is pressed.

Reference number	Meaning
1	Indicates the current status of the machine and displays the message for required operation.
2	Select to switch between online and offline, to print/resume printing, to clear a specific error, and to begin a new page to forcibly print the last page that waits for printing.
3	Select to stop printing in progress.
4	Select to perform network setting. (See Network (TCP/IP) Settings on page 2-12.) Also select this to change various printer functions and settings.

Note The following procedure can also be used for changing the default settings of the printer functions.

- 1 Press the **System Menu/Counter** key.
- 2 Press the ▲ key or the ▼ key to select `Printer default`.
- 3 Press the **Enter** key. The same screen as displayed when `MENU` is selected on the printer basic screen is displayed.

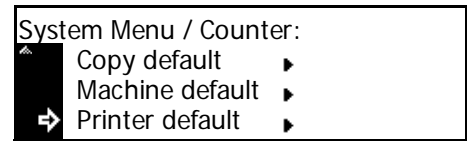


2 Preparations

Loading Paper


Paper can be loaded into either the cassette or the multi-purpose tray. For details on paper that can be used, refer to **Appendix** in **Advanced Operation Guide, Paper**.

Note for Adding Paper

After taking new paper out of its packaging, be sure to fan through the paper a few times to separate the sheets before loading that paper into the cassette or the multi-purpose tray.

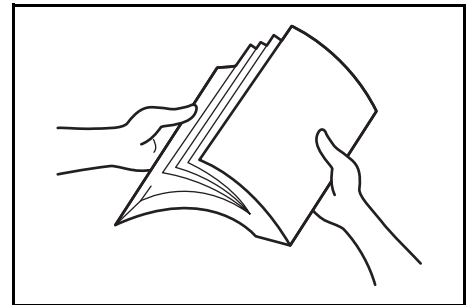


Set the paper in the cassette with the side which faced the top of its packaging facing up.

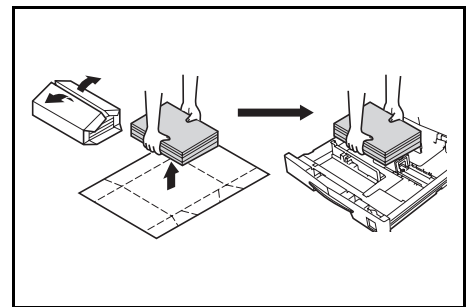

Important!

- When using paper that has been run through a machine before, check it to make sure that all staples and paper clips have been removed. Not doing so may result in poor images or malfunctions.
- Straighten out any creases or curls in the paper before loading it. Failure to straighten out creases and curls may lead to paper jams.
- Leaving paper out of its package under high temperature and high humidity conditions may lead to problems caused by ambient moisture. After loading paper into the cassette, store the remaining paper sealed in the paper storage bag. Also if any paper remains in the multi-purpose tray, store the paper sealed in the paper storage bag. Before leaving the machine in disuse for a prolonged period of time, remove the paper from the cassette and seal it in the paper storage bag to protect it from moisture.

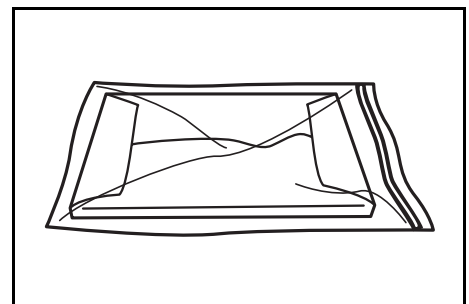


Loading Paper into the Cassette

Standard paper, recycled paper, and colored paper can be loaded into the cassette. Up to 300 sheets of standard paper (80 g/m²) or 100 sheets of thick paper (90 to 105 g/m²) can be set.

Paper sizes that can be loaded are: A3, B4, A4, A4R, B5, B5R, A5R, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 11 × 8 1/2", 8 1/2 × 11" (Letter), 5 1/2 × 8 1/2" (Statement), 8 1/2 × 13" (Oficio II), 8K, and 16K.


Note When loading paper into the cassette, set it with the side to be printed facing up.

- 1 Pull the cassette out toward you as far as it will go.

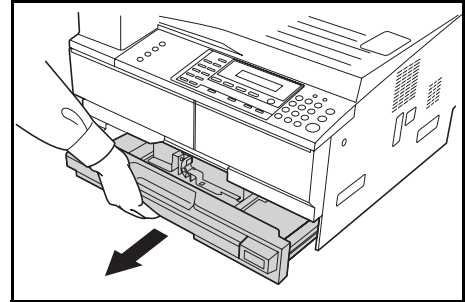


Note Do not pull more than one cassette out at a time.

- 2 Push down on the cassette base plate and secure it.

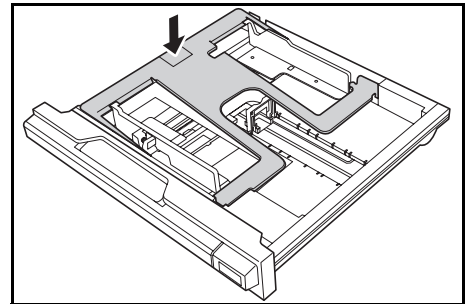


- 3 Grasp the paper width adjusting tab and adjust the width guides to the paper size.

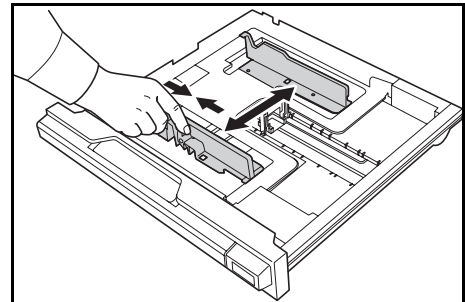

Important! Make sure that the width guides are flush against the paper. If there is space between the guides and the paper, set the width guides again.


Note The paper sizes are marked in the cassette.

- 4 Grasp the paper length adjusting tab and adjust the length guide to the paper size.

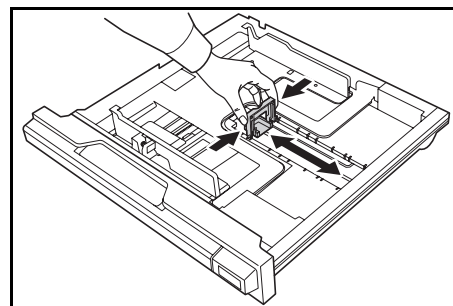


Important!

- Make sure that the length guide is flush against the paper. If there is space between the guide and the paper, set the length guide again.
- When setting 11 × 17" (Ledger) paper, move the paper length guide to the right end and push it down as shown in the illustration.

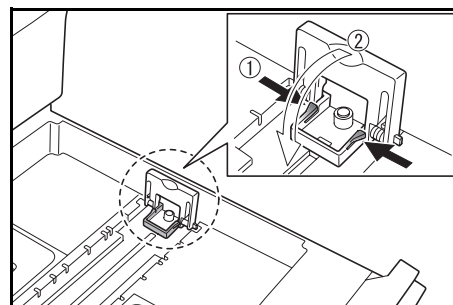


Note The paper sizes are impressed in the cassette.

- 5 Set the paper straight from the upper part.

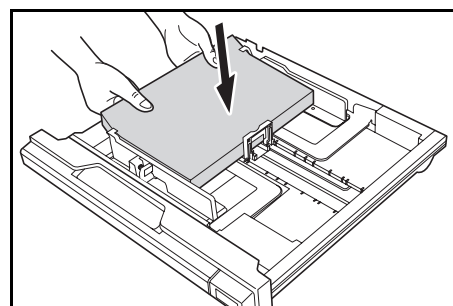


Important!


- Be careful not to bend or crease the paper when inserting it into the cassette. Creases in the paper may lead to paper jams.
- The maximum paper limit indicator **A** is provided on a paper width guide. Make sure that the paper loaded is below the maximum paper limit indicator.
- When loading paper into the cassette, set it with the side which faced the top of its packaging facing up.
- Be sure to adjust the width and length guides to the paper size before loading the paper. Failure to do so may result in paper skewing or jamming.
- If the length and width guides are not flush against the paper, a size that is different from the actual size may be displayed on the message display.
- When the paper has become wrinkled from moisture and cannot be fed, set the paper so that the wrinkled side is toward the length guide.

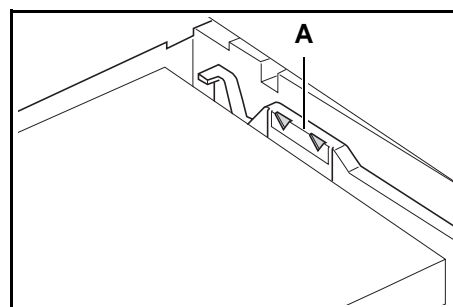

- 6 Affix the label supplied so that the paper size set in the cassette can be identified from the front of the cassette.

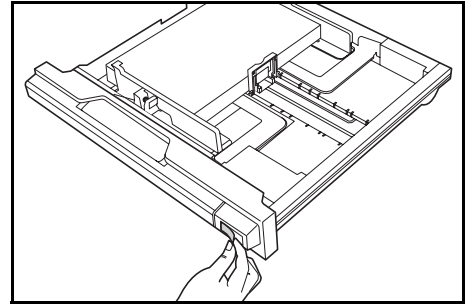

- 7 Gently push in the cassette.

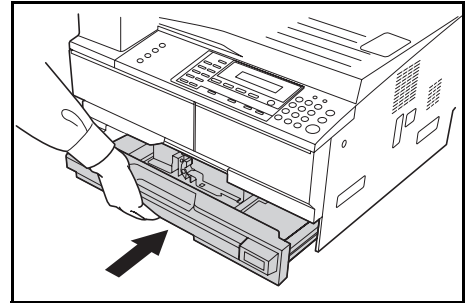

Important! When the machine will not be used for a long period of time, remove the paper from the cassette, put it in a storage bag, and seal the bag in order to protect the paper from moisture.

Setting Paper in the Multi Purpose tray


In addition to standard paper and recycled paper, special paper can also be used. Be sure to set special paper in the multi purpose tray.

Up to 100 sheets of standard (80 g/m²) paper (25 sheets of A3, B4, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 8 1/2 × 13" (Oficio II), or 8K) can be set. The paper sizes that can be used are: A3 to A6R, postcard, Folio, 11 × 17" (Ledger) to 5 1/2 × 8 1/2" (Statement), 8K, 16K and 16KR .



- Color paper: 100 sheets
- Hagaki: 15 sheets
- Thin paper and Thick paper (90 to 105 g/m²): 150 sheets

Important! • Envelope DL, Envelope C5, Envelope #10 (Commercial #10), Monarch, Youkei 4, Youkei 2: 5 sheets.


- 1 Open the multi-purpose tray.

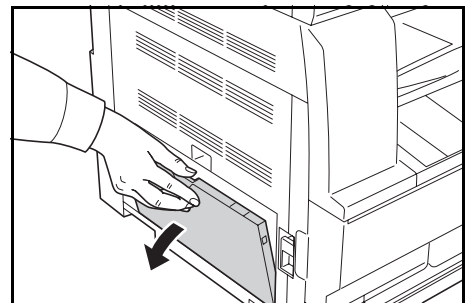


Note Pull out the multipurpose tray extension to match the paper size.

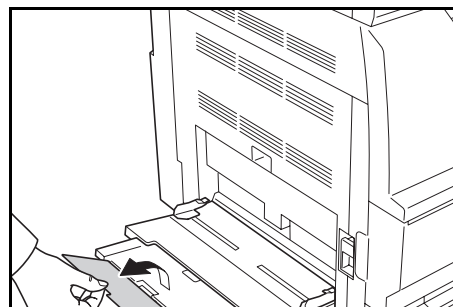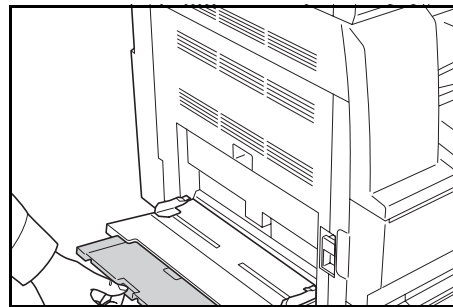

2 Adjust the sliders to the width of the paper to be set.

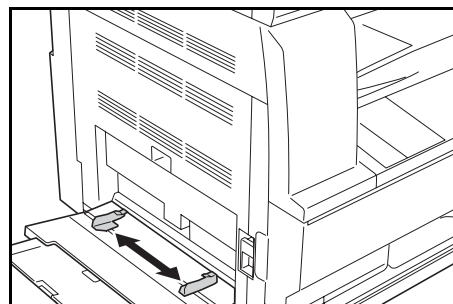

3 Set the paper along the sliders and put it in until it stops.

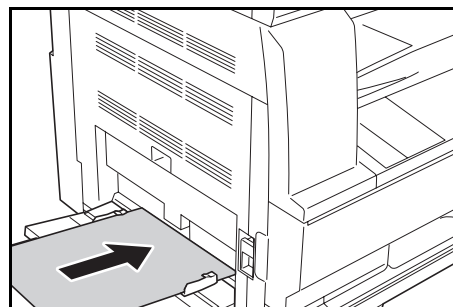

Important!

- Always straighten out postcards and other types of thick paper that are curled before using them. The paper may not be fed depending on the paper quality.
- When loading paper into the multi-purpose tray, set it with the side which faced the top of its packaging facing down. If the front end of the paper is curled, straighten it out before setting it.
- Make sure there are no creases, etc. in the paper. Creases in the paper may lead to paper jams.
- Make sure that the slider is flush against the edge of paper. If not, adjust the slider until it is flush with the edge of paper.



Note When loading paper into the multi-purpose tray, set it with the side to be printed facing down.

Loading postcards or envelopes in the MP tray

- 1 When loading a postcard or envelope, open the paper stopper shown in the figure.

For landscape envelopes, close the flap. Insert the envelope all the way along the width guides, keeping the printing side face-down and the edge with the flap facing towards you.

For portrait envelopes, close the flap. Insert the envelope all the way along the width guides, keeping the printing side face-down and the edge with the flap facing the slot.

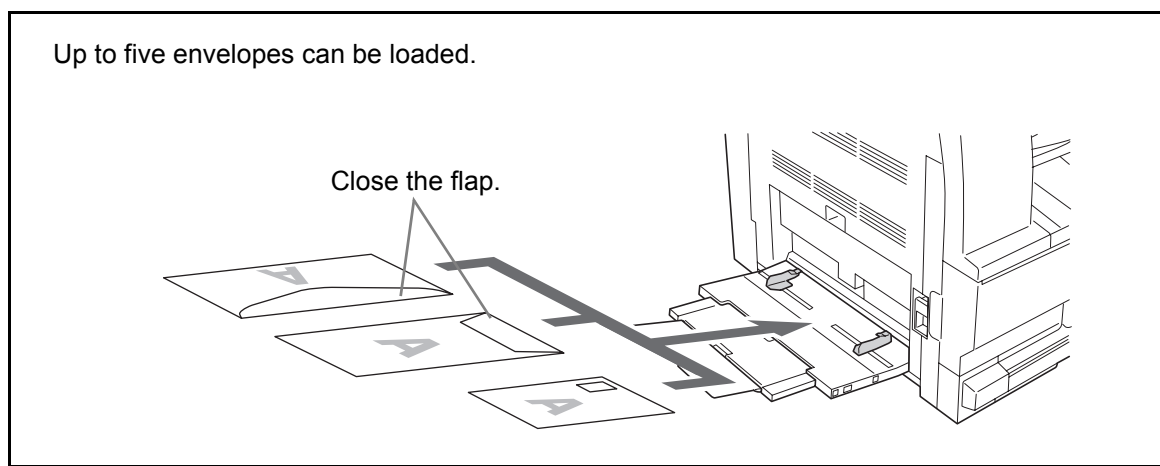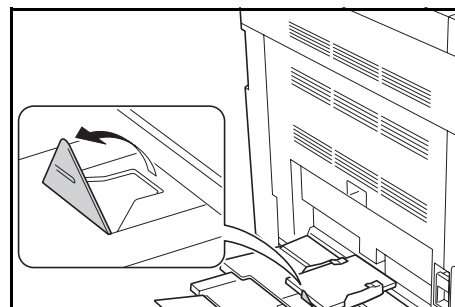

Important!

How to load envelopes (orientation and facing) will differ depending on the type of envelope. Be sure to load it correctly, otherwise printing may be done in the wrong direction or on the wrong face.

Multi PurposeTray Settings

Set the following items for feeding paper from the multi purpose tray.


Paper Size

Set the size of paper to be used in the multi purpose tray. If the paper size is unknown or no particular paper size setting is required, select *Universal Size*.

Selecting a Regular Size

Sizes that can be selected: A3, B4, A4R, A4, B5R, B5, A5R, B6R, A6R, 8 1/2 × 11" (Letter), 11 × 8 1/2", Folio

- 1 Press the **System Menu/Counter** key.
- 2 Press the ▲ key or the ▼ key to select MP Tray setting.

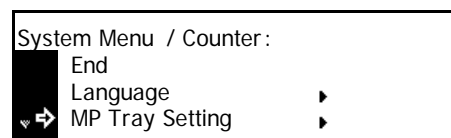

- 3 Press the **Enter** key.
- 4 Press the ▲ key or the ▼ key to select the paper size.




- 5 Press the **Enter** key. The *Bypass Paper type* screen is displayed. Proceed to **Paper Type** described below.


Selecting Regular Size from 'Other Regular Sizes

Sizes that can be selected: 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 8 1/2 × 13" (Oficio II), 5 1/2 × 8 1/2" (Statement), HAGAKI, Executive, ISO B5, Envelope DL, Envelope C5, Envelope C4, Comm. #10, Comm. #9, Comm. #6-3/4, Monarch, OufukuHagaki, YOUKEI 2, YOUKEI 4, 8K, 16KR, 16K


- 1 Press the **System Menu/Counter** key.
- 2 Press the ▲ key or the ▼ key to select MP Tray setting.

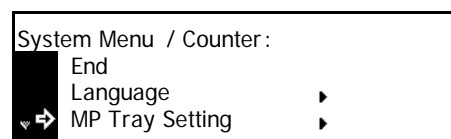

- 3 Press the **Enter** key.
- 4 Press the ▲ key or the ▼ key to select Other Regular Size.

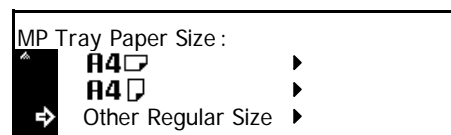


- 5 Press the **Enter** key.
- 6 Press the ▲ key or the ▼ key to select the paper size.

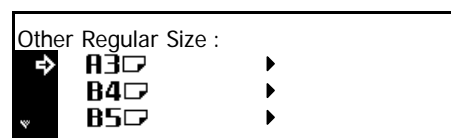


- Press the **Enter** key. The *Bypass Paper type* screen is displayed. Proceed to **Paper Type** described below.

Entering a Paper Size


- Press the **System Menu/Counter** key.
- Press the **▲** key or the **▼** key to select *MP Tray* setting.

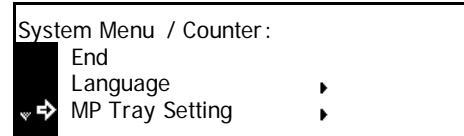


- Press the **Enter** key.
- Press the **▲** key or the **▼** key to select *Input Size*.

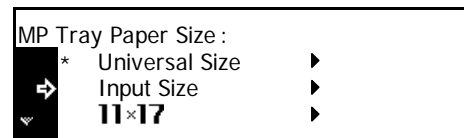

- Press the **Enter** key.
- Press the **<** key or the **>** key to set the vertical size. You can set the vertical size to 98 to 297 mm in 1 mm increments.

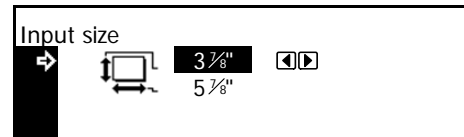

- Press the **▼** key to select the horizontal size.
- Press the **<** key or the **>** key to set the horizontal size. You can set the horizontal size to 148 to 432 mm in 1 mm increments.

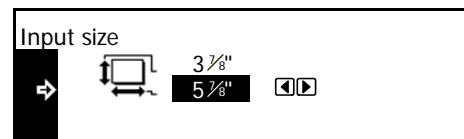


- Press the **Enter** key. The *MP Tray Paper type* screen is displayed. Proceed to **Paper Type** described below.

Paper Type

To set the paper type in the multi purpose tray, continue the procedure from **Paper Size** setting.

Paper types that can be selected: Plain, Transparency, Preprinted, Labels, Bond, Recycled, Vellum, Rough, Letterhead, Color [Colour], Prepunched, Envelope, Cardstock, Thick paper, High quality, Custom 1 (to 8)

- Press the **▲** key or the **▼** key to select the paper type.

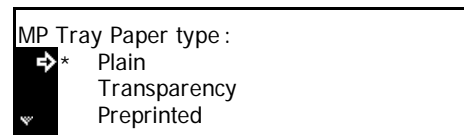

- Press the **Enter** key. The message display returns to the copier basic screen.


Connecting Cables

This machine can be connected either to a network or directly to a single computer. This section describes the procedures to make both types of connection.


Connecting the Network Cable

To connect this machine to a network, use an Ethernet cable (10Base-T or 100Base-TX).

- 1 Open the main power switch cover located on the right side of the machine, turn the main power switch off (O), and remove the power cord from the outlet.

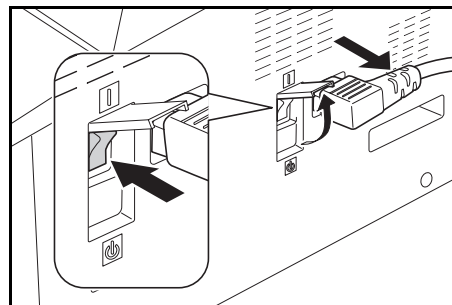

- 2 Connect the network cable to the network interface connector at the right side of the machine.

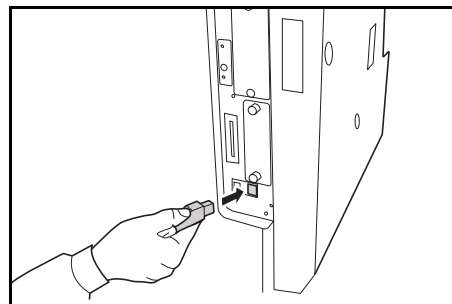


- 3 Connect the other end of the network cable to your network device (hub).
- 4 Make network settings. (See page 2-12.)

Connecting the USB Cable

To connect the machine directly to your computer, use a USB cable.

Important! Be sure to turn the main power switch of this machine off before connecting the printer cable.

- 1 Open the main power switch cover located on the right side of the machine, turn the main power switch off (O), and remove the power cord from the outlet. Turn the power of your computer off.
- 2 Connect the printer cable to the USB interface connector located at the right side of the machine.

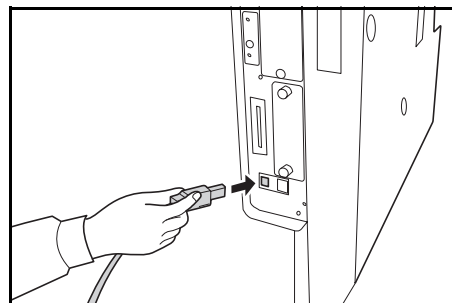

- 3 Connect the other end of the cable to the USB interface connector on your computer.

Connecting the Power Cord


Connect the power cord to this machine.

- 1 Connect the power cord to the power cord connector located at the right side of the machine.
- 2 Connect the other end of the power cord to a power outlet.

Turning Power On

To turn machine power on:

- 1 Open the main power switch cover located on the right side of the machine and turn the main power switch on (I). The machine starts to warm up.

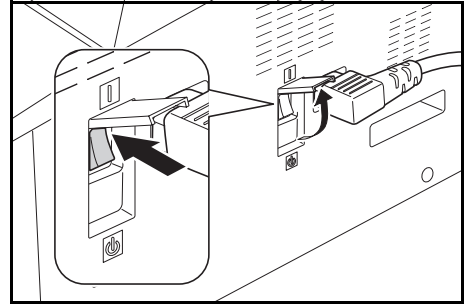

- 2 Once warm-up is completed, the **Start** indicator lights up green.

Network (TCP/IP) Settings

Register the IP address of this machine.

- Notes**
- To obtain the IP address to enter, check with your network administrator before performing this setting.
 - Before entering the IP address by following the instructions below, be sure to turn the DHCP setting OFF and the TCP/IP setting On.


1 Press the **Print** key.

2 Press the ▲ key or the ▼ key to select MENU.




3 Press the **Enter** key.

4 Press the ▲ key or the ▼ key to select Interface.

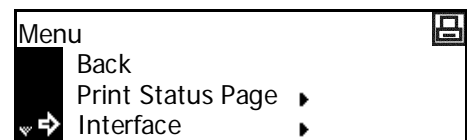


5 Press the **Enter** key.

6 Press the ▲ key or the ▼ key to select Network.

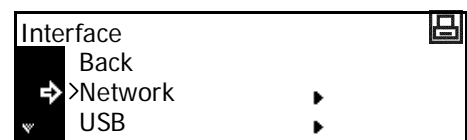

7 Press the **Enter** key.

8 Press the ▲ key or the ▼ key to select TCP/IP.

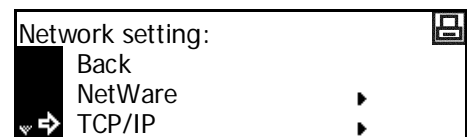


9 Press the **Enter** key.

10 Press the ▲ key or the ▼ key to select Change #.




11 Press the **Enter** key.

12 Press the ▲ key or the ▼ key to select IP Address.

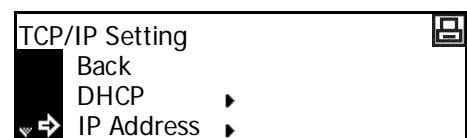


13 Press the **Enter** key.

14 Use the numeric keys to input the IP address. Enter the first block of 3 digits of the address in the highlighted area.

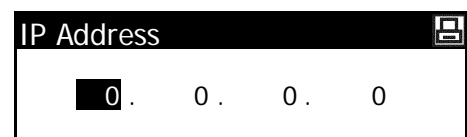


- 15 Press the **#** key.
- 16 Enter the next block of 3 digits of the address in the highlighted area.
- 17 Continue the same procedure for the other 2 blocks.
- 18 Press the **Enter** key.
Next, set the subnet mask.

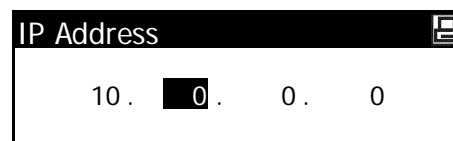


Registering Subnet Mask

To register the subnet mask, continue the procedure from step 18 above.

- 1 Press the **▲** key or the **▼** key to select **Subnet Mask**.

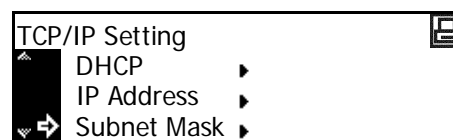

- 2 Press the **Enter** key.
- 3 Use the same procedure as steps 14 to 17 of IP address setting to input the address.

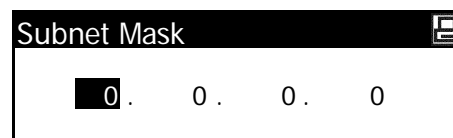


- 4 Press the **Enter** key.
Next, set the default gateway.


Registering Default Gateway

To register the default gateway, continue the procedure from step 4 above.

- 1 Press the **▲** key or the **▼** key to select **Gateway**.

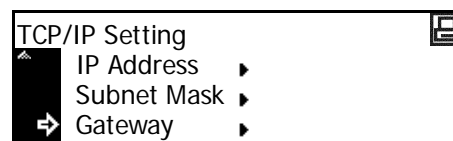

- 2 Press the **Enter** key.
- 3 Use the same procedure as steps 14 to 17 of IP address setting to input the address.

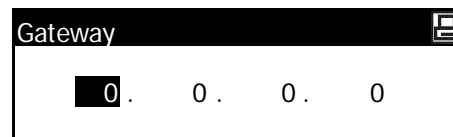


- 4 Press the **Enter** key.
- 5 When you finish making all of the network setting, press the **Reset** key. The message display returns to the printer basic screen.



Setting Date and Time

Set the current date and time, time difference from the Greenwich Mean Time (GMT), and summer time.


- 1 Press the **System Menu/Counter** key.
- 2 Press the ▲ key or the ▼ key to select **Machine default**.

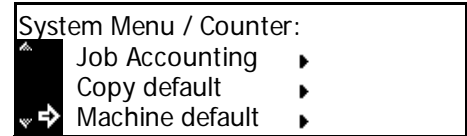

- 3 Press the **Enter** key.
- 4 Use the numeric keys to input the four-digit management code. The management code factory default setting is '1800' for the 18-ppm model; and '2200' for the 22-ppm model. The Machine default screen is displayed.

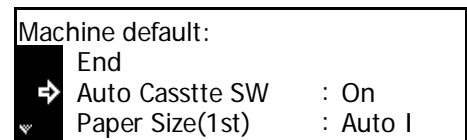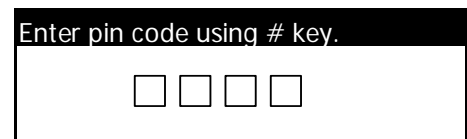


- 5 Press the ▲ key or the ▼ key to select **Date/Time**.
- 6 Press the **Enter** key.

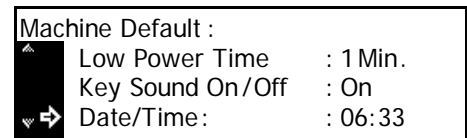

Setting Time Zone


- 7 Press the ▲ key or the ▼ key to select **Time Zone**.

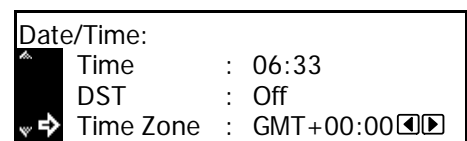

- 8 Press the < key or the > key to turn Daylight Saving Time **On** or **Off**.
Next, set the time of the of day.

Setting Time of Day

- 9 Press the ▲ key or the ▼ key to select **Time**.

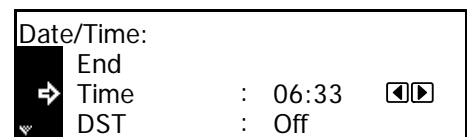

- 10 Press the < key or the > key to set the current time.
Next, set the daylight saving time if observed.

Setting Daylight Saving Time [DST]

- 11 Press the ▲ key or the ▼ key to select **DST**.

Date/Time:	
End	
Time	: 06:33
DST	: Off

- 12 Press the < key or the > key to turn Daylight Saving Time **On** or **Off**.
Next, set the date.

Setting Date

- 13 Press the ▲ key or the ▼ key to select **Year**.

Date/Time:	
DST	: Off
Time Zone	: GMT+00:00
Year	: 7

- 14 Press the < key or the > key to set the current year.

- 15 Press the ▲ key or the ▼ key to select **Month**.

Date/Time:	
Time Zone	: GMT+00:00
Year	: 7
Month	: 11

- 16 Press the < key or the > key to set the current month.

- 17 Press the ▲ key or the ▼ key to select **Day**.

Date/Time:	
Year	: 7
Month	: 11
Day	: 28

- 18 Press the < key or the > key to set the current day.

- 19 After all the setting is complete, press the ▲ key or the ▼ key to select **End**.

Date/Time:	
End	
Time	: 06:33
DST	: Off

- 20 Press the **Enter** key.

- 21 Press the **Reset** key. The message display returns to the copier basic screen.

User Interface language

You can select the language that is used in the message display. The following languages are available: English, French (Français), German (Deutsch), Italian (Italiano), Nederlands (Nederlands), Spanish (Español), , Russian (Русский), and Português (Português).


3 Basic Operation

This chapter explains the following operations. For other functions, refer to the **Advanced Operation Guide**.


- Basic Copying Procedure
- Zoom Copying
- Duplex Copying
- Collated Copying
- Combined Copying
- Interrupt Mode
- Low Power Mode
- Sleep Mode
- Basic Printing Procedure

Basic Copying Procedure

- 1 Turn the main power switch on (|). At the end of warm-up, the **Start** indicator lights up green.

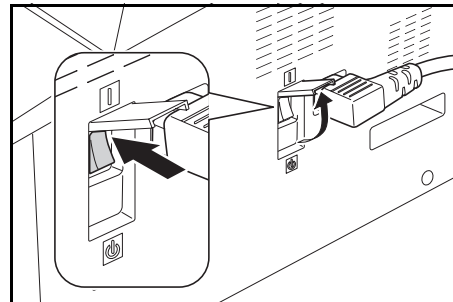


- 2 Set the original onto the platen. Be sure to set the original by aligning it with the left rear corner of the platen along the original size indicator plates.

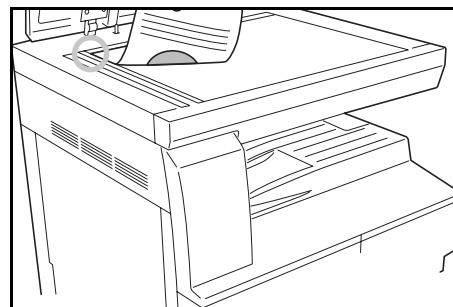


Note For the method of setting originals in the optional document processor, see **Setting Originals in the Document Processor** on page 4-2.

- 3 Select the paper size. If **Auto** is displayed on the message display, the paper of the same size as the original is automatically selected.

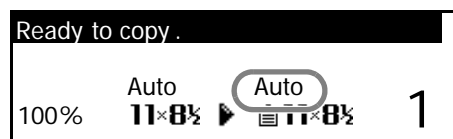

To change the paper size, press the **Paper Select** key to select the desired paper source.

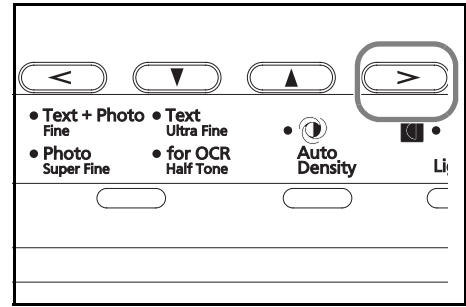

4 Press the image quality mode select key to light up the desired image quality mode indicator.

See the table below for image quality to choose.


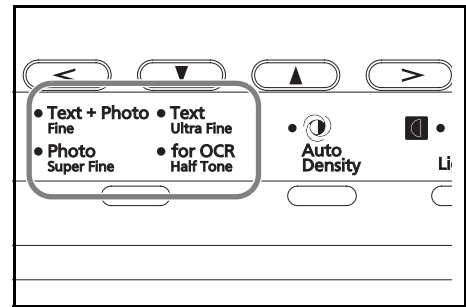


Image quality mode	Description
Text + Photo	Select to copy originals that contain a mixture of both text and photographs.
Text	Select to copy originals that contain large amounts of text, such as documents, etc.
Photo	Select to copy originals that contain photographs.


5 Adjust the density either manually (manual density mode) or automatically (auto density mode) with automatic detection of the contrast of the original.

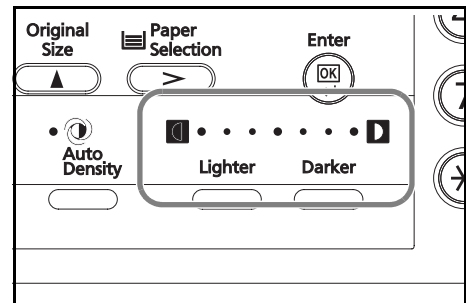

6 Press the numeric keys to set the desired number of copies (Up to 999).

7 Press the Start key to start copying.

8 Finished copies are delivered into the output tray.

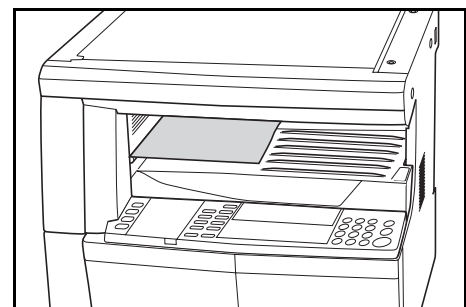


Note The capacity of the output tray is 250 sheets of standard paper (80 g/m²). The capacity varies depending of the paper that is used.

If the optional fax kit is not installed:

 **Caution**

If the machine will not be used for a short period of time (overnight, etc.), turn the main power switch off (○). If it will not be used for an extended period of time (vacations, etc.), remove the power plug from the outlet for safety purposes during the time the machine is not in use.

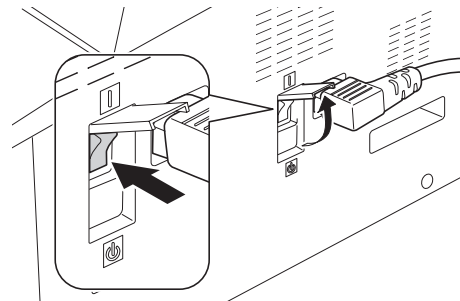

If the optional fax kit is installed:

When the main power switch is turned off or the power plug is removed from the outlet, fax transmission and reception cannot be performed.

Zoom Copying


Copied images can be reduced or enlarged by zooming. The following modes are available for zoom copying.

Mode	Description
Auto zoom ratio selection mode	Original images are reduced or enlarged according to the selected paper size.
Zoom mode	The zoom ratio can be changed from 25 % to 400 % in 1 % increments.
Preset zoom mode	A preset zoom ratio can be set to reduce or enlarge original images: 100%, Auto, 400% (Max.), 200 % (A5 → A3), 141 % (A4 → A3, A5→A4), 127 % (Folio → A3), 106 % (11 × 15" → A3), 90 % (Folio → A4), 75 % (11 × 15" → A4), 70 % (A3 → A4, A4 → A5), 50 %, 25% (Min.)

Note When the magnification ratio is larger than 201%, the images will be rotated 90° counter-clockwise prior to copying.

Auto Zoom Ratio Selection Mode

The original image is reduced or enlarged according to the selected paper size.

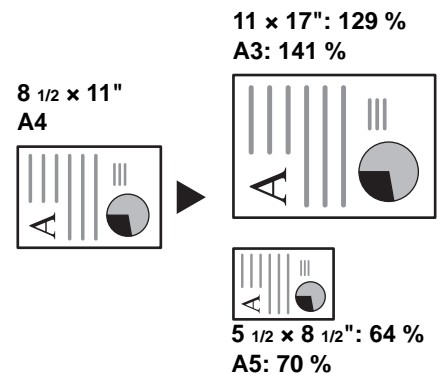


Note You can set a default setting so that the auto zoom ratio selection mode is selected when you select a cassette.


- 1 Set the original.
- 2 Press the **Auto%/100%** key. Auto % is displayed on the message display.
- 3 Press the **Paper Select** key to select the copy paper. The zoom ratio is displayed on the message display.
- 4 Press the **Start** key. Copying starts.

Zoom Mode

With this mode, the zoom ratio can be set between 25 % and 400 % in 1 % increments.

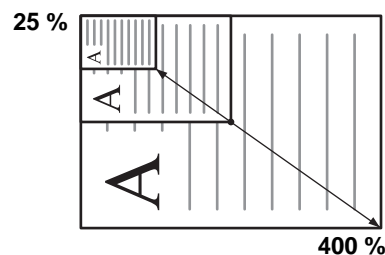


- 1 Set the original.
- 2 Press the **Zoom** key.
- 3 Use the numeric keys to input the zoom ratio. The zoom ratio is displayed on the message display.
(In this example '118%' is entered)
- 4 Press the **Enter** key.
- 5 Press the **Start** key. Copying starts.

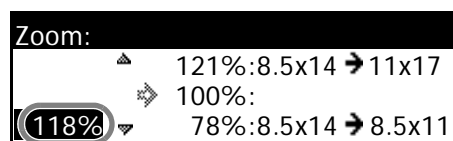

Preset Zoom Mode


With this mode, the zoom ratio can be set to one of the preset ratios.

- 1 Set the original.
- 2 Press the **Zoom** key.
- 3 Press the ▲ key or the ▼ key to select the desired zoom ratio.
- 4 Press the **Enter** key. The zoom ratio is displayed on the message display.
- 5 Press the **Start** key. Copying starts.

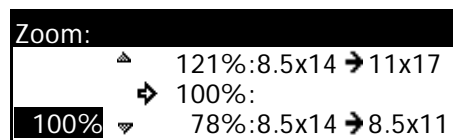

Duplex Copying


Duplex (two-sided) copies can be made from a variety of originals including double-page spread or two-sided originals.

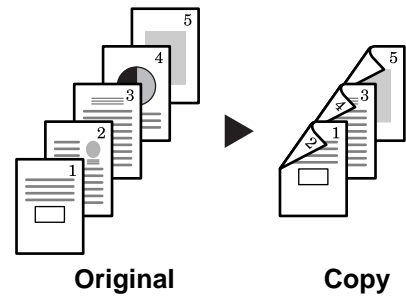

Note The optional duplex unit must be installed.

The following modes are available for duplex copying:


Mode	Description
1-sided->2-sided (2-sided copying from 1-sided originals)	One-sided originals are copied onto the front and back sides of the copy paper. If the number of originals is odd, the back side of the last copy page is blank.

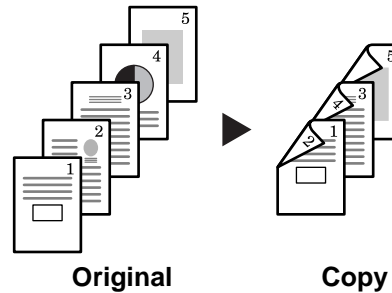


Note

In the 1-sided to 2-sided mode, select the following setting.

- Binding at left/right of originals → Binding at left of copies: The images for the back side are copied without rotation...**A**
- Binding at left/right of originals → Binding at top of copies: The images for the back side are rotated 180 degrees and copied. Finished copies can be bound at the top so that double-page spread pages are copied in the same orientation...**B**

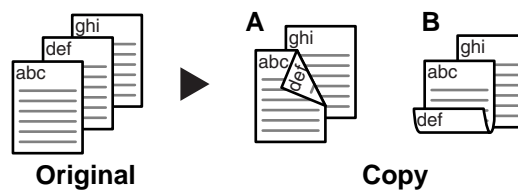

Mode	Description
2 sided->2 sided (2-sided copying from 2-sided originals)	Front and back sides of originals are copied in the same way onto both sides of copy paper.

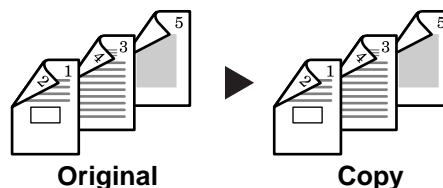

Note

The paper sizes that can be used are A3 to A5R, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 8 1/2 × 11" (Letter), 11 × 8 1/2", 5 1/2 × 8 1/2" (Statement), 8 1/2 × 13" (Oficio II), 8K, 16K, and 16KR.


Book->2-sided (2-sided copying from double-page spread originals)	A double-page spread original of magazines, books, etc. can be copied onto both sides of copy paper by pressing the Start key one time.
---	--




Note

The original sizes that can be used are A3, B4, A4R, B5R, A5R, 11 × 17" (Ledger), 8 1/2 × 11" (Letter), and 8K. The paper sizes are limited to 11 × 8 1/2" and 16K in the inch specifications and A4, B5, and 16K in the metric specifications. The paper size can be changed and the zoom ratio adjusted to fit the size of the paper.

2 sided->1 sided (Split copying from double-page spread originals)	Each page of 2-sided originals is copied separately.
---	--

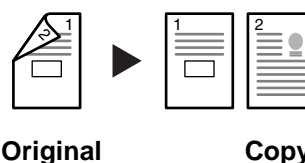


Book->1-sided (Split copying from 2-sided originals)	Each page of double-page spread originals of magazines, books, etc. is copied separately.
---	---

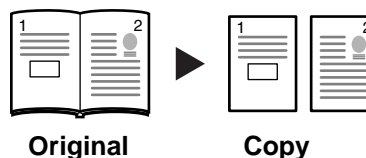

Note


The original sizes that can be used are A3, B4, A4R, B5R, A5R, 11 × 17" (Ledger), 8 1/2 × 11" (Letter), and 8K. The paper sizes are limited to 11 × 8 1/2" and 16K in the inch specifications and A4, B5, and 16K in the metric specifications. The paper size can be changed and the zoom ratio adjusted to fit the size of the paper.

- 1 Set the original.
- 2 Press the **Duplex** key.
- 3 Press the ▲ key or the ▼ key to select the desired duplex copy mode.

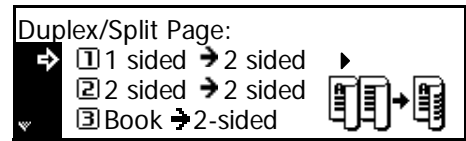

- 4 Press the **Enter** key.
If you have selected 1 sided-→2 sided, proceed to the next step.
If you have selected 2 sided-→2 sided or Book-→2-sided, proceed to step 7.


- 5 Press the ▲ key or the ▼ key to select the desired finished stitch side.

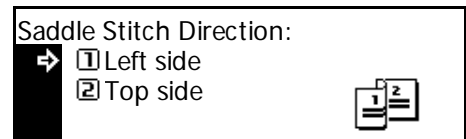

- 6 Press the **Enter** key.
- 7 Press the **Start** key. Scanning of the original starts.
If the originals have been set in the optional document processor, copying starts automatically.
If the original has been set on the platen, a message prompting replacement of the original is displayed. In this case, proceed to the next step.
- 8 Replace the original and press the **Start** key. Scanning of the original starts.
- 9 If no original remains, press the **Enter** key. Copying starts.

Collated Copying

A number of collated copy sets can be produced.

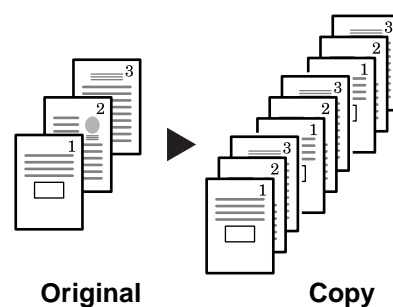


Note If the optional document processor is installed, you can select whether or not to turn on the sort mode at a default setting.

- 1** Set the original.
- 2** Press the **Collate** key.
- 3** Input the number of copies and press the **Start** key. Scanning of the original starts.
If the originals have been set in the optional document processor, copying starts automatically.
If the original has been set on the platen, a message prompting replacement of the original is displayed. In this case, proceed to the next step.
- 4** Replace the original and press the **Start** key. Scanning of the original starts.
- 5** If no original remains, press the **Enter** key. Copying starts.

Combined Copying


Two or four originals are reduced and copied onto a single sheet. Also, borderlines of each original can be marked with solid or dotted lines.

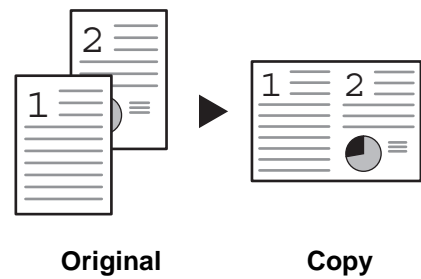



Note Both the original size and the copy paper size must be standard size.

The following modes are available for combine copying.

Mode	Description
	Use this mode to copy two originals onto one sheet.

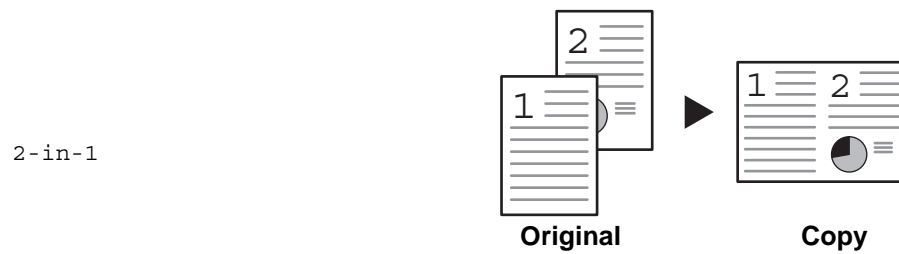



Use this mode to copy four originals onto one sheet.

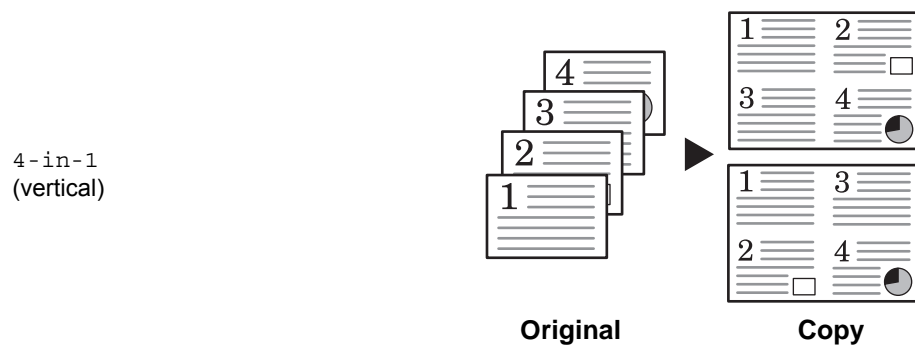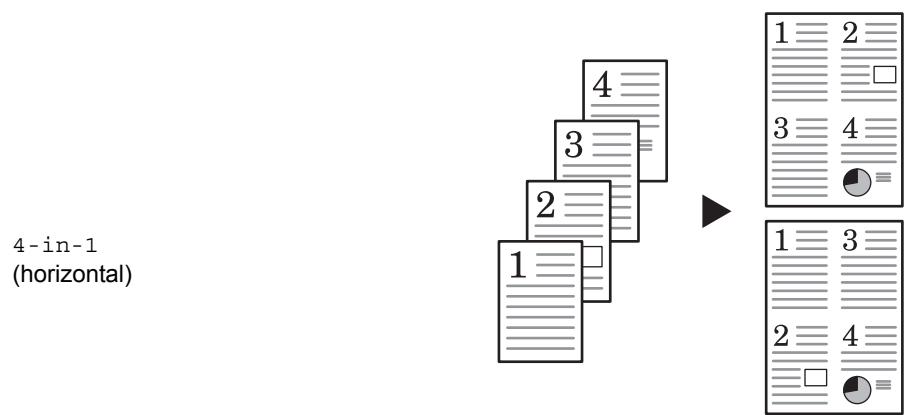



2-in-1

The orientations of the originals and the finished copy are shown below.

Using the platen:

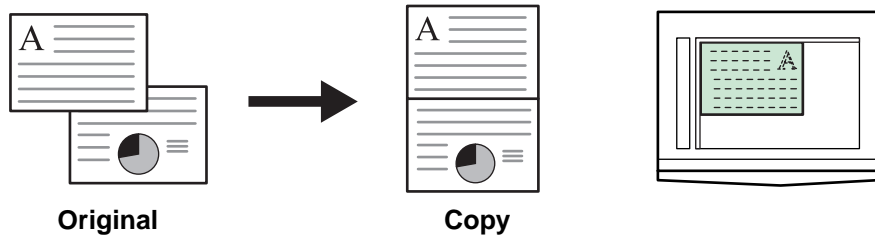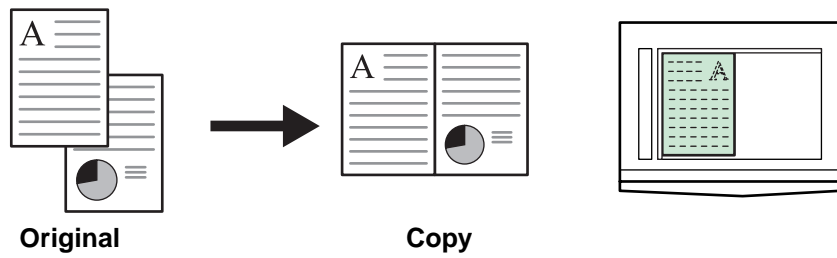



Using the document processor:

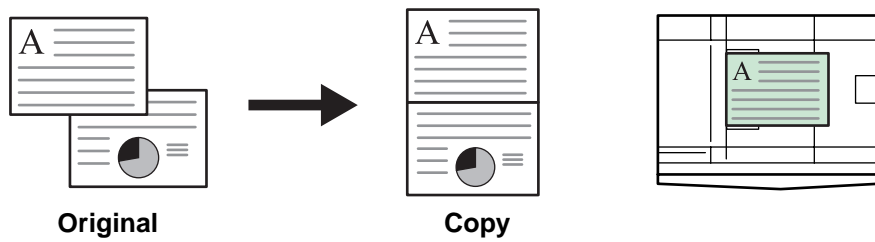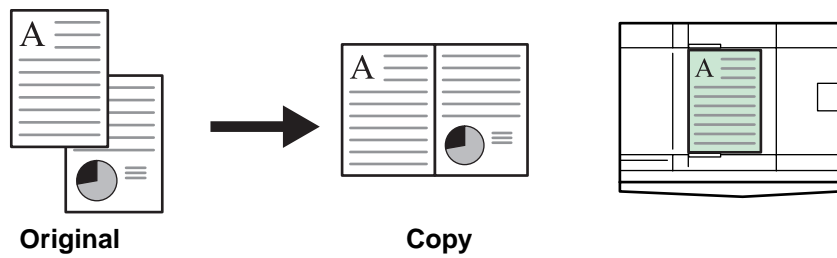



4-in-1 (horizontal)

The orientations of the originals and the finished copy are shown below.

Using the platen:

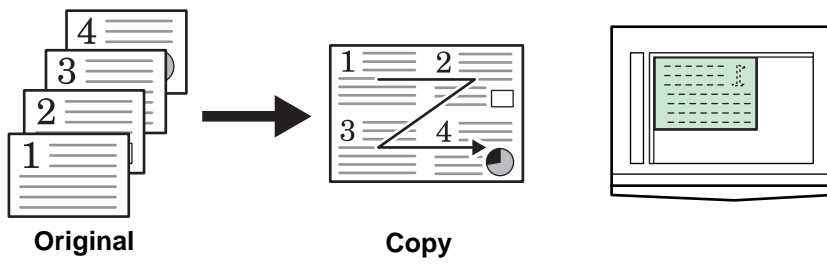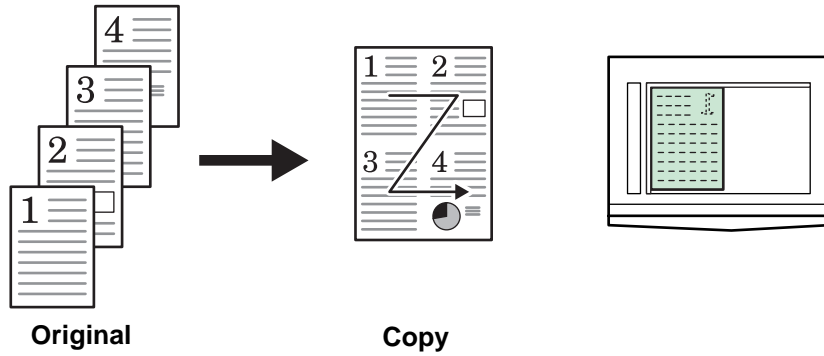



Using the document processor:

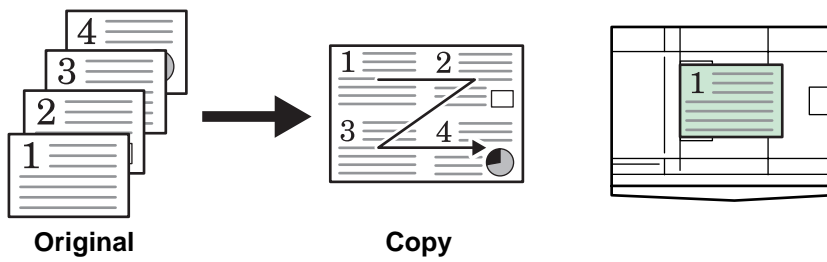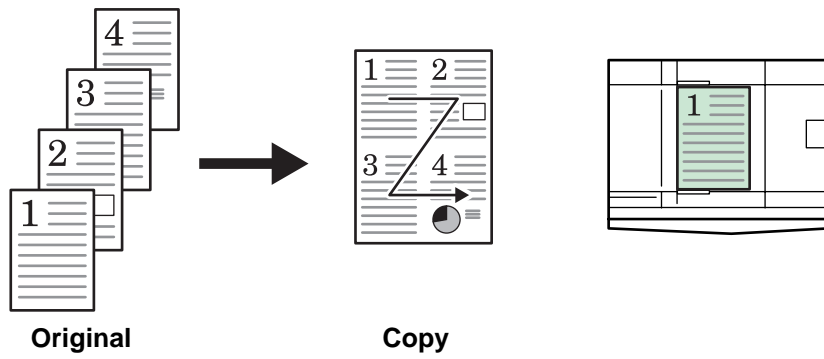



4-in-1 (vertical)

The orientations of the originals and the finished copy are shown below.

Using the platen:

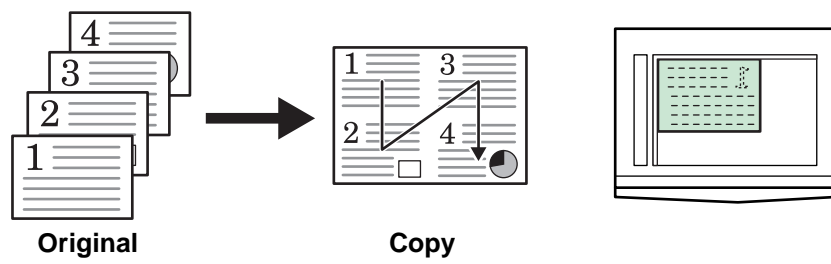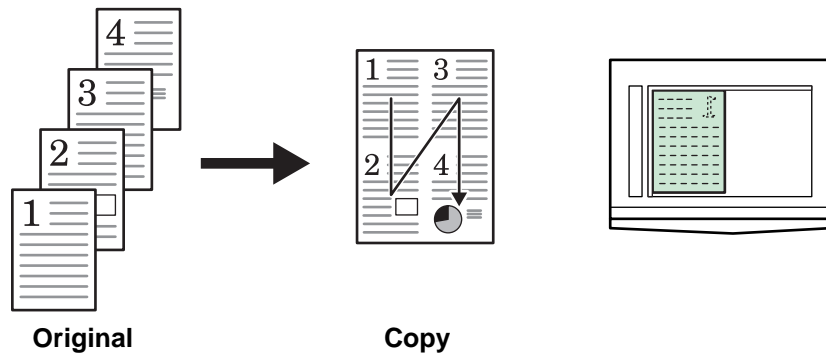


Using the document processor:

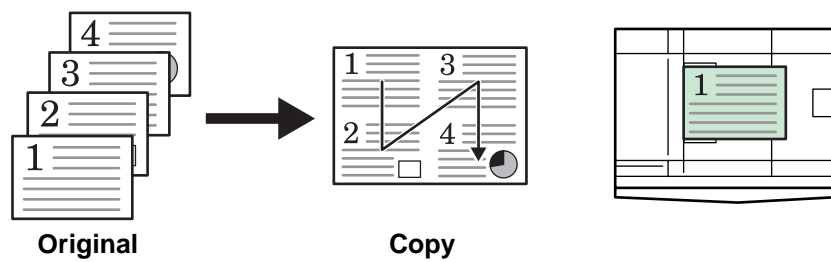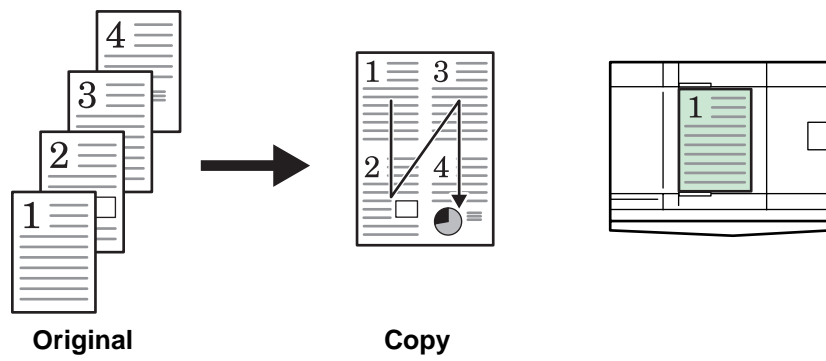

Interrupt Mode

The interrupt mode temporarily stops the output of copy jobs, etc. and allows the output of urgent copy-, print- or received fax data. After the urgent interrupt job is finished, the interrupted job will be automatically resumed.

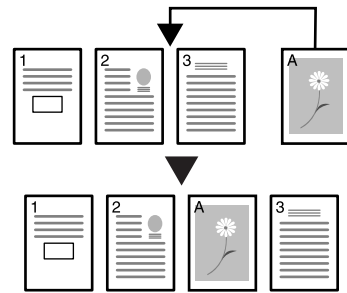


The following modes are available for the interrupt mode:

Mode	Description
Interrupt copy	<ul style="list-style-type: none"> This mode can be used to stop copying and to make a copy of a different original at different settings. After the interrupt copy has been produced, the interrupted copying can be resumed at the same settings in effect prior to the interruption. This mode can also be used to stop output of a job and to make a copy of another job. After the interrupt copy has been produced, the interrupted job is resumed.
Priority output	<p>This mode can be used to interrupt output of a job and to output print data or received fax data with priority. After priority output is complete, the interrupted job is resumed.</p> <p>Note To use the fax functions, the optional fax kit must be installed.</p>

Interrupting Copying

- 1 During a copy job press the **Interrupt** key. Interrupt mode is displayed.

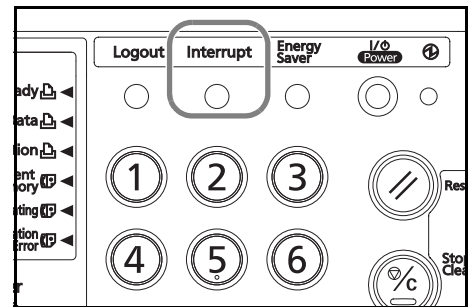


- 2 Remove the originals of the ongoing copy job.
- 3 Set the original for interrupt copying and perform copying.
- 4 After the interrupt copying is complete, press the **Interrupt** key. The settings for the interrupted job are restored.
- 5 Replace the original with the originals that have been stored. Press the **Start** key to resume copying.

Interrupting Printing

- 1 Press the **Interrupt** key during a print job. `Select Interrupt mode` is displayed.

Note If the machine has neither print data nor received fax data, `Interrupt mode OK Interrupt mode` is displayed. Proceed to step 4.

- 2 The example at the right shows the machine has both printing data (2) and received FAX data (3) queued inside. Press the ▲ key or the ▼ key to select from the following options:

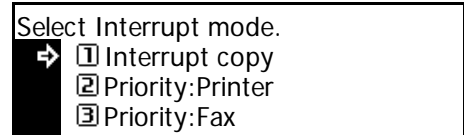

- To make copying by interrupting the ongoing print job or FAX print job, select (1). Proceed as the previous section to perform copying.
 - To let the machine complete printing a print job, select (2).
 - To let the machine complete printing a (received) FAX job, select (3).
 - `Priority:Printer` is displayed when the machine has print data.
 - `Priority:Fax` is displayed when the machine has received fax data.
- 3 Press the **Enter** key.
 - 4 When the ongoing printing has been completed, set the original for interrupt copying and perform copying.
 - 5 After the copy job is done, press the **Interrupt** key. The subsequent print job resumes.

Low Power Mode

Pressing the **Energy Saver** key puts the machine into a resting state (low power mode) even when the main power switch is on. Only the **Energy Saver** indicator, **Power** indicator, and main power indicator will light up and the other indicators will go out on the operation panel.

Press the **Energy Saver** key again to resume copying operations. The recovery time before copies can be made is 10 seconds.

Note If the machine detects print data or received fax data in the low power mode, the machine will automatically recover and output of data will start.

This machine is equipped with the auto low power function that automatically puts this machine into the lower power mode if no operation has been performed on the machine for a preset period of time. The factory default setting time is one minutes (1 to 120 minutes (in 1 minute increments)).

Sleep Mode

Pressing the **Power** key puts the machine into a resting state (sleep mode) even when the main power switch is on. Only the main power indicator lights up and all other indicators are turned off on the operation panel. Consumed power in this mode is still less than in the low power mode.

Press the **Power** key again to resume copying operations. The recovery time before copies can be made is 17.2 seconds.

Note If the machine detects print data or received fax data in the sleep mode, the machine will automatically recover and output of data will start.

This machine is equipped with the auto sleep function that automatically puts this machine into the sleep mode if no operation has been performed on the machine for a preset period of time. The factory default setting time is one minutes (1 to 120 minutes).

Copiers and printers are generally in a standby mode more than they are in actual operation, so power consumption in the standby mode occupies a large part of overall consumption. Automatically putting the machine in a resting state reduces unnecessary power consumption in the standby mode, resulting in a lower electricity bill.

Basic Printing Procedure

Make sure that the machine's printer or network cable and the power cord are properly connected before using this machine as a printer.

Installing the Printer Driver


To print a document from a Windows software, you must first install the printer driver software for the machine, which is contained in the CD-ROM supplied. For information on how to install the printer driver software, refer to the ***KX Printer Driver Operation Guide*** in the CD-ROM.

Printing from Application Software

The steps required to print a document created with an application are explained below. Here, you will execute printing from Microsoft Word as an example.

- 1 Load paper to be used into the cassette of the machine.
- 2 From the application's **File** menu, select **Print**. The **Print** dialog box is displayed.
- 3 From the drop-down list of **Name**, select the printer to use.
- 4 Input the number of copies to print in the **Number of copies** combo box. Up to 999 copies can be specified.

For Microsoft Word, we recommend that you click the **Options** button and specify **Use printer settings** from the **Default tray** drop-down list.

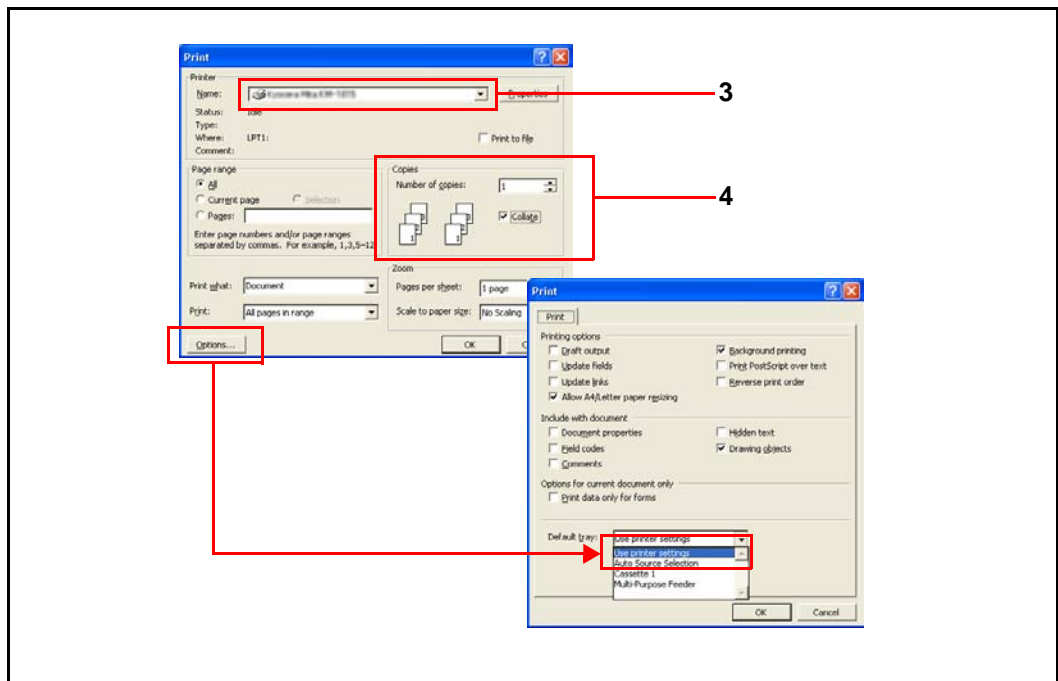

- 5 To start printing, click the **OK** button.

4 Optional Equipment

(Not in all countries)

The following options are available for this machine.

- Document Processor
- Paper Feeder
- Duplex Unit
- Finisher
- Job Separator
- Key Counter
- Fax Kit
- Network Scanner Kit
- Network Interface Card (IB-23)
- Additional Memory

Document Processor

This equipment automatically feeds and scans multiple-sheet originals one by one. Two-sided originals are automatically turned over so that both sides can be scanned.

Acceptable Originals

- Sheet originals only
- Paper weight
One-sided originals: 45 g/m² to 160 g/m²
Two-sided originals: 50 g/m² to 120 g/m²
- Sizes: A3 to A5R, Folio, 11 × 17" (Ledger) to 5 1/2 × 8 1/2" (Statement)
- Number of originals: 50 sheets (50 g/m² to 80 g/m²)
(30 sheets for auto selection mode)

Notes on Use

Be sure not to use the following as originals in the document processor. In addition, originals with punched holes or perforations should be set so that the edge of the paper with the holes or perforations is facing away from the direction of insertion into the document processor.


- Transparencies
- Carbon paper, crumpled originals or originals with strong folds, and soft originals such as vinyl
- Originals which are not rectangular, wet originals, and originals with adhesive tape or glue
- Originals with clips or staples (To use such originals, remove the clips or staples and straighten any crumples or folds before using them.)
- Clippings or originals with very slippery surfaces
- Originals with wet correction fluid
- Originals with folds (If you must use such originals, smooth out the folded portions before setting them in the document processor.)
- Curled originals (If you must use such originals, smooth out the curled portions before setting them in the document processor.)

Important!

When moving this machine, be sure to close the document processor.


Names of Parts

- 1 **Original table** — Set originals to be copied on this table.
- 2 **Original insert guides** — Adjust these guides to the width of the originals to be copied.
- 3 **Left cover** — Open this cover if an original jam occurs.
- 4 **Original eject table** — Originals that have been copied are ejected and stored here.
- 5 **Ejection extension** — Open this extension when using large originals such as A3, B4, 11 × 17" (Ledger), and 8 1/2 × 14" (Legal).
- 6 **Document processor release grip** — Hold this grip to open or close the document processor.
- 7 **Ejection tray** — In the case of two-sided originals, the originals will be temporarily ejected here.

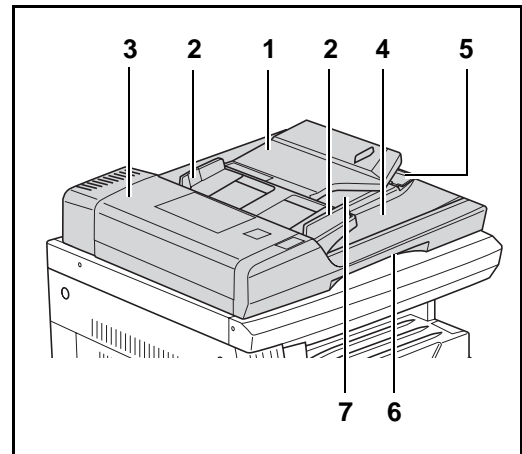


Setting Originals in the Document Processor


- 1 Adjust the original insert guides to the width of original to be copied.

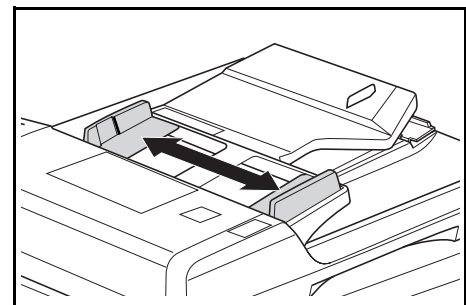


- Notes**
- Before setting originals, make sure that there are no originals remaining on the original eject table. Originals left on the eject table may cause other originals to jam.
 - When setting multiple originals at one time, be sure to use originals of the same size. It is, however, possible to use different size originals of the same width (for example, 11 × 17" (Ledger) and 11 × 8 1/2" or A4 and A3 at the same time in the auto selection mode. (Refer to **Chapter 1** in **Advanced Operation Guide, Auto Selection Mode.**)

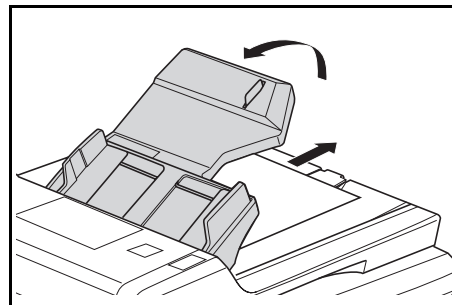


- 2** Arrange the originals in order and set them face up (front side up for 2-sided originals) on the original table.

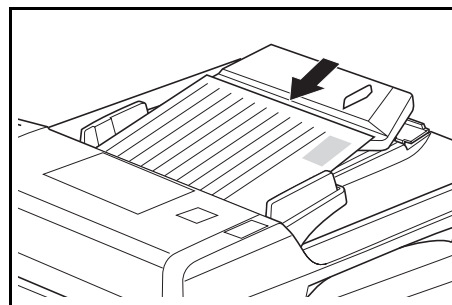

- Important!**
- Be sure to set only a number of originals that does not exceed the level indicator located inside the rear original insert guide. If you set originals exceeding the specified number, the originals may jam. (For the number of originals that can be set, see page **4-1.**)

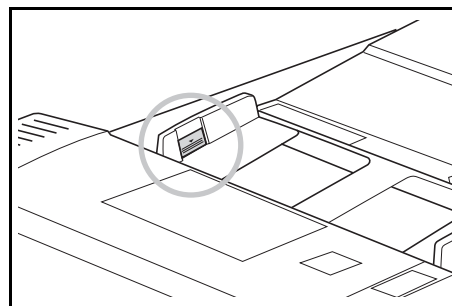


- To keep ejected originals from falling off the machine, open the ejection extension when using large originals such as A3, B4, 11 × 17" (Ledger), and 8 1/2 × 14" (Legal).
- When copying from 2-sided originals, the originals are temporarily ejected onto the ejection tray in order to turn them over. Do not touch them at this point. Any attempt to remove them may cause the originals to jam.

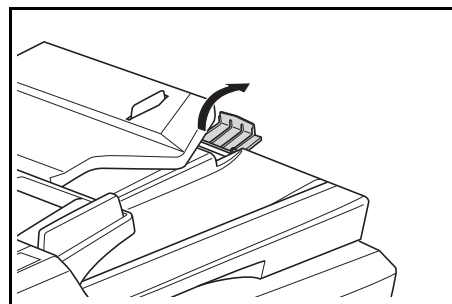

Setting Originals on the Platen

When copying from an original which cannot be set in the document processor, open the document processor and set the original directly on the platen.

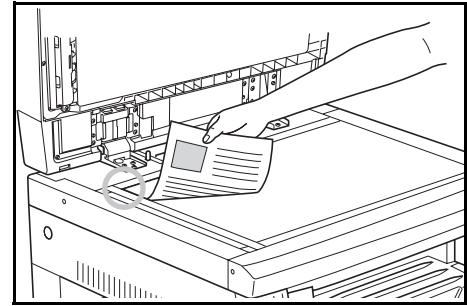

- Notes**
- Before opening the document processor, make sure that there are no originals remaining on the original table or on the original eject table. If there are originals left in either place, they may fall off the machine when the document processor is opened.
 - When double-page spread originals such as books are copied, shadows may appear along the edges and at the middle of copies.
 - Do not put undue pressure on the platen when closing the document processor. The platen glass may be broken.




Caution

Do not leave the document processor open as there is a danger of personal injury.

Paper Feeder

In addition to the cassette(s) provided with the main body, a paper feeder (with cassettes that can hold 300 sheets each) can be used.

- The number of sheets that can be accommodated: 300 sheets (standard paper, 64 to 105 g/m²).
- Paper sizes that can be set are: A3, B4, A4, A4R, B5, B5R, A5R, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 11 × 8 1/2", 8 1/2 × 11" (Letter), 5 1/2 × 8 1/2" (Statement), 8 1/2 × 13" (Oficio II), 8K, and 16K

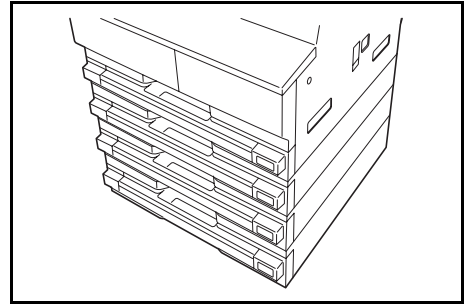

Copy paper can be set in the same way as the standard cassette provided with the main body. (See page 2-1.)


The left covers are provided to allow paper to be removed when a paper jam occurs.

Important! When lifting and transporting this machine, be sure to detach the paper feeder in advance.

Note Up to three cassettes can be added for the 18-ppm model, and up to two cassettes can be added for the 22-ppm model.

Duplex Unit

Two-sided copies can be made if the duplex unit is installed. Two-sided copies of sizes from A3 to A5R, Folio, 11 × 17" (Ledger) to 5 1/2 × 8 1/2" (Statement), 8K, 16K, and 16KR (64 to 80 g/m²) can be made.

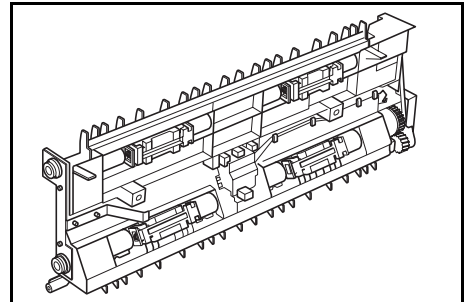

Finisher

The finisher stores a large quantity of copies and can sort multiple copy sets by shifting the position of ejection for each one. It can also staple collated copy sets.

The number of sheets that can be stored in the finisher and the specifications of stapling are shown below.


Tray capacity and paper sizes

Non-stapling	500 sheets (A4, 11 × 8 1/2", B5) 250 sheets (A3, B4, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 8 1/2 × 13" (Oficio II))
Stapling (80 g/m ² or less)	For stapling of 2 to 4 sheets: 130 sheets For stapling of 5 sheets or more: 250 sheets


Stapling capacity	30 sheets (A4, 11 × 8 1/2", B5) 20 sheets (A3, B4, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 8 1/2 × 13" (Oficio II))
-------------------	---

Names of Parts


- 1 **Finisher tray**
- 2 **Process tray**
- 3 **Process tray extension**
- 4 **Finisher tray extension**
- 5 **Paper output guide 1**
- 6 **Paper output guide 2**

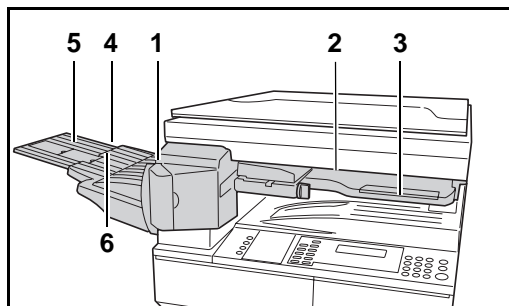


- Notes**
- Sorted copies are output onto the finisher tray.

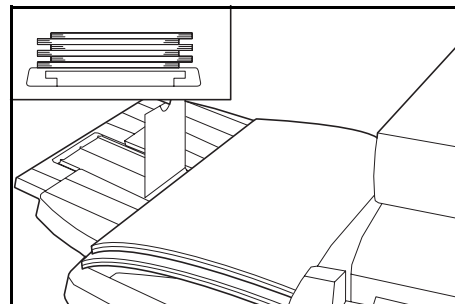


- According to the paper size, adjust the finisher tray extension.

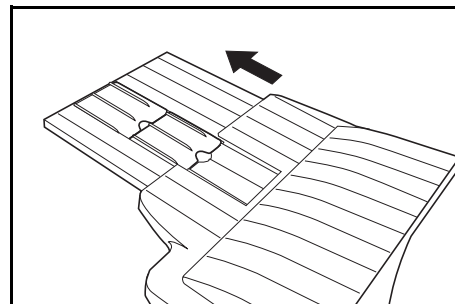

- The paper sizes are marked on the finisher tray extension. Open paper output guide 1 or 2 according to the paper size.

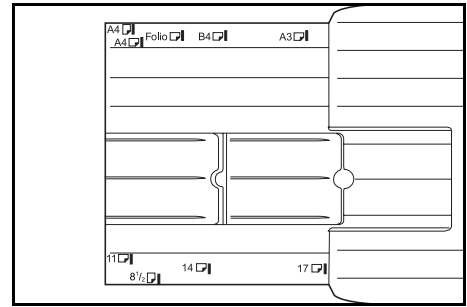


- When stapling large paper such as A3, B4, 11 × 17" (Ledger), and 8 1/2 × 14" (Legal), open the process tray extension to prevent the paper from dropping.

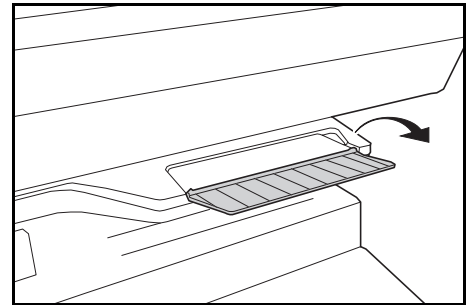


Adding Staples


- 1 Open the stapler front cover toward your side.

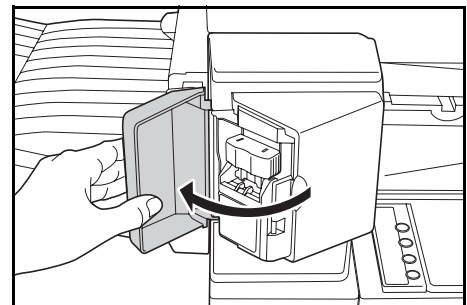


- 2 Pull out the staple holder.

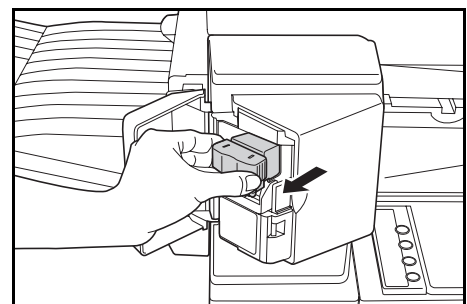

- 3 Remove the empty staple cartridge from the staple holder.

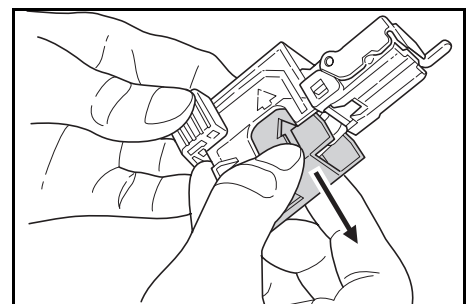


- 4 While holding the staple holder with one hand and the new staple cartridge with the other hand, insert the cartridge into the holder with care about the direction.

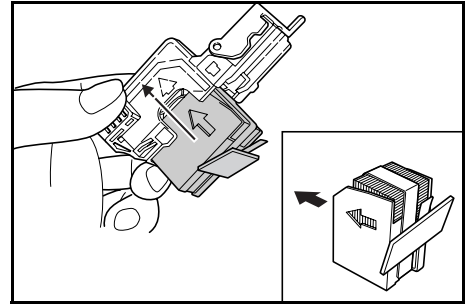


Note The arrow on the staple cartridge indicates the insertion direction.

- 5 Push the staple cartridge all the way into the holder and remove the paper tape around the staple cartridge by pulling it.

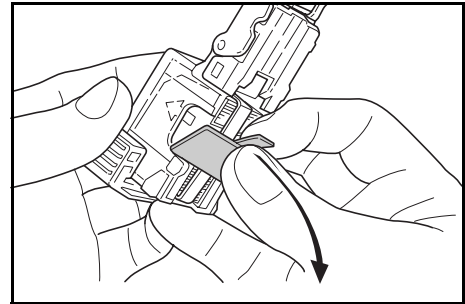


- 6 Insert the staple holder into the insertion slot as it was. Insert it completely until it clicks.

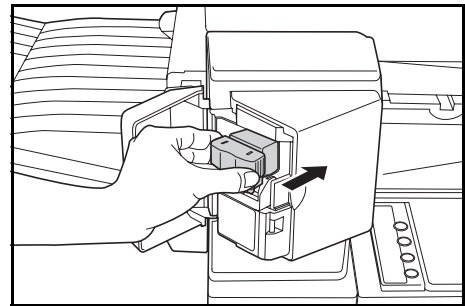


- 7 Close the stapler front cover.

Clearing Staple Jam


- 1 Remove the staple holder in the same way as described in **Adding Staples**.
Hold knob **A** of the face plate of the staple holder with your fingers and raise the plate.

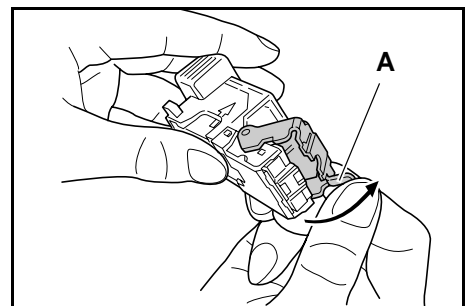

- 2 Remove the staple jammed at the end (side on which staples are set).

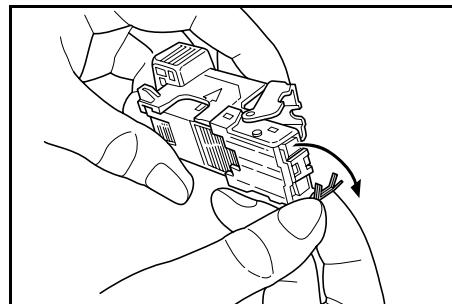

- 3 Lower the face plate of the staple holder to its original position.

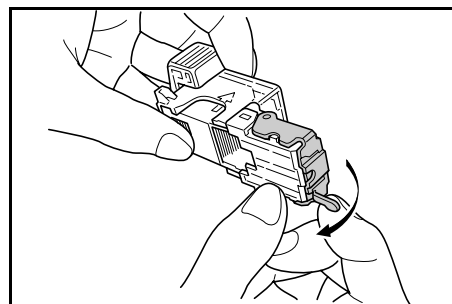


- 4 Insert the staple holder into the insertion slot as it was. Insert it completely until it clicks.
- 5 Close the stapler front cover.

Job Separator


This unit is used to separate paper output destinations for easy classification. Copies are output to the output tray, and printer output is ejected onto the job separator tray. Also the output destinations can be specified.

On the front side of the machine, a paper indicator is provided for showing that there is paper on the job separator tray.

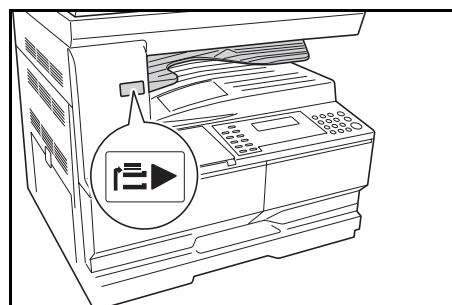


- Important!**
- Note that a paper jam may occur at the output section due to paper curling depending on the paper type.
 - If finished papers come out curled or are stacked unevenly, turn the paper in the cassette over and set it again.

- Notes**
- To output paper onto the job separator, change the setting in the machine default settings (copier) or the paper settings (printer).
 - When removing paper from the job separator tray, pull it at an angle so that any corner of the paper is not hit.

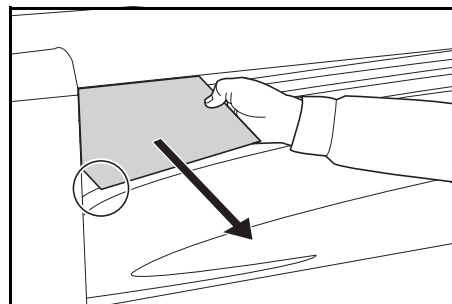


Key Counter

The key counter is used to confirm the amount of usage of the copier functions. It is useful in managing copier usage for each department, section, etc. as well as in the company overall.

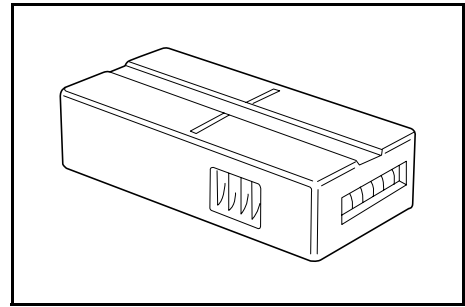

Setting the Key Counter

Set the key counter securely in the key counter slot.

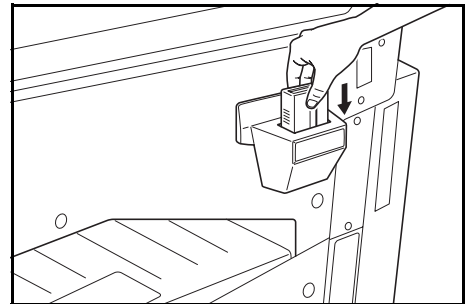

Note In the case where the key counter is used, no one will be able to make copies until it is installed in the machine. `Insert key counter` will be displayed when the key counter has not been securely inserted.

Fax Kit

If the fax kit is installed in this machine, you can use this machine as a facsimile machine. Also if the optional network scanner kit is used together, this machine can be used as a network fax with which data can be transmitted and received through a computer. For details, refer to the **Operation Guide** for the fax kit.

Network Scanner Kit

If the network scanner kit is installed in this machine, you can use this machine as a network scanner. For details, refer to the **Operation Guide** for the network scanner kit.

Network Interface Card (IB-23)

The network interface card supports TCP/IP, IPX/SPX, NetBEUI and Apple Talk protocols, so that the printer can be used on a network environments' including Windows, Macintosh, UNIX, Netware etc.

For details refer to the documentation included in the card.

Additional Memory

A memory can be added for the copier functions and the printer functions respectively. Adding a memory will increase the maximum number of originals that can be scanned at one time. Also complicated data can be printed. An additional memory of 64 MB or 128 MB is effective for originals containing photos with a low compression ratio.

- Notes**
- Available memory
For copier: 16 MB, 32 MB, 64 MB, 128 MB
For printer: 32 MB, 64 MB, 128 MB, 256 MB
 - Number of originals that can be scanned (A4 originals with of 6 % coverage, **Text + Photo** mode)

16 MB	32 MB	64 MB	128 MB
289 sheets (179 sheets)	392 sheets (282 sheets)	597 sheets (487 sheets)	1006 sheets (896 sheets)


The values within () are those for the machine with the optional network scanner kit installed.

Optional Equipment

The locations for attaching options are shown below.

Available Options

The following options are available for this machine.

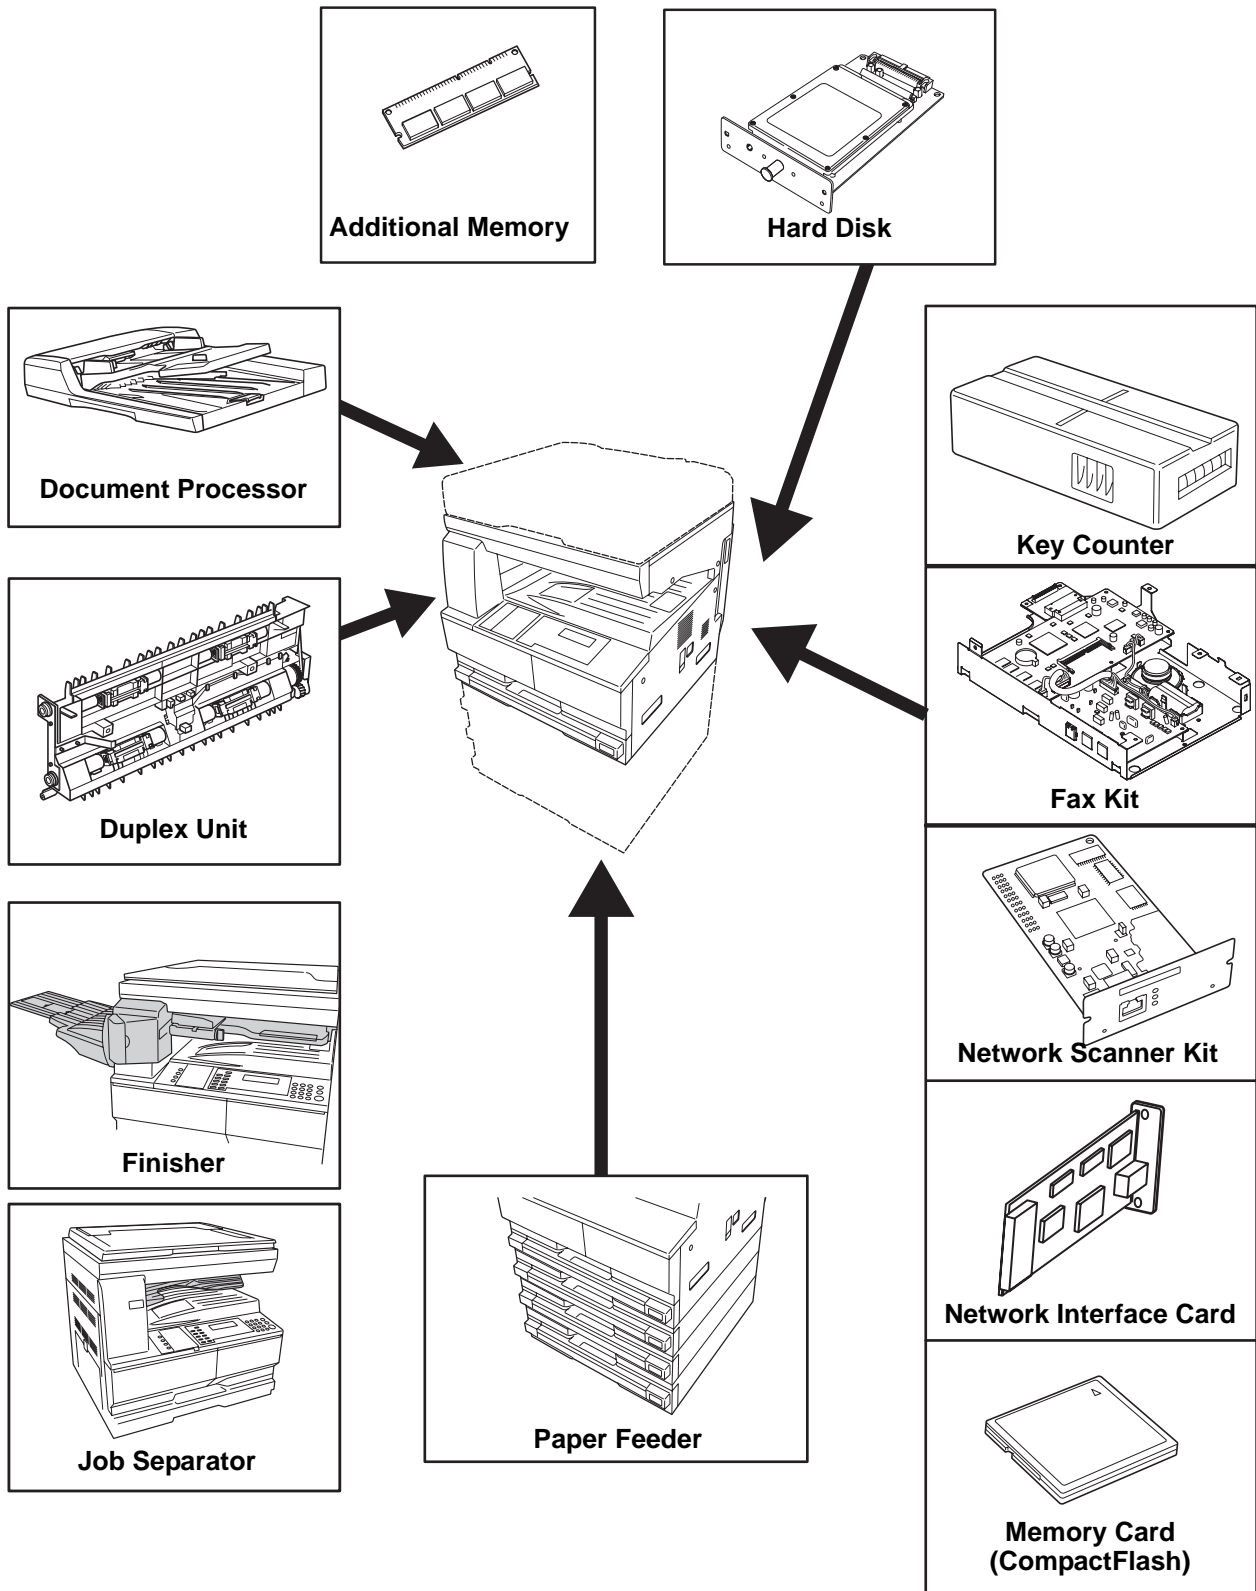

5 Maintenance

Cleaning the Machine




Caution

For safety purposes, always remove the power plug from the outlet when performing cleaning operations.

Cleaning the Original Cover


Open the original cover and wipe the back side of the cover with a soft cloth dampened with alcohol or mild neutral detergent.

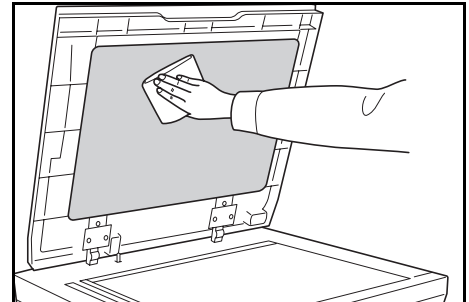

Important! Never use thinner or other organic solvents.

Cleaning the Platen


Open the original cover and wipe the platen with a soft cloth dampened with alcohol or mild neutral detergent.

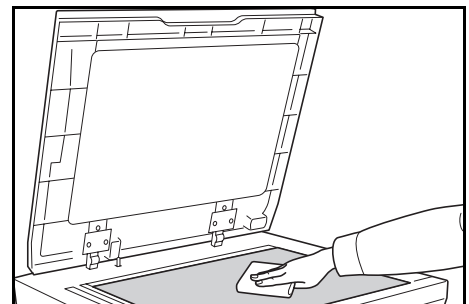

Important! Never use thinner or other organic solvents.

Cleaning the Slit Glasses

If copies appear soiled, such as black lines appearing on the copy image while using the optional document processor, the slit glasses **A** and **B** are dirty. Wipe the slit glasses with a dry soft cloth.

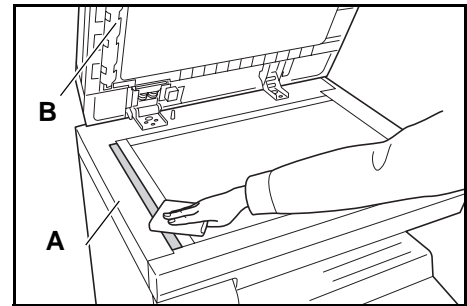


Important! Never use water, thinner, organic solvents or alcohol.


Note For cleaning the inside of the main body, see *Replacing the Toner Container and the Waste Toner Box* on page 5-5.

Cleaning the Separation Needle


- 1 Open the front cover.

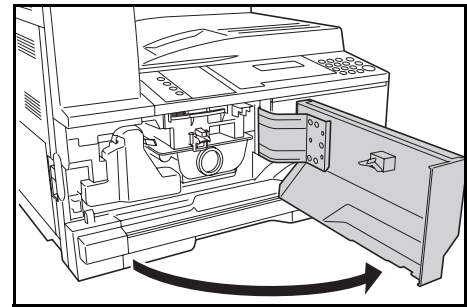


- 2 Remove the cleaning brush.

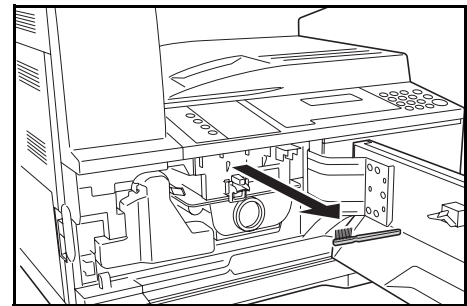


- 3 Pull the left cover handle up to open the cover.

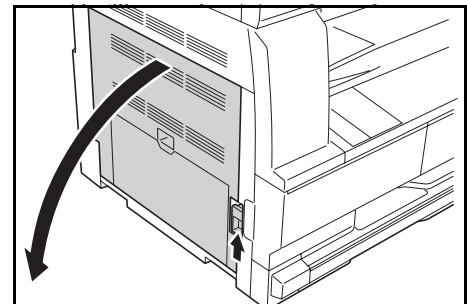

- 4 Move the brush from the left side to the right side along the separation needle as shown in the illustration to remove any dirt or dust.

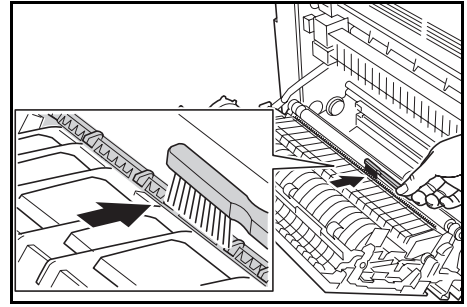


- 5 Close the left cover.

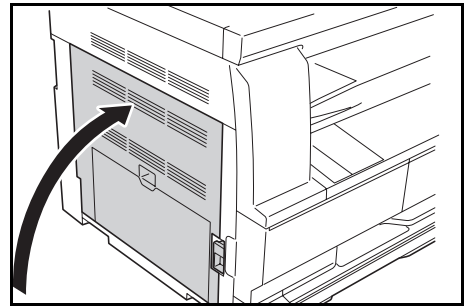


Cleaning the Transfer Roller


- 1 Open the front cover.

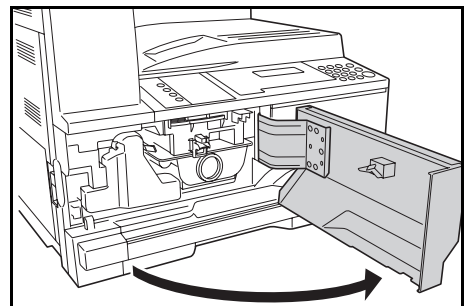


- 2 Remove the cleaning brush.

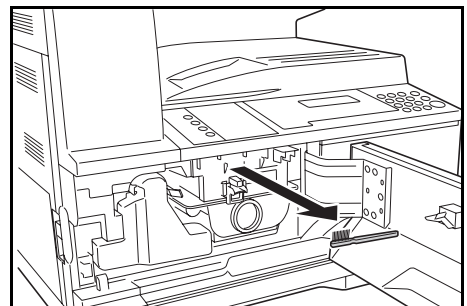


- 3 Pull the left cover handle up to open the cover.

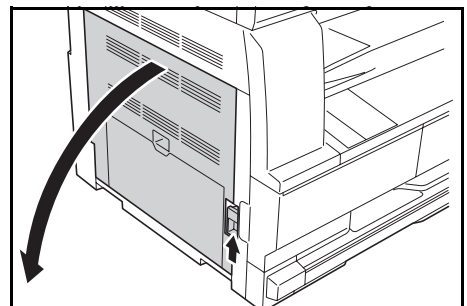

- 4 While turning the left transfer roller gear to turn the roller as shown in the illustration, move the brush from the left side to the right side along the roller to remove any dirt or dust.

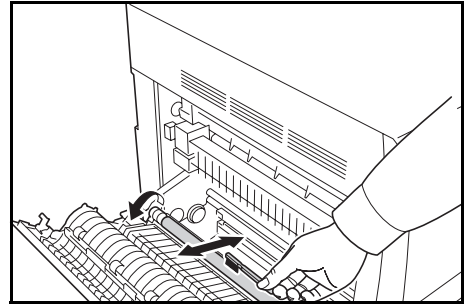

- 5 Close the left cover.

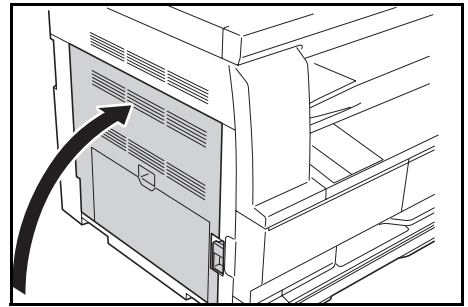

Replacing the Toner Container and the Waste Toner Box

When message `Unable to copy. Please Add Toner [Cannot copy. Add toner, resume copying.]` is displayed on the message display and the machine stops, add toner. Replace the toner container together with the waste toner box.



Notes Add toner only when `Add Toner` is displayed on the message display.

Whenever the toner container is changed, be sure to carry out the procedure described from step 7 on page **5-7** through step 11 on page **5-8**. If any section is left dirty, the performance of this product cannot be maintained.


Caution

Do not attempt to incinerate the toner container or the waste toner box. Dangerous sparks may cause burns.


Caution

Do not attempt to force open or destroy the toner container or the waste toner box.

- 1 Open the front cover.

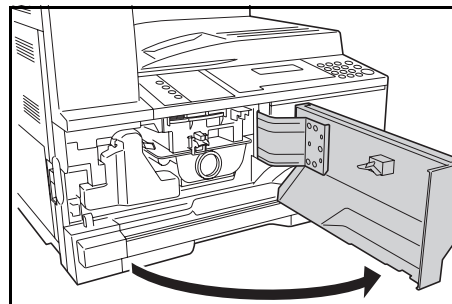

- 2 While pushing the waste toner box holder to the left, remove the waste toner box.

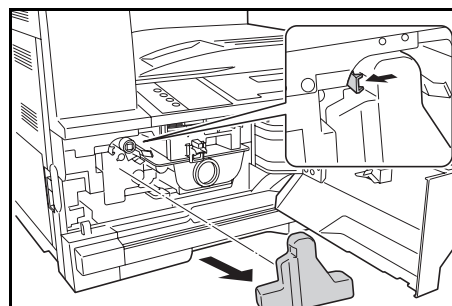


Important! Do not invert the old waste toner box.


 **Warning**

High voltage is present in the charger section. Take sufficient care when working in this area, as there is a danger of electrical shock.

- 3 Use the cap attached to the center of the old waste toner box to cover the opening.

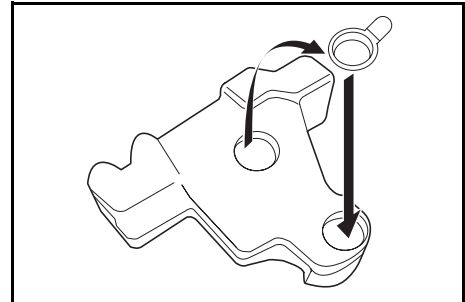

- 4 Turn the toner container release lever **A** up to pull out the toner container.

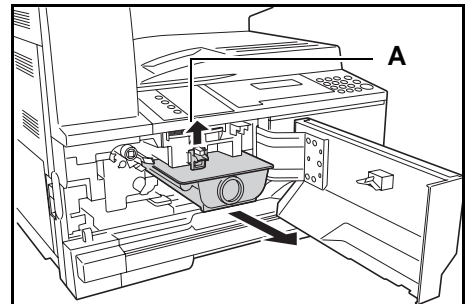


 **Caution**

Do not attempt to incinerate the toner container or the waste toner box. Dangerous sparks may cause burns.


 **Caution**

Do not attempt to force open or destroy the toner container or the waste toner box.


- 5 Place the old waste toner box in the plastic bag provided for disposal.

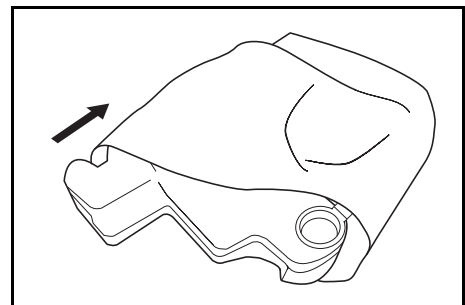

- 6** Place the old toner container in the plastic bag provided for disposal.

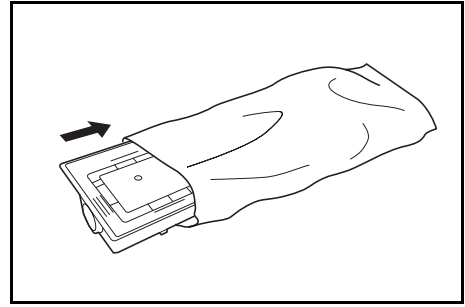

- 7** While holding the charger cleaner rod, gently pull it out as far as it will go and push it in again.
Repeat this operation two or three times.

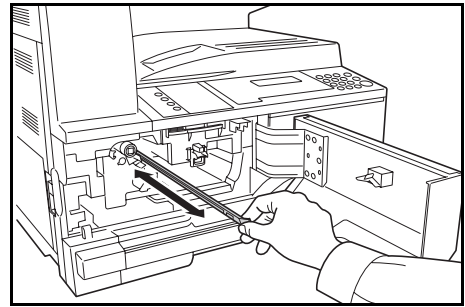


Note Do not use excessive force to pull the rod or attempt to pull it out completely.

- 8** While pushing the electrical charge section to the right, pull it out approximately 5 cm (2 inches).


Remove the accompanying grid cleaner from its package and remove its cap.

Fit the grid cleaner to the notch and install it into the main body.

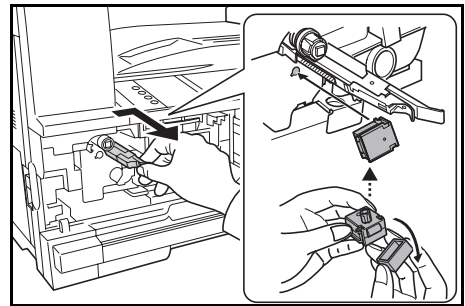


- 9** While holding gently the grid cleaner with your left hand, pull out the electrical charge section as far as it will go and push it back until the portion **B** does not touch the white pad of the grid cleaner.

Repeat this operation several times.

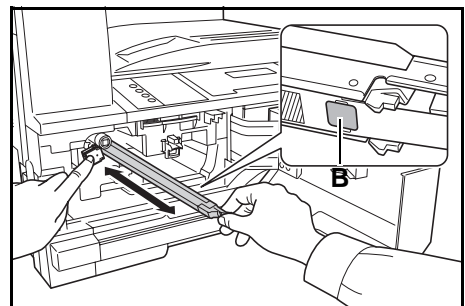


Important! When pushing back the electrical charge section, do not push it all the way into the main body. Copying trouble may occur.

- 10** When the electrical charge section is pulled out approximately 5 cm (2 inches), remove the grid cleaner and then push back the electrical charge section all the way into the main body.

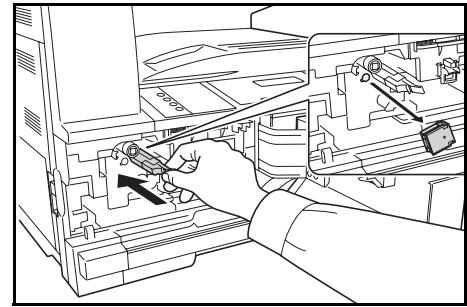


Important! After you use the grid cleaner to clean the electrical charge section, the machine can be used again after more than 5 minutes have elapsed.


- 11** Hold the new toner container vertically and tap the upper part five times or more.
Turn the toner container upside down and tap the upper part five times or more.

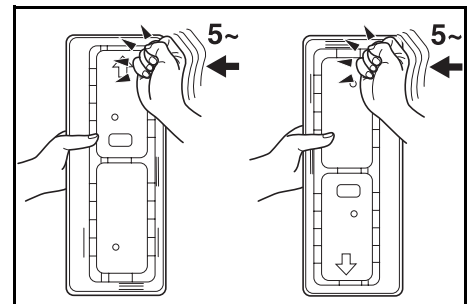


- 12** Shake the toner container up and down five times or more.
Turn the toner container upside down and shake it five times or more.

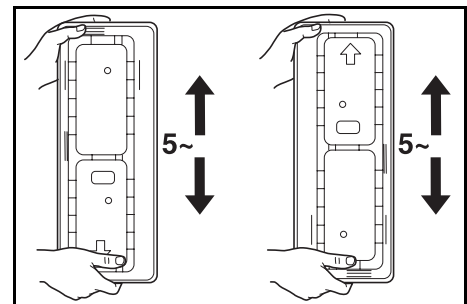


- 13** Hold the toner container horizontally and shake it from side to side five times or more.

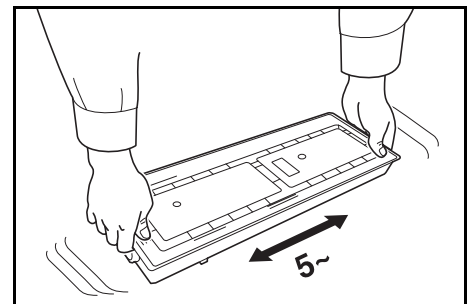


- 14** Insert the new toner container. Press it with both hands until it is locked.

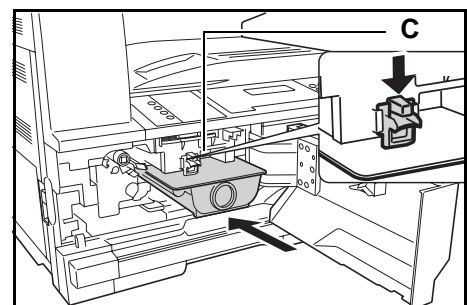

- 15** Install the new waste toner box.

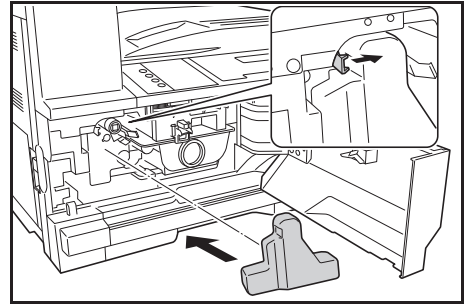

- 16** Close the front cover.

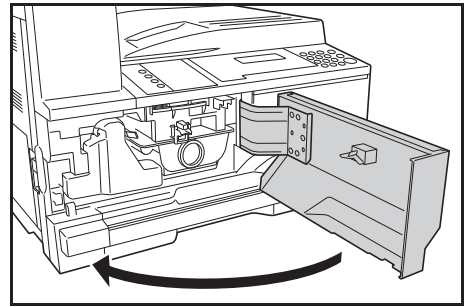

After use, always dispose of the toner container and the waste toner box in accordance with Federal, State and Local rules and regulations.

6 Troubleshooting

If Trouble Occurs

If trouble occurs with this machine, carry out the items indicated below. If the trouble persists, contact your service representative.

Symptom	Items to check	Corrective procedure	Reference page
Nothing is displayed on the operation panel when the main power switch is turned on.	Is the power plug connected to an AC outlet?	Connect the plug to an AC outlet.	2-10
No copies come out when the Start key is pressed.	Is there any indication of the trouble on the operation panel?	Check the appropriate measures against that indication and carry out the corresponding procedure.	6-4
The copies come out blank.	Were the originals set correctly?	When setting originals on the platen, set them face-down along the original size indicator plates.	3-1
		When setting originals in the optional document processor, set them face-up.	4-2
The copies come out too light.	Is the auto density adjustment mode set?	To adjust the overall density level, perform the auto density adjustment procedure.	-
	Is the manual density mode set?	Use the Lighter key or the Darker key to adjust the density level properly.	3-2
		To adjust the overall density, perform the relevant density adjustment procedure in each image quality mode.	-
	Is the toner evenly distributed in the toner container?	Shake the toner container horizontally approximately 10 times.	5-5
	Is the EcoPrint mode set?	Do not set the EcoPrint mode.	.-
	Is Adding Toner requested?	Replace the toner container.	5-5
	Is the copy paper wet?	Replace the copy paper with new paper.	2-1
	Is the electrical charge section dirty?	Open the front cover and use the charger cleaner rod to clean the electrical charge section.	5-5
The copies come out too dark.	Is the auto density adjustment mode set?	To adjust the overall density level, perform the auto density adjustment procedure.	-
	Is the manual density mode set?	Use the Lighter key or the Darker key to adjust the density level properly.	3-2
		To adjust the overall density, perform the relevant density adjustment procedure in each image quality mode.	-

Troubleshooting

Symptom	Items to check	Corrective procedure	Reference page
A moire pattern (the phenomenon where the dots do not appear to be lined up properly but seem to be grouped together in patterns) appears on the copies.	Is the original a printed photograph?	Set the image quality mode to Photo .	3-2
The copies are not clear.	Did you select an image quality mode properly according to the type of the original?	Select an appropriate image quality mode.	3-2
The copies are dirty.	Is the platen or the original cover dirty?	Clean the platen and/or the original cover.	5-1
The copy image is skewed. Were the originals set correctly?	When using the platen, set the original securely along the original size indicator plates.		3-1
	When using the optional document processor, adjust the original insert guides securely before setting the originals.		4-2
	Was the paper set correctly?	Check the width guide plate position in the cassette.	2-1
Paper jams occur often.	Is the paper loaded properly in the cassette?	Load the paper properly.	2-1
		Depending upon the type and storage condition of the paper, finished copies may curl tightly, resulting in a paper jam. Remove the paper from the cassette, turn it over, and set it in the cassette again.	—
	Is the paper curled, folded over or wrinkled?	Replace the paper with new paper.	2-1
	Is there any jammed paper or loose scraps of paper remaining inside the machine?	Carry out the appropriate procedure to remove the paper.	6-9
	Does the size of the paper set in the multi-purpose tray match the registered size?	Make sure the size of the paper set in the multi-purpose tray matches the registered size.	2-4
Black lines appear on copies when copying from the optional document processor.	Is the slit glass dirty?	Clean the slit glass.	5-2
		It is also possible to use the black line correction function to make any black lines on the copies less apparent.	-
Wrinkling occurs in copies.	Is the separation needle dirty?	Clean the separation needle.	5-2
Black or white vertical lines appear on copies.	Is the electrical charge section dirty?	Open the front cover and use the charger cleaner rod to clean the electrical charge section.	5-5
White spots appear on copies.	Is the transfer roller dirty?	Clean the transfer roller with the cleaning brush.	5-3
Copies are blurred.	Is this machine used at high humidity?	Perform drum refresh.	-

Symptom	Items to check	Corrective procedure	Reference page
Printing cannot be performed.	Is the power plug connected to an AC outlet?	Connect the plug to an AC outlet.	2-10
	Is the main power switch turned on?	Turn the main power switch on ().	—
	Is a proper printer cable connected securely?	Connect the printer cable securely.	2-9
	Was the printer cable connected after this machine was turned on?	After connecting the printer cable, turn this machine on.	2-9
	Is the machine offline? (Is the Ready indicator off?)	<ol style="list-style-type: none"> 1 Press the Print key to display the printer basic screen. 2 Press the ▲ key or the ▼ key to select GO. 3 Press the Enter key. The Ready indicator lights up. 	—
Correct characters are not printed.	Is a proper printer cable connected?	Connect a shielded type printer cable.	2-9
Printing is not performed properly.	Is the setting on the computer correct?	Check the setting of the printer driver or the application software.	—
The copies are curled.	Is the copy paper wet?	Replace the copy paper with dry, new paper.	2-1
	Is Middle 2 set at the Paper type (Paper Weight) setting? (Normally, Middle 2 is set.)	Set Middle 1 at the Paper type (Paper Weight) setting.	-

Displayed Messages

When any of the following message appear on the message display, take the indicated action.

Message	Procedure	Reference page
Close ## cover.	The indicated cover is open. Close all the covers securely.	—
Add paper in cassette. [Place paper in P cassette.]	Paper has run out. Add paper.	2-1
Add paper in cassette. ## size (###)	Print data does not match the size or type of paper in the cassette. Replace the paper. <ul style="list-style-type: none"> To change the paper source, press the Paper Select key to select the desired paper source and press the Enter key. If you press the Print key, the following messages are displayed. GO: Prints onto the currently selected paper. CANCEL: Stops printing. Press the ▲ key or the ▼ key to select the desired processing and press the Enter key. 	—
Set cassette. [Close paper cassette.]	The cassette is not closed securely. First pull it out and push it all the way back in.	—
Check paper size.	There is no paper loaded of a size that can be used in the currently selected mode. Check the paper.	—
Reposition original or change cassette. [Reposition original or select other paper cassette.]	The orientations of the original and the selected paper are different. Change the orientation of the original. If you press the Start key without changing the orientation, copying will be performed at a 100 % (1:1) magnification ratio.	—
Exceed copy limit. Unable to copy	The number of copies made with your management code has reached the limit that was set in the department management mode and copying is no longer possible with that code. Use the department management mode to clear the copy count.	-
Set toner container.	The toner container is not set properly. Set the toner container properly.	5-5
Ready to copy. Toner low	Toner remaining in the machine is low. It is possible to copy only one by one. Replace the toner container as soon as possible.	5-5
Unable to copy. Please Add Toner [Cannot copy. Add toner, resume copying.]	No toner remains. Replace the toner container to add toner.	5-5
Replace Waste Toner Box	The waste toner box is full. Replace the waste toner box with a new one.	5-5
Clean the slit glass for original fed from DP. [Clean the slit glass original fed from DP.]	The slit glass is dirty. Clean the slit glass because black lines may be copied when the optional document processor is used.	5-2

Message	Procedure	Reference page
Call for service.	Open the front cover once and close it. If the message is displayed again, check c and the number. Turn the main power switch off (O) and contact your service representative or authorized service center.	—
Time for maintenance	Periodic maintenance is required to keep this machine in good condition. Contact your service representative or authorized service center immediately.	—
Memory is full.	Current copying cannot be processed because the memory for copying is full or the number of originals has reached the limit of 999 pages. Select Copy Scanned Image to output the pages that have been scanned or select Cancel to delete scanned data. Another copying job or scanning cannot be performed until either of them is selected. Depending on the copy setting conditions, only one set of copies may be output and this error message may be displayed even if a multiple number of copies is specified. In this case, copying cannot be continued. Press the Enter key and perform copying operation again. If this error occurs frequently, addition of a memory is recommended.	—
	Current printing cannot be processed because the memory for printing is full. Press the Print key to display the following messages. GO: Continues printing. Processed data will be output and remaining data will be printed on the next page. CANCEL: Cancels printing. RESET: Resets the printer board. In this case, only the printer functions will be reset. Press the ▲ key or the ▼ key to select the desired processing and press the Enter key.	—
	Notes	
	<ul style="list-style-type: none"> If you use the RAM disk function, reduce the RAM disk size. If this error occurs frequently, addition of the printer memory is recommended. For the addition of the printer memory, contact your service representative or authorized service center. If the auto continue setting has been turned on, printing will automatically resume after a preset period of time. 	
Paper misfeed.	A paper jam has occurred. The location of the jam is indicated on the message display, and the machine stops. Leave the main power switch on () and follow the appropriate procedure to remove the jammed paper.	6-9
Reset all original in DP.	Remove the originals from the optional document processor, return all the originals into the original table, and restart copying.	—
Misfeed in DP. Remove original(s).	Originals have jammed in the optional document processor. Leave the main power switch on () and follow the appropriate procedure to remove the jammed originals.	6-11

Troubleshooting

Message	Procedure	Reference page
Remove paper from Top tray. Press START key.	<p>The output tray capacity is exceeded during copying.</p> <ul style="list-style-type: none"> • There are already 250 sheets of paper stored in the output tray. • There are already 150 sheets of paper stored in the output tray when the optional job separator is installed. • There are already 100 sheets of paper stored in the output tray when the optional finisher is installed. <p>Remove the paper.</p>	—
Remove paper from Top tray. Press GO	<p>The output tray capacity is exceeded during printing.</p> <ul style="list-style-type: none"> • There are already 250 sheets of paper stored in the output tray. • There are already 150 sheets of paper stored in the output tray when the optional job separator is installed. • There are already 100 sheets of paper stored in the output tray when the optional finisher is installed. <p>Remove the paper.</p> <p>Press the Print key. Press the ▲ key or the ▼ key to select GO and press the Enter key. Printing will resume.</p> <p>Note To cancel printing, select CANCEL and press the Enter key.</p>	—
Remove paper from Finisher. Press START key.	<p>There are already 250 sheets of paper stored in the optional finisher during copying.</p> <p>Remove the paper.</p>	—
Remove paper from Finisher. Press GO	<p>There are already 250 sheets of paper stored in the optional finisher during printing.</p> <p>Remove the paper.</p> <p>Press the Print key. Press the ▲ key or the ▼ key to select GO and press the Enter key. Printing will resume.</p> <p>Note To cancel printing, select CANCEL and press the Enter key.</p>	—
Paper capacity exceeded. Remove paper from Job sep.	<p>There are already 100 sheets of paper stored on the optional job separator.</p> <p>Remove the paper.</p>	—
Paper misfeed in Finisher, lower Process Tray and remove paper.	<p>Paper has jammed in the optional finisher.</p> <p>Remove the paper.</p>	6-16
Out of Staples Please Add Staples [Stapler Empty. Add Staples.]	<p>There are no staples left in the optional finisher.</p> <p>Add staples.</p>	4-7
Cannot staple this size. [Cannot staple this pap. Size]	<p>Stapling of small paper, such as 5 1/2 × 8 1/2" (Statement), A5R, and B5R, is not possible.</p>	—

Message	Procedure	Reference page
System error. Main switch off / on.	<p>This message is displayed when a malfunction due to noise or the like or a communication error during printer processing has occurred.</p> <p>Follow the procedure below.</p> <ol style="list-style-type: none"> 1 Turn the main power switch off (O). If printer output is being performed, cancel printing on the computer. 2 Wait more than five seconds and then turn the main power switch on (). The error is cleared. If printing has been performed, perform output again. 	—
RAM disk error Press GO	<p>An error has occurred in writing to or reading from the RAM disk.</p> <p>Press the Print key, select GO, and press the Enter key. The error will be cleared.</p>	—
MemoryCard err Press GO	<p>An error has occurred in writing to or reading from the memory card.</p> <p>Press the Printer key, select GO, and press the Enter key. The error will be cleared.</p>	—
Memory card error Insert again.	<p>The memory card is accidentally removed during printer setting.</p> <p>Insert the memory card.</p> <p>Note When inserting the memory card, turn the main power switch off (O).</p>	—
Insert same memory card	<p>When the machine has tried to read data from the memory card, it cannot recognize the memory card.</p> <p>Insert the memory card again.</p> <p>Note When inserting the memory card, turn the main power switch off (O).</p>	—
Format error Memory card	<p>The memory card inserted in the machine must be formatted.</p> <p>Format the memory card.</p>	—
Print overrun Press GO.	<p>Printing has not been performed properly because of insufficient memory.</p> <p>Press the Print key to display the following messages. GO: Continues printing. CANCEL: Cancels printing. RESET: Resets the printer board. In this case, only the printer functions will be reset.</p> <p>Press the ▲ key or the ▼ key to select the desired processing and press the Enter key.</p> <p>Notes</p> <ul style="list-style-type: none"> • If the auto continue setting has been turned On, printing will be automatically resumed after a preset period of time. • After this error message is displayed, the page protect mode will be automatically turned On. 	—
Interface occupied	<p>The selected interface is currently being used. Wait for a while and retry.</p>	—
Checksum Error	<p>The machine has detected an error at startup.</p> <p>Turn off the main power switch and on again. If the same message appears, contact your service representative or authorized service center.</p>	—
Ready to copy Toner low.	<p>Toner remaining in the machine is low. Prepare a new toner container.</p>	-


Troubleshooting

Message	Procedure	Reference page
Shake the toner container.	The toner container is not tapped or shaken properly. Tap and shake the new toner container without spilling the toner and install it again.	-

Paper Jams


If a paper jam occurs, copying or printing stops. At this time, jam location indicators are displayed as well as an error message indicating a paper jam. Leave the main power switch on (|) and refer to **Removal Procedures** on page 6-10 to remove the jammed paper.

Paper misfed in cassette 1.
Remove paper.
JAM11

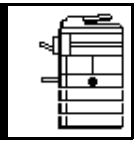


Jam Location Indicators

Paper misfed in cassette 1.
Remove paper.
JAM11

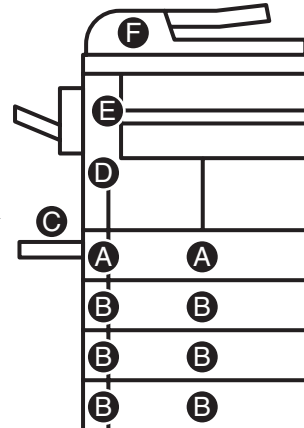

Indicator location	Paper jam location	Paper jam number	Reference page
A	Paper jam inside cassette 1	JAM11, JAM21	6-10
B	Paper jam inside cassettes 2 to 4†	JAM12, JAM13, JAM14, JAM15, JAM16, JAM22, JAM23, JAM24	6-11
C	Paper jam in the multi-purpose tray	JAM10, JAM20	6-12, 6-13
D	Paper jam in the left cover	JAM30, JAM40, JAM41, JAM42, JAM43, JAM44, JAM45, JAM60, JAM61	6-13
E	Paper jam in the paper output slot	JAM50, JAM52, JAM53, JAM54, JAM55, JAM56, JAM57	6-14
	Paper jam in the optional finisher	JAM80, JAM81, JAM83, JAM84	6-16
	Paper jam in the optional job separator	JAM51	6-18
F	Paper jam in the optional document processor	JAM70, JAM71, JAM72, JAM73, JAM74, JAM75, JAM78	6-15

Notes

 **Warning**

High voltage is present in the charger section. Take sufficient care when working in this area, as there is a danger of electrical shock.

 **Caution**

The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.


- Do not reuse jammed paper.
- If paper is torn during removal, be sure to remove any loose scraps of paper from inside the machine. Failure to do so may cause another paper jam later.
- Once all jammed paper has been removed, warm-up will begin. The error message will disappear and the machine will return to the same settings as prior to the paper jam.

Removal Procedures


Paper Jam inside Cassette 1

If Paper misfeed in cassette 1. Remove paper appears and the jam location indicator shown in the illustration blinks, a paper jam has occurred in the cassette. Perform the following procedure to remove the jammed paper.


Paper misfeed in cassette 1.
Remove paper.
JAM11



1 Pull out the cassette.

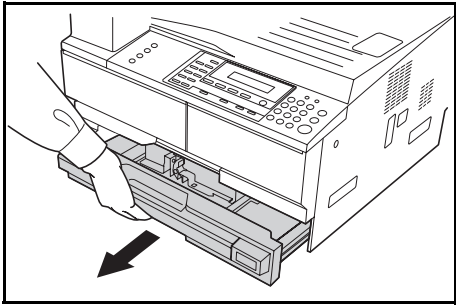

2 Remove any jammed paper without tearing it.

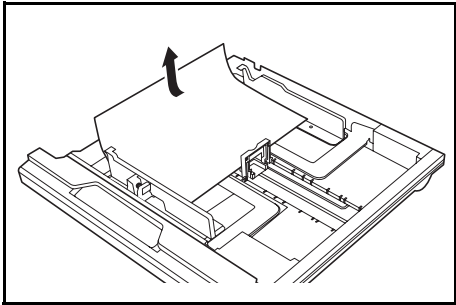



Note If the paper does happen to tear, remove any loose scraps from inside the machine.

3 Push the cassette back in firmly.

- Notes**
- Check to see if paper is out of position in the cassette. If the paper is out of position, set the paper properly.
 - If JAM21 is displayed, remove the jammed paper referring to **Paper Jam in the Left Cover** on page 6-13.


Paper Jam inside Cassettes 2 to 4

If Paper misfeed in cassette 2 (to 4).
 Remove paper [Misfeed in paper cassette 2 (to 4). Remove paper] and Paper misfeed.
 Open left cover 2 (to 4) and remove paper appears and the jam location indicator shown in the illustration blinks, a paper jam has occurred in the optional paper feeder. Perform the following procedure to remove the jammed paper.

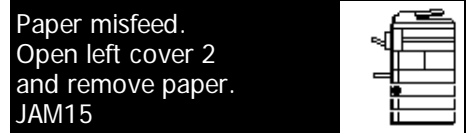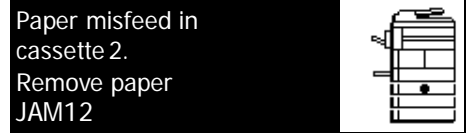


Note For the 16 ppm model, cassettes 2 to 4 are included in the optional paper feeder. For the 20 ppm model and the 25 ppm model, cassettes 3 and 4 are included in the optional paper feeder.

- 1 Open the left cover of the cassette being used.

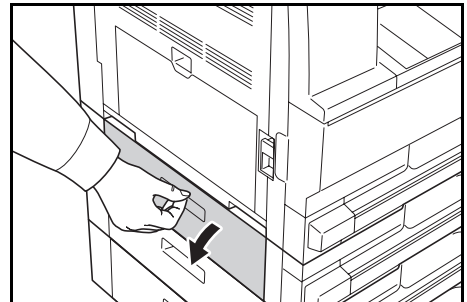


- 2 Remove any jammed paper without tearing it.

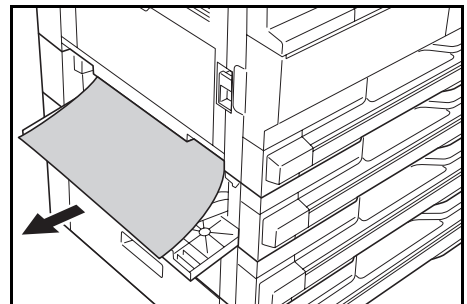


Note If the paper does happen to tear, remove any loose scraps from inside the machine.


- 3 Close the left cover of the cassette.

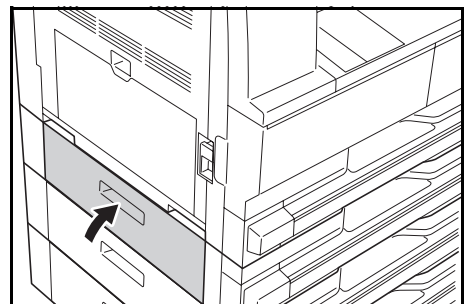

- 4 Pull out the cassette.

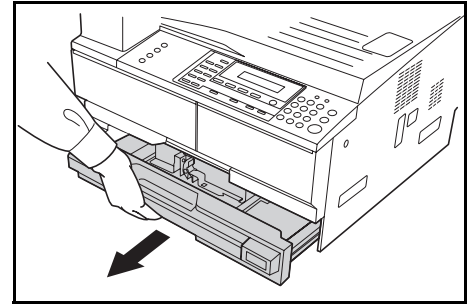

- 5 Remove any jammed paper without tearing it.

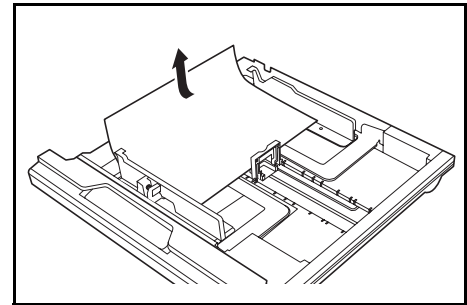


Note If the paper does happen to tear, remove any loose scraps from inside the machine.


- 6 Push the cassette back in firmly.

Paper Jam in the Multi-Purpose Tray (JAM10)


If Paper misfeed in stack bypass. Remove paper appears and the jam location indicator shown in the illustration blinks, a paper jam has occurred in the multi-purpose tray. Perform the following procedure to remove the jammed paper.

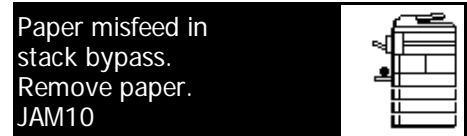

- 1 Remove all of the paper remaining in the multi-purpose tray.

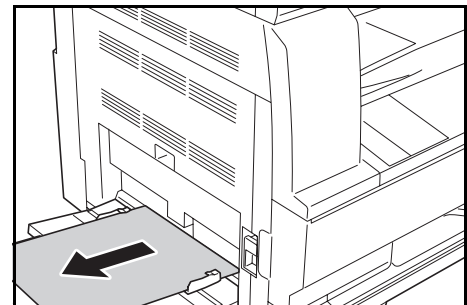

- 2 Reset the paper in the multi-purpose tray. The error message disappears.

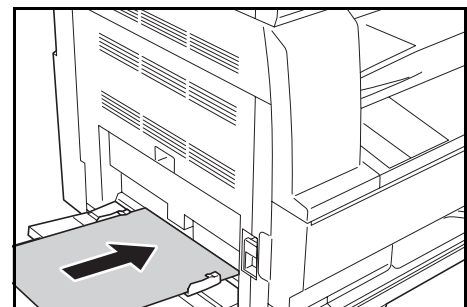


Paper Jam in the Multi-Purpose Tray (except JAM10)

- Important!**
- If JAM20 is displayed, remove the jammed paper referring to *Paper Jam in the Left Cover*.
 - If JAM40 is displayed, remove the jammed paper referring to *Paper Jam in the Left Cover*.
 - When removing jammed paper, do not pull it out from the multi-purpose tray side.

Paper Jam in the Left Cover


If Paper misfeed. Open left cover and remove paper appears and the jam location indicator shown in the illustration blinks, a paper jam has occurred in the left cover. Perform the following procedure to remove the jammed paper.

Paper misfeed.
Open left cover
and remove paper.
JAM30

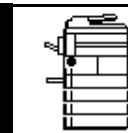

- Important!** The drum section inside the main body is sensitive to scratches and contaminants. When removing paper, be careful not to touch it or scratch it with your watch, ring, etc.


- 1 Pull the left cover handle up to open the left cover.

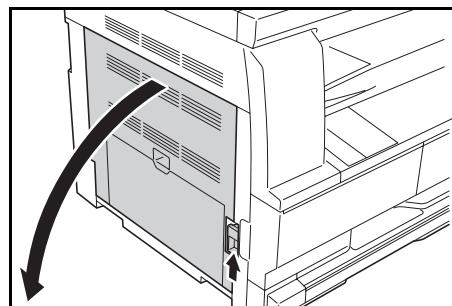

Caution


The fixing unit is extremely hot. Take sufficient care when working in this area, as there is a danger of getting burned.

- 2 Remove any jammed paper without tearing it.

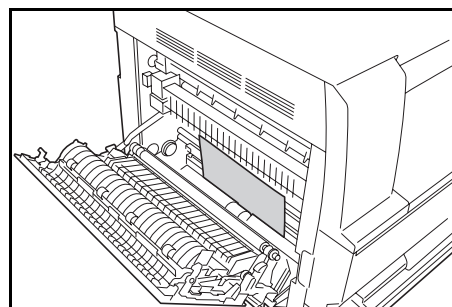

Note If the paper does happen to tear, remove any loose scraps from inside the machine.

- 3 If the optional duplex unit is installed, raise the duplex unit and remove any paper.

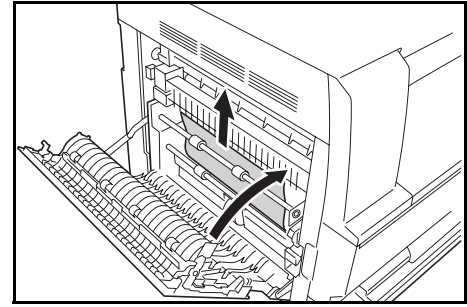


Note If the paper does happen to tear, remove any loose scraps from inside the machine.

- 4 Close the left cover.


Paper Jam in the Paper Output Slot

If Paper misfeed in Eject section Remove paper appears and the jam location indicator shown in the illustration blinks, a paper jam has occurred in the paper output slot. Perform the following procedure to remove the jammed paper.

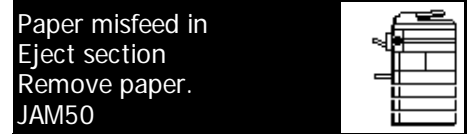


Important! The drum section inside the main body is sensitive to scratches and contaminants. When removing paper, be careful not to touch it or scratch it with your watch, ring, etc.

- 1 If jammed paper is seen through the paper output slot, pull it out to remove it.

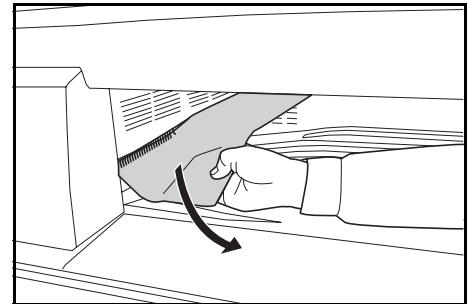


Note If the paper does happen to tear, remove any loose scraps from inside the machine.

- 2 Pull the left cover handle up to open the left cover.

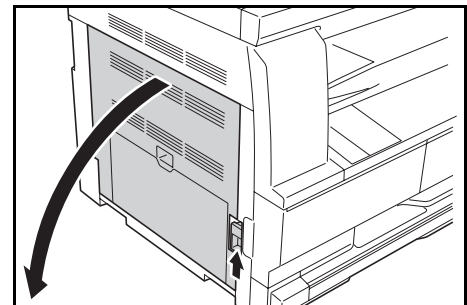

- 3 Remove any jammed paper without tearing it.

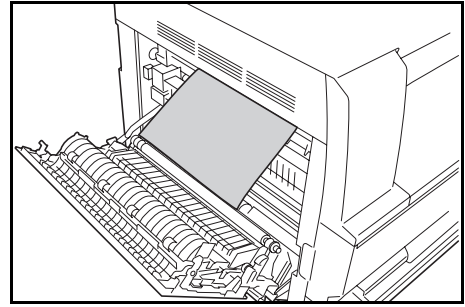


Note If the paper does happen to tear, remove any loose scraps from inside the machine.


- 4 Close the left cover.

Paper Jam in the Optional Document Processor


If **Misfeed in DP. Remove original(s)** appears and the jam location indicator shown in the illustration blinks, a paper jam has occurred in the optional document processor. Perform the following procedure to remove the jammed original(s).

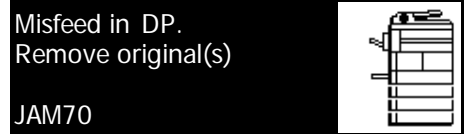


- 1 Remove all of the originals remaining in the original table.

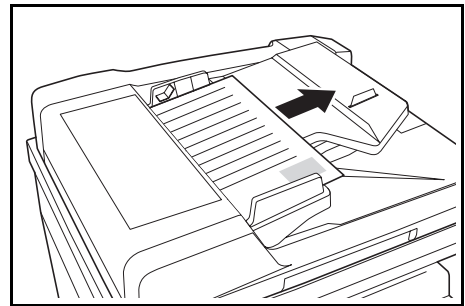

- 2 Open the left cover.

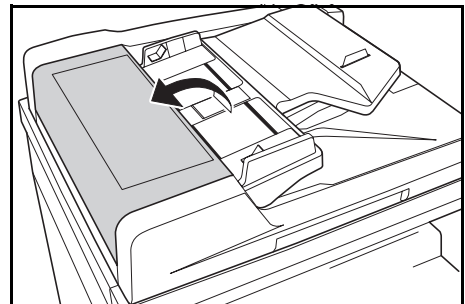


- 3 Remove any jammed original without tearing it.

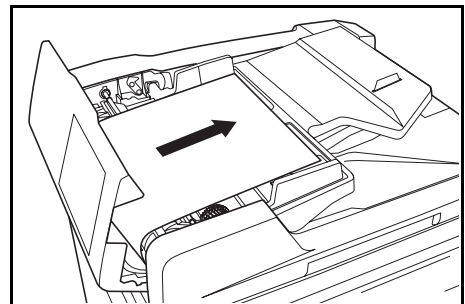

Note If the original does happen to tear, remove any loose scraps from inside the document processor. Failure to do so may cause another paper jam later.


- 4 Raise the paper feed unit **A**.

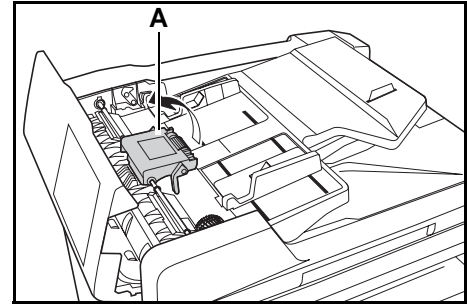

- 5 Remove any jammed originals without tearing them.

Note If the original does happen to tear, remove any loose scraps from inside the document processor.

- 6 Turn the dial as shown in the illustration to remove the jammed original.

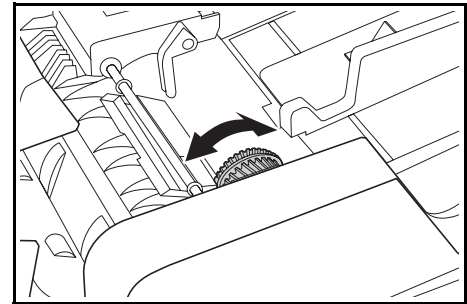


- 7 Close the left cover to its original position.
Reset all the originals and start copying again.

Paper Jam in the Optional Finisher


If Paper misfeed in Finisher, lower Process Tray and remove paper appears and the jam location indicator shown in the illustration blinks, a paper jam has occurred in the optional finisher. Perform the following procedure to remove the jammed paper.

Paper misfeed in Finisher, lower Process Tray and remove paper. JAM80

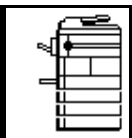


Important! The drum section inside the main body is sensitive to scratches and contaminants. When removing paper, be careful not to touch it or scratch it with your watch, ring, etc.


- 1 Turn the lever to lower the process tray.

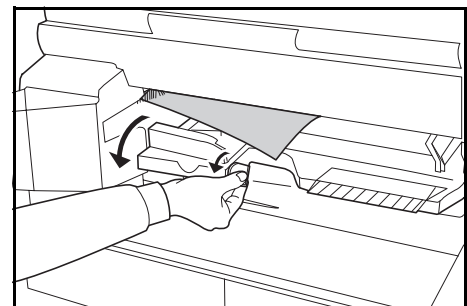


- 2 Remove any paper.

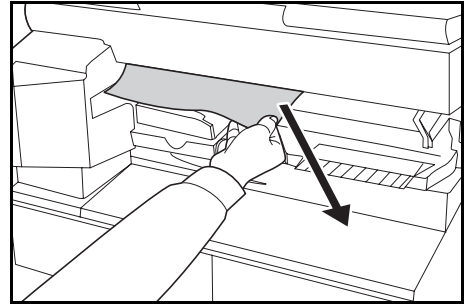


- 3 Raise the process tray.

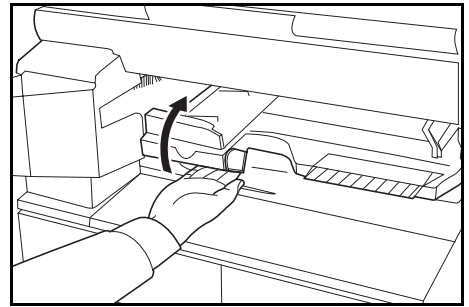


- 4 Remove the finisher tray.

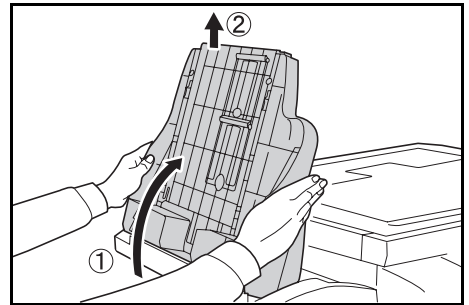

- 5 Pull the left cover handle up to open the left cover.

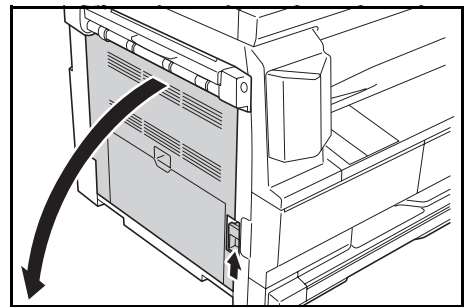


- 6 Remove any jammed paper.

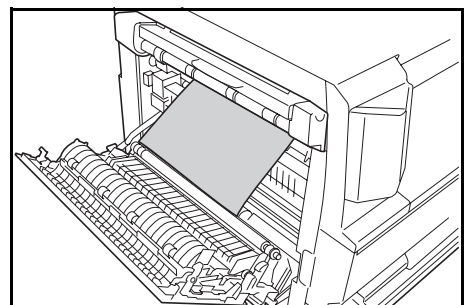


Note If the paper does happen to tear, remove any loose scraps from inside the machine.

- 7 Close the left cover.

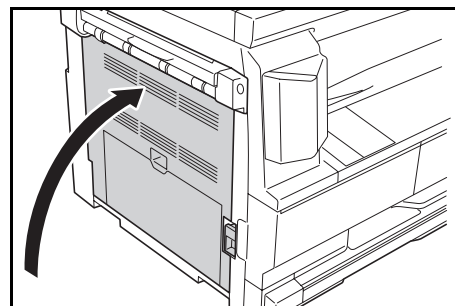


- 8 Reattach the finisher tray.

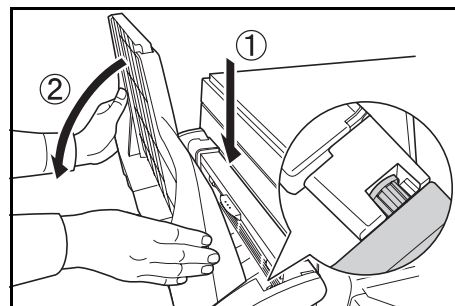

- 9 Lower the process tray temporarily and return it. The error message disappears.


Paper Jam in the Optional Job Separator

If Paper misfeed at Job separator. Remove paper appears and the jam location indicator shown in the illustration blinks, a paper jam has occurred in the optional job separator. Perform the following procedure to remove the jammed paper.

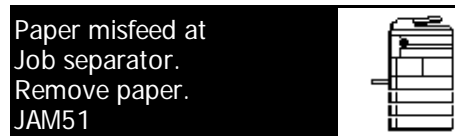


Important! The drum section inside the main body is sensitive to scratches and contaminants. When removing paper, be careful not to touch it or scratch it with your watch, ring, etc.

- 1 If jammed paper is seen through the paper output slot of the job separator, pull it toward your side to remove it.

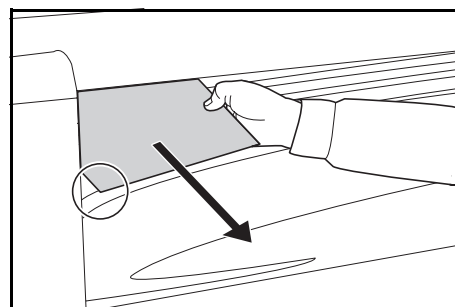


Note If the paper does happen to tear, remove any loose scraps from inside the machine.

- 2 Pull the left cover handle up to open the left cover.

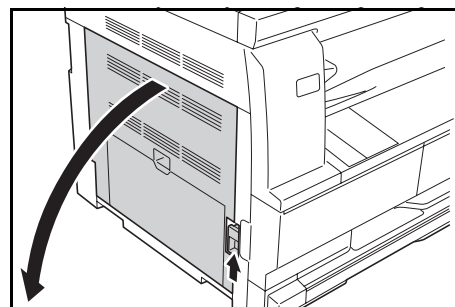

- 3 Remove any jammed paper without tearing it.

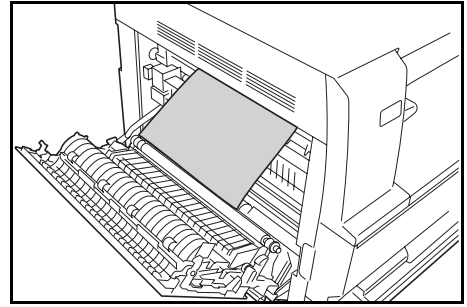

Note If the paper does happen to tear, remove any loose scraps from inside the machine.

- 4 Close the left cover.

Appendix

Specifications

Note Specifications are subject to change without notice to reflect improvements in performance.

Main Body

Copying system	Indirect electrostatic system
Original types accommodated	Sheets, books, and 3-dimensional objects (maximum original size: A3/11 × 17")
Copy sizes	
Cassette	A3, B4, A4, A4R, B5, B5R, A5R, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 11 × 8 1/2", 8 1/2 × 11" (Letter), 5 1/2 × 8 1/2" (Statement), 8 1/2 × 13" (Oficio II), 8K, 16K
Multi Purpose tray	A3 to A6R, postcard, Folio, 11 × 17" (Ledger) to 5 1/2 × 8 1/2" (Statement), 8K, 16K
Width that cannot be copied	0.5 to 5.5 mm
Paper feed source capacity	
Cassette	300 sheets (80 g/m ²), 150 sheets (90 g/m ² and above)
Multi Purpose tray	100 sheets (80 g/m ²) (25 sheets for A3, B4, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 8 1/2 × 13" (Oficio II), and 8K sizes)
Output tray capacity	250 sheets (80 g/m ²)
Warm-up time	17,2 seconds or less Time for recovery from low power mode: 10 seconds or less Time for recovery from sleep mode: 17,2 seconds or less (At room temperature: around 71.6 °F (22 °C), humidity: around 60 %)
Memory	
For copier	64 MB
For printer	128 MB
Additional memory	For copier: 16 MB, 32 MB, 64 MB, and 128 MB For printer: 32 MB, 64 MB, 128 MB, and 256 MB
Operating environment	
Temperature	10 to 32.5 °C
Relative humidity	15 to 80 %
Altitude	2,500 m maximum
Illumination	1,500 lux maximum
Power source	120 V AC, 60 Hz, 9.5 A 220 to 240 V AC, 50/60 Hz, 5.0 A

Dimensions (main unit only) (W) × (D) × (H)	18-ppm model	22 ³ / ₈ × 23 ²⁵ / ₆₄ × 19 ³¹ / ₃₂ " 568 × 594 × 507 mm
	22-ppm model	22 ³ / ₈ × 23 ²⁵ / ₆₄ × 23 ²⁹ / ₃₂ " 568 × 594 × 607 mm
Weight	18-ppm model	Approx. 72.8 lbs/33 kg
	22-ppm model	Approx. 88.2 lbs/40 kg
Noise emission	18-ppm model	≤ 62 dB(A)
	22-ppm model	≤ 64.7 dB(A)
Required space (W) × (D)	40 ⁷ / ₈ × 25 ¹³ / ₆₄ "	
	1038 × 640 mm	

Copier Functions

Copying speed		
Platen (1:1)	18-ppm model	A3/11 × 17" (Ledger): 8 sheets/minute B4/8 ¹ / ₂ × 14" (Legal): 8 sheets/minute A4/11 × 8 ¹ / ₂ ": 18 sheets/minute A4R/8 ¹ / ₂ × 11" (Letter): 13 sheets/minute B5: 16 sheets/minute
	22-ppm model	A3/11 × 17" (Ledger): 10 sheets/minute B4/8 ¹ / ₂ × 14" (Legal): 11 sheets/minute A4/11 × 8 ¹ / ₂ ": 22 sheets/minute A4R/8 ¹ / ₂ × 11" (Letter): 13 sheets/minute B5: 20 sheets/minute
First copy time	5.7 seconds or less (1:1, A4/11 × 8 ¹ / ₂ ")	
Resolution	Scanning: 600 × 600 dpi Printing: 600 × 600 dpi	
Continuous copying	1 to 999 sheets	
Copying magnification	Any ratio from 25 to 400 % (1 % increments) and fixed magnifications.	

Printer Functions

Printing speed	Same as Copying speed
First copy time	5.7 seconds or less (1:1, A4/11 × 8 ¹ / ₂ ")
Resolution	600 dpi
Applicable OS	Microsoft Windows 2000/XP/Vista Windows Server 2003 Apple Macintosh OS 10.x
Interface	Network interface: 1 USB 2.0: 1 (USB Hi-Speed) Network interface card (optional): 1

Document Processor (optional)

Original feed system	Automatic feeding
Acceptable originals	Sheets of paper
Original sizes	Max.: A3/11 × 17" Min.: A5R/5 1/2 × 8 1/2"
Original paper weight	45 g/m ² to 160 g/m ²
Acceptable number of originals	50 sheets (50 g/m ² to 80 g/m ²) Mixed original sizes (auto select) 30 sheets (50 to 80 g/m ²) maximum
Mixed original sizes (auto select)	30 sheets (50 to 80 g/m ²) maximum
Dimensions (W) × (D) × (H)	21 47/64 × 18 1/64 × 4 47/64 552 × 483 × 120 mm
Weight	Approx. 13.2 lb./6 kg

Paper Feeder (optional)

Paper feed system	Automatic feeding from cassettes (300-sheet [80 g/m ²] capacity)
Paper sizes	A3, B4, A4, A4R, B5, B5R, A5R, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 11 × 8 1/2", 8 1/2 × 11" (Letter), 5 1/2 × 8 1/2" (Statement), 8 1/2 × 13" (Oficio II), 8K, 16K
Acceptable paper	Weight: 64 to 105 g/m ² Types: Standard paper, recycled paper
Dimensions (W) × (D) × (H)	568 × 546 × 135 mm
Weight	Approx. 6 kg

Duplex Unit (optional)

System	Internal type
Paper sizes	A3, B4, A4, A4R, B5, B5R, A5R, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 11 × 8 1/2", 8 1/2 × 11" (Letter), 5 1/2 × 8 1/2" (Statement), 8 1/2 × 13" (Oficio II), 8K, 16K, 16KR
Acceptable paper	Weight: 64 to 80 g/m ² Types: Standard paper, recycled paper
Dimensions (W) × (D) × (H)	14 19/64 × 2 9/64 × 7 9/64 368 × 54 × 181 mm
Weight	Approx. 0.5 kg

Finisher (optional)

Number of trays	1
Paper sizes	A3, B4, A4, A4R, B5, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 11 × 8 1/2", 8 1/2 × 11" (Letter), 8 1/2 × 13" (Oficio II)
Acceptable paper	Weight: 60 to 105 g/m ² Types: Standard paper, recycled paper, color paper, thin paper, thick paper, and letterhead
Dimensions (W) × (D) × (H)	12 51/64 × 17 23/32 × 6 1/2" 325 × 450 × 165 mm
Weight	Approx. 17.6 lbs/8 kg

Job Separator (optional)

Number of trays	1
Tray capacity	100 sheets (80 g/m ²)
Paper sizes	A3, B4, A4, A4R, B5, B5R, A5R, Folio, 11 × 17" (Ledger), 8 1/2 × 14" (Legal), 11 × 8 1/2", 8 1/2 × 11" (Letter), 5 1/2 × 8 1/2" (Statement), 8 1/2 × 13" (Oficio II)
Acceptable paper	Weight: 64 to 105 g/m ² Types: Standard paper, recycled paper
Dimensions (W) × (D) × (H)	21 15/32 × 17 23/32 × 2 49/64 545 × 450 × 70 mm
Weight	Approx. 3.3 lb./1.5 kg

Environmental Specifications

Recovery time from the low power mode	10 seconds
Recovery time from Sleep mode	17,2 seconds or less
Transition time to the low power mode (at time of purchase)	1 minute
Transition time to the sleep mode (at time of purchase)	1 minute
Duplex (2-sided) copying	Option
Paper feed	Recycled paper made from 100 % recycled pulp may be used with this product.

Note Please consult with your dealer or service representative for information on the recommended types of paper, etc.

Index

Numerics

2 in 1	3-11
4 in 1 (horizontal arrangement)	3-12
4 in 1 (vertical arrangement)	3-13

A

Additional memory	4-11
Application software	3-18
Auto clear function	1-6
Auto low power function	3-16
Auto sleep function	3-17
Auto zoom ratio selection mode	3-4

B

Bypass tray extension	1-1, 2-5
-----------------------------	----------

C

Cassette	1-1, 2-2
Charger cleaner rod	1-2, 5-7
Cleaning	5-1
Cleaning the original cover	5-1
Cleaning the platen	5-1
Cleaning the separation needle	5-2
Cleaning the slit glass	5-2
Cleaning the transfer roller	5-3
Combine copying	3-10
Connecting the cables	2-9
Connecting the power cord	2-10
Copier basic screen	1-7
Copier functions	Appendix-2
Copy	3-1

D

Date	2-15
Date and time	2-14
Daylight Saving Time	2-15
Default gateway	2-13
Displayed messages	6-4
Document processor	4-1, Appendix-3
Duplex copying	3-6
Duplex unit	4-5, Appendix-3

E

Environmental specifications	Appendix-4
Exposure	3-2

F

Fax kit	4-10
Finisher	4-6, Appendix-4
Front cover	1-2

G	
Grounding the machine	ii-ix
I	
If trouble occurs	6-1
Image quality mode	3-2
Initial mode	1-6
Interrupt mode	3-14
IP address	2-12
J	
Jam location indicators	6-9
Job separator	4-9, Appendix-4
K	
Key counter	4-10
L	
Language setting	2-16
Left cover	1-2
Loading paper	2-1
Loading paper into the cassette	2-2
Low power mode	3-16
M	
Main power switch	1-3, 2-11, 3-1
Maintenance	5-1
Memory card (CompactFlash)	4-10
Message display	1-7
Multi purpose tray settings	2-7
Multi-purpose tray	1-1, 2-4
N	
Names of parts	1-1
Names of parts (document processor)	4-2
Names of parts (finisher)	4-6
Network (TCP/IP) settings	2-12
Network cable	2-9
Network interface connector	1-3, 2-9
Network scanner kit	4-10
O	
Operation panel	1-1, 1-4
Option	4-1, 4-12
Original cover	1-1
Other regular size	2-7
Output tray	1-1, 3-2
P	
Paper feeder	4-5, Appendix-3
Paper jam in the document processor	6-15
Paper jam in the finisher	6-16
Paper jam in the job separator	6-18

Paper jam in the left cover	6-13
Paper jam in the multi-bypass tray	6-12
Paper jam in the paper output slot	6-14
Paper jam inside cassette 1	6-10
Paper jam inside cassettes 2 to 4	6-11
Paper jams	6-9
Paper length adjusting tab	1-1, 2-3
Paper width adjusting tab	1-1, 2-2
Parallel cable	2-9
Parallel interface connector	2-9
Photo	3-2
Platen	1-2, 3-1
Power cord	2-10
Preset zoom mode	3-5
Printer basic screen	1-7
Printer cable	2-9
Printer driver	3-18
Printer functions	Appendix-2
Printing	3-18
R	
Resolution	Appendix-2
S	
Setting paper in the multi-bypass tray	2-4
Sleep mode	3-17
Slider	1-1, 2-5
Sort copying	3-9
Specifications	Appendix-1
Split copying	3-7
Staple	4-7, 4-8
Subnet mask	2-13
T	
Text	3-2
Text + Photo	3-2
Time of Day	2-14
Time Zone	2-14
Toner container	1-2, 5-5
Turning the power on	2-11
U	
USB cable	2-9
USB interface connector	1-3, 2-9
W	
Warm up	2-11, 3-1
Waste toner box	1-2, 5-5
Z	
Zoom copying	3-4
Zoom mode	3-5

MEMO

MEMO

MEMO

For best print results and machine performance, we recommend that you use only OLIVETTI original supplies for your OLIVETTI products.



DICHIARAZIONE CE DI CONFORMITA' del COSTRUTTORE secondo EN45014
MANUFACTURER'S CE DECLARATION of CONFORMITY according to EN 45014

OLIVETTI S.p.A. Via Jervis, 77 - 10015 IVREA (TO) - ITALY

Dichiara sotto la sua responsabilita' che i prodotti:

Declares under its sole responsibility that the products:

Categoria generale:	Apparecchiature per la Tecnologia dell' Informazione
<i>Equipment category:</i>	Information Technology Equipment
Tipo di apparecchiatura:	Copiatrice Laser digitale multifunzionale
<i>Product type:</i>	Multifunctional Digital laser copier
Modello/Product name:	d-Copia 1800MF, d-Copia 2200MF
Opzioni/Options:	DP-420, PF-420, DU-420, JS-420, DF-420, IB-23, HD-5A, FAX System(R), Scan System (F)B

sono CONFORMI alla Direttiva 1999/5/CE del 9 marzo 1999
are in compliance with directive 99/5/EC dated 9th march 1999

e soddisfano i requisiti essenziali di **Compatibilità Elettromagnetica e di Sicurezza** previsti dalle Direttive:
and fulfill the essential requirements of Electromagnetic Compatibility and of Electrical Safety as prescribed by the Directives:

2004/108/CE del 15 Dicembre 2004;
2004/108/EC dated 15th December 2004;
2006/95/CE del 12 Dicembre 2006;
2006/95/EC dated 12th December 2006;

in quanto progettati e costruiti in conformità alle seguenti Norme Armonizzate:
since designed and manufactured in compliance with the following European Harmonized Standards:

EN 55022:2006 (Limits and methods of measurements of radio interference characteristics of Information Technology Equipment) / Class B;

EN 61000-3-2:2006 (Electromagnetic Compatibility (EMC) - Part 3: Limits - Section 2: Limits for harmonic current emissions (equipment input current ≤ 16 A per phase)

EN 61000-3-3:1995 + A1:2001 + A2:2005 (Electromagnetic Compatibility (EMC) - Part 3: Limits - Section 3: Limitation of voltage fluctuations and flicker in low voltage supply systems for equipment with rated current up to and including 16A);

EN 55024:1998 + A1:2001 + A2:2003 (Electromagnetic Compatibility – Information technology equipment – Immunity characteristics – Limits and methods of measurement);

EN 60950-1:2001 + A11:2004 (Safety of Information Technology Equipment, including electrical business equipment).

EN 60825-1:1994 + A1:2002 + A2:2001 (Radiation Safety of laser products, equipment classification, requirements ad user's guide).

EN300 330-1 V1.5.1/2006

EN300 330-2 V1.3.1/2006

ETSI TBR 21:1998 Requirements for pan-European approval for connection to the analogue Public Switched Telephone Networks (PSTN) of TE (excluding TE supporting the voice telephony service) in which network addressing, if provided, is by means of Dual Tone Multi Frequency (DTMF) signaling.

La conformità ai suddetti requisiti essenziali viene attestata mediante l'apposizione della **Marcatura CE** sul prodotto.

*Compliance with the above mentioned essential requirements is shown by affixing the **CE marking** on the product.*

Ivrea, 15 Luglio 2009
Ivrea, 15th July 2009

Francesco Forlenza
 p.p. Olivetti S.p.A.

Note: 1) La Marcatura CE è stata apposta nel 2009

Notes: 1) *CE Marking has been affixed in 2009*

2) Il Sistema della Qualità è conforme alle norme serie UNI EN ISO 9000.

2) *The Quality System is in compliance with the UNI EN ISO 9000 series of Standards*

DIRECTIVE 2002/96/CE ON THE TREATMENT, COLLECTION, RECYCLING AND DISPOSAL OF ELECTRIC AND ELECTRONIC DEVICES AND THEIR COMPONENTS

INFORMATION

1. FOR COUNTRIES IN THE EUROPEAN UNION (EU)

The disposal of electric and electronic devices as solid urban waste is strictly prohibited: it must be collected separately.

The dumping of these devices at unequipped and unauthorized places may have hazardous effects on health and the environment.

Offenders will be subjected to the penalties and measures laid down by the law.

TO DISPOSE OF OUR DEVICES CORRECTLY:

- a) Contact the Local Authorities, who will give you the practical information you need and the instructions for handling the waste correctly, for example: location and times of the waste collection centres, etc.
- b) When you purchase a new device of ours, give a used device similar to the one purchased to our dealer for disposal.



The crossed dustbin symbol on the device means that:

- when it to be disposed of, the device is to be taken to the equipped waste collection centres and is to be handled separately from urban waste;
- The producer guarantees the activation of the treatment, collection, recycling and disposal procedures in accordance with Directive 2002/96/CE (and subsequent amendments).

2. FOR OTHER COUNTRIES (NOT IN THE EU)

The treatment, collection, recycling and disposal of electric and electronic devices will be carried out in accordance with the laws in force in the country in question.