

Use of the SMS service

olivetti

EDITED/PUBLISHED/PRODUCED BY:

Olivetti S.p.A. con unico azionista
Gruppo Telecom Italia
Direzione e coordinamento di Telecom Italia S.p.A.

Printed in Thailand.

Code of user manual: 259757T-01

Date of publication: January 2007.

Copyright © 2007, Olivetti

All rights reserved. No parts of this manual may be photocopied, reproduced or translated into other languages without prior written authorization from Olivetti S.p.A.

The fax machine and cordless phone enable you to **send and receive messages (SMS) and to save** up to 40 messages, of which: 5 written and sent, 5 written but not yet sent and 30 received.

NOTE

For **details on the SMS service**, please **contact the manager of the telephone network** to which you are connected.

TO ACTIVATE THE SMS SERVICE

This procedure may be carried out from the fax machine only.

NOTE

To activate the SMS service, the caller ID function (CLIP) may have to be activated by the telephone company: call your telephone company for further details.

IMPORTANT

To **activate** the SMS service you must **set**, both for sending and for receiving message, the **numbers indicated by the "SMS Service Centre" and provided by your network operator**. After having activated this service, you can send and receive messages (SMS) every time you wish:

1. Press the key:



The display shows:

MESSAGES MENU
SEND SMS ◆

2. Press the keys



until the display shows:

MESSAGES MENU
CONFIGURATION ◆

3. Press the key:



The display shows:

CONFIGURATION
SERV. CENTRE NO. ◆

4. Press the key:



The display shows:

SERV. CENTRE NO.
TX SERV. CENTRE ◆

5. Press the key:



The display shows:

TX SERV. CENTRE
XXXX

If the number that appears on the lower line of the display coincides with the number provided by your network operator, skip to step 7, otherwise move on to the next step.

6. Dial the number provided by your network operator. To do this, press the keys:



7. To confirm the number, press the key:



The display shows:

SERV. CENTRE NO.
TX SERV. CENTRE ◆

8. Press the keys



until the display shows:

SERV. CENTRE NO.
RX SERV. CENTRE ◆

9. Press the key:



The display shows:

RX SERV. CENTRE
XXXX

If the number that appears on the lower line of the display coincides with the number provided by your network operator, skip to step 11, otherwise move on to the next step.

10. Dial the number provided by your network operator. To do this, press the keys:



11. To confirm the number, press the key:



12. To return the fax machine to its initial stand-by mode, press the key:



13. If you want to move back one function, press the key:



c

TO SEND MESSAGES (SMS)

Not only can you send messages (SMS) (max. 160 characters each), but you can also:

- ensure the correct operation of SMS service if the recipients have more than a telephone set connected to the same telephone line.

TO WRITE AND SEND A MESSAGE (SMS)

TO WRITE AND SEND A MESSAGE FROM THE FAX MACHINE

1. Press the key:

 The display shows:



MESSAGES MENU
SEND SMS ◆

2. Press the key:

 The display shows:

SMS TEXT 160

3. Write the text of the message (max. 160 characters). To do this, press the keys

  to enter in sequence the following numbers and characters:

Key 1 = @ space 1 . / -

Key 2 = a b c å ä æ à ç 2 Γ

Key 3 = d e f è É é 3 Δ Φ

Key 4 = g h i ì 4

Key 5 = j k l 5 Λ



Key 6 = m n o ñ ö Ø ò 6

Key 7 = p q r s β 7 Π Σ

Key 8 = t u v ü ù 8


Key 9 = w x y z 9


Key 0 = space + & / % 0 € £ ¥ \$ ¿ § j ð ÷ Ψ Ω


  To enter the following characters:

Key * = * space ~ . / \ , ; _ : ' " ? !

Key # = # & % + \$ < = > @ () ^ | []

 To change from upper case letters to lower case letters and vice versa.

 To scroll the cursor on alphanumeric characters already keyed in or to leave a blank space.

 To delete a character on the left hand side of the cursor.

It deletes all the text if kept pressed.

When writing the text, on the upper right hand side for the display, the maximum number of characters to be entered is displayed (160). This number decreases every time you enter a character, you can thus know how many characters you have entered and how many you can still enter.

4. To confirm the setting, press the key:

 The display shows:

TYPE NUMBER

5. Type your correspondent's number directly on the numeric keypad.

6. If you like, you can find your correspondent's number in the phone book (see "To program the phone book").

To do this:


1. Press the key .

2. Press the keys  to find the desired number.

or

1. Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.

7. To confirm the setting, press the key:

 The display shows:

TERMINAL NO.

YES ◆

You can choose any of the following options:


"TERMINAL NO.: YES": If the recipient owns two or more telephone set, up to 10 (from 0 to 9).

"TERMINAL NO.: NO" : If the recipient owns only one telephone set connected to the telephone line; in this case skip to step 11.

8. To see the other available option, "TERMINAL NO.: NO", press the keys:



9. To confirm the setting, press the key:

 If you have chosen "TERMINAL NO.: NO", skip to step 11, otherwise move on to the next step.

If you have chosen "TERMINAL NO.: YES", the display shows:


TERMINAL NO.

{0-9} X

10. Type the number corresponding to the terminal on which the recipient wants to receive your message. To do this, press the keys:

11. To confirm the setting, press the key:

 The display shows:

SEND

YES ◆

12. To confirm the setting, press the key:



The fax machine starts transmitting and the message "TRANSMITTING" appears on display.

If the transmission has been completed successfully, at the end the message "TX COMPLETED" appears on display for a few seconds.

Otherwise, if the transmission has not been completed successfully, at the end on the display appears the message "TX ERROR" for a few seconds followed by an acoustic signal and error led "●▲" lights on.

In both cases, at the end of the transmission, the display shows:

SAVE SMS
NO ◆

13. To see the other available option, press the keys:



The display shows:

SAVE SMS
YES ◆

14. To confirm the setting, press the key:



15. To remove the message from the display and to switch off error led "●▲", press the key:



TO WRITE AND SEND A MESSAGE FROM THE CORDLESS PHONE

1. Press the upper or lower part of the key



until the display shows:

SMS MENU

2. Press function key F3:



The display shows:

WRITE MESSAGE

3. Press function key F3:



The display shows:

NEW MESSAGE

4. Write the text of the message (**max. 160 characters**). To do this, press the keys



to enter in sequence the following numbers and characters:

Key 1 = space 1 @ \$ ¥ £ € % / °

Key 2 = Small letters = a b c 2 ä à å æ ç

Capital letters = A B C 2 Ä Å Æ

Key 3 = Small letters = d e f 3 è é

Capital letters = D E F 3 É Δ Φ

Key 4 = Small letters = g h i 4 ì

Capital letters = G H I 4 Γ

Key 5 = Small letters = j k l 5

Capital letters = J K L 5 Λ

Key 6 = Small letters = m n o 6 ñ ò ö ø

Capital letters = M N O 6 Ñ Ö Ø Ω

Key 7 = Small letters = p q r s 7 ß

Capital letters = P Q R S 7 Π Ψ Σ

Key 8 = Small letters = t u v 8 ù ü

Capital letters = T U V 8 Ü Θ

Key 9 = Small letters = w x y z 9

Capital letters = W X Y Z 9 Ξ

Key 0 = 0 ! ? ¡ ¸ & §



To enter the following characters:

Key * = * . , " ' : ; + - = < >

Key # = # () [] { } _ \ | ~ ^



Function key F2: to select one of the following options in sequence: capital letters only, small letters only and capital letters only for the first letter of the first word of each phrase.



To scroll to the left (upper part of key) or to the right (lower part of key).



Function key F1: to delete the character to the left of the cursor.

While you write the message, at the bottom of the display you will see the maximum number of characters that you can enter (160). This number decreases by one for each character entered so that you can tell how many characters you have already entered and how many you have left.

If you like, you can also take a number from your phone book and put in the message. To insert a number, follow the procedure from step 5; otherwise, skip straight to step 12.

5. Press function key F3:



The display shows:

SEND TO

6. Press the upper or lower part of the key



until the display shows:

INSERT NUMBER

7. Press function key F3:



The display shows:


INSERT NUMBER

8. Press function key F2:



The display shows, in alphabetical order, the names (where set) and the fax or telephone numbers associated with the 60 available positions (00-59) saved previously (see the "Transmission and reception operations" chapter of the "Instructions" fax machine manual).

9. To find the number you wish to insert in the message, you can:

1. Press the upper or lower part of the  key until the desired name or number appears on the display.

Or

2. Press the key bearing the first letter of the name you want to find. The cordless phone will search for the name in alphabetical order.

10. To select the number displayed, press function key F3:



11. To insert the number displayed in the message, press function key F3:



12. To confirm the setting, press function F3:



The display shows:

SEND TO

13. Press function key F3 again:



The display shows:

SEND TO

14. Type the correspondent's number directly on the numeric keypad of the cordless phone by pressing keys:



15. If you have made a mistake, to delete the number to the left of the cursor, press the key:



16. If you like, you can search for the correspondent's name or number in the phone book (see the "**Transmission and reception operations**" chapter of the "**Instructions**" fax machine manual").

To do this:

1. Press function key F2 ().
 2. Press the upper or lower part of the key until the desired name or number appears on the display.
- Or
1. Press the key bearing the first letter of the name you want to find. The cordless phone will search for the name in alphabetical order.

17. To confirm the number, press function key F3:



The display shows:

SEND MODE

TEXT

18. If you want to save the messages, follow the procedure from step 19; otherwise skip to step 22.

19. Press function key F2:



The display shows:

SEND OPTION

SAVE

20. Press function key F3:



The display shows:

SEND OPTION

AUTO SAVE

OFF ON

21. To save the messages automatically, press function key F3 (). If you don't want to save them, press function key F1 (). In either case, the display will show the message again.

SEND MODE

TEXT

22. Press function key F2:



23. Press the upper or lower part of the key



until you select the option:

TERMINAL

24. Press function key F3:



The display shows:

TERMINAL

OFF ON

25. If the recipient has 2 or more telephones up to a maximum of 10 (from 0 to 9), press function key F3 () , set and confirm the number of the desired telephone. If the recipient only has one telephone, press function key F1 (). In either case, the display will show the message again.

SEND MODE

TEXT

26. Press function key F3:



The display shows:

SENDING MESSAGE

If the message has been sent correctly, a message indicating that it has been delivered will appear on the display for a few seconds.

If the message has not been sent correctly, the display will show the message "ERROR" for a few seconds.

NOTE

If you have chosen the "SAVE SMS: YES" option on the fax machine, the message "SAVED" will appear on the display for a few seconds and your message will be saved on sent messages list, "SMS SENT". At this point you can always send it again or change it.

NOTE

If the message "MEMORY FULL", "DELETE SENT SMS" appears on display of the fax machine and the fax machine does not allow you to write the text of your message, this means that the memory for messages sent is full. At this point, delete at least one of the messages from the memory. Later on see "**To delete/edit/send again a message (SMS)**".

NOTE

If a power failure occurs, the fax machine will keep all the messages in the memory.

To save a message (SMS) without sending it

To save a message from the fax machine

1. Press the key:



The display shows:

MESSAGES MENU
SEND SMS ◆

2. Press the keys



until the display shows:

MESSAGES MENU
WRITE SMS ◆

3. Press the key:



The display shows:

SMS TEXT 160

4. Write the text of the message (max. 160 characters) as described in "**To write and send a message (SMS) - To write and send a message from the fax machine**".
5. To confirm the setting, press the key:



The message "SAVED" appears on display for a few seconds. The message will be saved on the list of written messages "SMS WRITTEN".

6. To return the fax machine to its initial stand-by mode, press the key:



To save a message from the cordless phone

1. Press the upper or lower part of the key



until the display shows:

SMS MENU

2. Press function key F3:



The display shows:

WRITE MESSAGE

3. Press function key F3:



The display shows:

NEW MESSAGE

4. Write the text of the message (max. 160 characters) as described in "**To write and send a message (SMS) - To write and send a message from the cordless phone**".
5. Press function key F3:



The display shows:

SEND TO

6. Press the upper or lower part of the key



until the display shows:

SAVE

7. Press function key F3:



The message "MESSAGE SAVED" appears on display for a few seconds. The message will be saved on the list of written messages "SMS WRITTEN".

8. To exit from programming mode, press function key F1 twice:



NOTE

If the message "MEMORY FULL", "DEL. WRITTEN SMS" appears on display of the fax machine and the fax machine does not allow you to write your message, this means that the memory for written and saved messages is full. At this point, delete at least one of the messages from the memory. Later on see "**To delete/edit/send again a message (SMS)**".

To receive messages (SMS)

The fax machine and cordless phone can receive up to 30 messages (SMS).

When a message (SMS) is received, the "●✉" led of the fax machine starts blinking; if programmed to do so, the fax machine beeps, the display shows the message "SMS RECEPTION" and then the ✉ icon. The display of the cordless phone shows the ✉ icon.

As in message transmission, you can set some parameters to:

- ensure the **correct operation of SMS service if you have more than a telephone set connected to the same telephone line** (see later on "**For an appropriate message (SMS) reception if you own more than one telephone set and only one telephone line**").
- configure the fax machine **to notify the reception of a message through an acoustic signal** (see later on "**To configure the fax machine for notifying the reception of a message (SMS) through an acoustic signal**").

IMPORTANT

To make sure that SMS messages will be received, check that the fax machine is set to connect to the telephone line after **at least 2 rings**. See the "**To change the number of rings**" section of the "**More sophisticated operations**" chapter of the fax machine user's manual.


NOTE

If the display of the cordless phone shows the message "MEMORY FULL", this means that the memory containing the received messages is almost full. If this happens you should delete a few messages from this memory. See "**To delete/edit/send again a message (SMS)**".

If the display of the cordless phone shows the ✉ icon blinking, this means that the memory containing the received SMS messages is full: if this happens, you should delete at least one message from this memory. See "**To delete/edit/send again a message (SMS)**".

To read a message (SMS) received

To read a message from the fax machine

When the display of the fax machine shows the  icon, this means that you have received at least one message (SMS). To read the message:

1. Press the key:

 The display shows:

MESSAGES MENU
SMS RECEIVED XX ◆

"XX" is the number that appears in the lower right-hand side corner and it indicates the total number of messages received (max. 30). It is useful if you want to know how many messages you have received and, therefore, how many you can still receive.

2. To confirm the setting, press the key:



 The display shows:

SMS RECEIVED
DISPLAY LIST ◆

If "MEM ALMOST FULL", "DELETE REC. SMS", appear on display, it means that the memory for messages received is almost full. It is advisable to delete some messages from this memory. See "**To delete/edit/send again a message (SMS)**".

If, on the other hand, "MEMORY FULL", "DELETE REC. SMS", appear on display, it means that the memory for messages received is full. In this case, you must delete at least one message from this memory. See "**To delete/edit/send again a message (SMS)**".

3. To confirm the setting, press the key:

 The display shows from left to right: the reference number which identifies the messages present on the list of messages received (from the oldest message to the most recent one), the  icon for messages still unread, the correspondent's telephone number, the text of the message or part of it, and the date and time.

To show all the message-related data and the text of the message on the fax machine, press once the keys:



To stop the text on the display, press again the keys:



If you wish to select the displayed message, skip to step 5, otherwise move on to the next step.

4. To find in the above-mentioned list the message that you wish to select, press the keys:



5. To select the message, press the key:



The display shows:

SMS RECEIVED
DELETE ◆

To return the fax machine to its initial stand-by mode, skip to step 8, otherwise go on with the procedure.

You can also choose one of the following options: "ANSWER", "SEND", "EDIT" or "PRINT".

ANSWER: to answer a message received (see procedure below).

EDIT and SEND: to edit and send a message again (see later on "**To delete/edit/send again a message (SMS)**").

PRINT: to print the data concerning the message you have just selected and the text of the message (see "**To print every single message within a list**", section "The lists").

6. To see one of the other available options, press the keys:




7. To confirm the setting, press the key:



8. To return the fax machine to its initial stand-by mode, press the key:



To read a message from the cordless phone

When the display of the cordless phone shows the  icon, this means that you have received at least one message (SMS). To read the SMS messages received, proceed as follows:

1. Press the upper or lower part of the key



until the display shows:

SMS MENU

2. Press function key F3:



The display shows:

WRITE MESSAGE

3. Press the upper or lower part of the key



until the display shows:

SMS RECEIVED

4. Press function key F3:



The display shows:

RECEIVED LIST

The display also shows the date and time at which the message was received and the start of the message.

5. To scroll through the messages on the list, press the upper or lower part of the key:



- To select a message, press function key F3:



- To scroll through the text of the message, press the upper or lower part of the key:



- To read another message, press function key F1:



Repeat the procedure from step 5.

- To set the cordless phone in stand-by mode, press function key F1 the necessary number of times:



To ANSWER A MESSAGE (SMS) RECEIVED

To ANSWER A MESSAGE FROM THE FAX MACHINE

- Press the key:



The display shows:

MESSAGES MENU
SMS RECEIVED XX ◆

"XX" is the number that appears in the lower right-hand side corner and it indicates the total number of messages received (max. 30). It is useful if you want to know how many messages you have received and, therefore, how many you can still receive.

- To confirm the setting, press the key:



The display shows:

SMS RECEIVED
DISPLAY LIST ◆

If "MEM ALMOST FULL", "DELETE REC. SMS", appear on display, it means that the memory for messages received already contains 28 messages, therefore, it is almost full. It is advisable to delete some messages from this memory. See "To delete/edit/send again a message (SMS)".

If, on the other hand, "MEMORY FULL", "DELETE REC. SMS", appear on display, it means that the memory for messages received is full. In this case, you must delete at least one message from this memory. See "To delete/edit/send again a message (SMS)".

- To confirm the setting, press the key:



The display shows from left to right: the reference number which identifies the messages present on the list of messages received (from the oldest message to the most recent one), the icon for messages still unread, the correspondent's telephone number, the text of the message or part of it, and the date and time.

To show all the message-related data and the text of the message on the fax machine, press once the keys:



To stop the text on the display, press again the keys:



If you wish to select the displayed message, skip to step 5, otherwise move on to the next step.

- To find in the above-mentioned list the message that you wish to select, press the keys:



- To select the message, press the key:



The display shows:

SMS RECEIVED
DELETE ◆

- Press the keys



until the display shows:

SMS RECEIVED
ANSWER ◆

- To confirm the setting, press the key:



The display shows on the upper line:

SMS TEXT 160

—

From this point on, follow the procedure described in "To write and send a message (SMS) - To write and send a message from the fax machine", as from the step in which the display shows: "SMS TEXT".

To ANSWER A MESSAGE FROM THE CORDLESS PHONE

- Press the upper or lower part of the key



until the display shows:

SMS MENU

- Press function key F3:



The display shows:

WRITE MESSAGE

- Press the upper or lower part of the key



until the display shows:

SMS RECEIVED

- Press function key F3:



The display shows:

RECEIVED LIST

The display also shows the date and time at which the message was received and the start of the message.

- To scroll through the messages on the list, press the upper or lower part of the key:



- To select a message, press function key F3:



- Press function key F2:



The display shows:

SEND TO

- Press the upper or lower part of the key



until the display shows:

REPLY

9. Press function key F3:



The display shows:

WRITE MESSAGE

From this point on, follow the procedure described in "To write and send a message (SMS) - To write and send a message from the cordless phone", as from the step in which the display shows: "WRITE MESSAGE".

NOTE

If the message "FULL MEMORY", "DELETE SMS" appears on display of the fax machine and the fax machine does not allow you to write the text of your message, this means that:

- the memory for messages sent is full
- or
- the memory for messages written and saved is full
- or
- both memories are full.

At this point, delete at least one of the messages from the memories or from both (according to each case). Later on see "To delete/edit/send again a message (SMS)".

FOR AN APPROPRIATE MESSAGE (SMS) RECEPTION IF YOU OWN MORE THAN ONE TELEPHONE SET AND ONLY ONE TELEPHONE LINE

This procedure may be carried out from the fax machine only.

If you must connect other telephone sets to the same telephone line, up to a maximum number of 9 which can receive messages (SMS), you must identify each of them with a different terminal number (between 0 and 9) to make sure that the messages reach the set desired. To give the fax machine a specified terminal number, proceed as described below. As regards other telephone sets, follow the procedures described by their manufacturers in order to obtain the same result.

1. Press the key:



The display shows:

MESSAGES MENU

SEND SMS ◆

2. Press the keys



until the display shows:

MESSAGES MENU

CONFIGURATION ◆

3. Press the key:



The display shows:

CONFIGURATION

SERV. CENTRE NO. ◆

4. Press the keys



until the display shows:

CONFIGURATION

TERMINAL NO. ◆

5. To confirm the setting, press the key:



The display shows:

TERMINAL NO.

[0-9] 0

6. Press a key from 1 to 9 to identify a terminal different from "0" so that it can receive the messages sent to it.

To do this, press the keys:



7. To confirm the setting, press the key:



8. To return the fax machine to its initial stand-by mode, press the key:



9. If you want to move back one function, press the key:



c

TO CONFIGURE THE FAX MACHINE FOR NOTIFYING THE RECEPTION OF A MESSAGE (SMS) THROUGH AN ACOUSTIC SIGNAL

This procedure may be carried out from the fax machine only.

The fax machine has already been configured for notifying the reception of a message (SMS) through an acoustic signal; if it is not, proceed as follows:

1. Press the key:



The display shows:

MESSAGES MENU

SEND SMS ◆

2. Press the keys



until the display shows:

MESSAGES MENU

CONFIGURATION ◆

3. Press the key:



The display shows:

CONFIGURATION

SERV. CENTRE NO. ◆

4. Press the keys



until the display shows:

CONFIGURATION

SMS RX ADVICE ◆

5. Press the key:



The display shows:

SMS RX ADVICE

NO ◆

6. To see the other available option, press the keys:



The display shows:

SMS RX ADVICE

YES ◆

7. To confirm the setting, press the key:



8. To return the fax machine to its initial stand-by mode, press the key:



9. If you want to move back one function, press the key:



c

TO DELETE/EDIT/SEND AGAIN A MESSAGE (SMS)

Look at the list of messages sent, written (not sent yet), or received if you want to find a message that you wish to delete, edit and/or send again.

TO DELETE/EDIT/SEND A MESSAGE FROM THE FAX MACHINE

FROM THE LIST OF MESSAGES SENT

1. Press the key:



The display shows:

MESSAGES MENU

SEND SMS ◆

2. Press the keys



until the display shows:

MESSAGES MENU

SMS SENT XX ◆

"XX" is the number that appears in the lower right-hand side corner and it indicates the total number of messages sent (max. 5). It is useful if you want to know how many messages you have sent and, therefore, how many you can still send.

3. To confirm the setting, press the key:



The display shows:

SMS SENT

DISPLAY LIST ◆

4. To confirm the setting, press the key:



The display shows from left to right: the reference number which identifies the messages present on the list of messages sent (from the oldest message to the most recent one), the correspondent's telephone number, the text of the message or part of it, and the date and time.

To show all the message-related data and the text of the message on the fax machine, press once the keys:



To stop the text on the display, press again the keys:



If you wish to delete, edit and/or send again the displayed message, skip to step 6, otherwise move on to the next step.

5. To find in the above-mentioned list the message that you wish to delete, edit and/or send again, press the keys:



6. To select the message, press the key:



The display shows:

SMS SENT

DELETE ◆

You can also choose one of the following options: "SEND", "EDIT" or "PRINT".

DELETE: to delete the message selected.

SEND: to send the same message to another recipient or to the same recipient.

EDIT: to change the message contents and send it to the same recipient or to another recipient.

PRINT: to print the data concerning the message you have just selected and the text of the message.

To edit and send a message again, see "To write and send a message (SMS) - To write and send a message from the fax machine" as from the step in which the display shows "SMS TEXT".

To print the data concerning the message selected, see "To print every single message within a list", section "The lists".

7. To see the other available options, press the keys:



8. To confirm the setting, press the key:



9. To return the fax machine to its initial stand-by mode, press the key:



FROM THE LIST OF MESSAGES WRITTEN AND SAVED

1. Press the key:



The display shows:

MESSAGES MENU

SEND SMS ◆

2. Press the keys



until the display shows:

MESSAGES MENU

SMS WRITTEN XX ◆

"XX" is the number that appears in the lower right-hand side corner and it indicates the total number of messages written and saved (max. 5). It is useful if you want to know how many messages you have saved and, therefore, how many you can still save.

- To confirm the setting, press the key:



The display shows:

SMS WRITTEN
DISPLAY LIST ◆

- From this point on, repeat the procedure as from the step in which the display shows: "DISPLAY LIST".

FROM THE LIST OF MESSAGES RECEIVED

- Press the key:



The display shows:

MESSAGES MENU
SEND SMS ◆

- Press the keys



until the display shows:

MESSAGES MENU
SMS RECEIVED XX ◆

"XX" is the number that appears in the lower right-hand side corner and it indicates the total number of messages received (max. 30). It is useful if you want to know how many messages you have received and, therefore, how many you can still receive.

- To confirm the setting, press the key:



The display shows:

SMS RECEIVED
DISPLAY LIST ◆

- From this point on, repeat the procedure as from the step in which the display shows: "DISPLAY LIST".

TO DELETE/EDIT/SEND A MESSAGE FROM THE CORDLESS PHONE

FROM THE LIST OF MESSAGES SENT

- Press the upper or lower part of the key



until the display shows:

SMS MENU

- Press function key F3:



The display shows:

WRITE MESSAGE

- Press the upper or lower part of the key



until the display shows:

SMS SENT

- Press function key F3:



The display shows:

SENT LIST

The display also shows the number of the correspondent to whom the first message was sent and the start of the message text.

- To scroll through the messages on the list, press the upper or lower part of the key:



- To select a message, press function key F3:



- To scroll through the text of the message, press the upper or lower part of the key:



To delete the message, move on to the next step.

To edit and/or send the message again, skip to step 10.

- Press function key F3:



The display shows:

SENT
DELETE MESSAGE?

- To delete the message, press function key F1:




The cordless phone returns to the list of messages. From here, to delete, edit or resend another message, repeat the procedure from step 5.

- Press function key F2:



The display shows:

SEND TO

By pressing the upper or lower part of the  key, you can select the other available option: "EDIT TEXT". "SEND TO": to send the same message to another recipient or the same recipient.

"EDIT TEXT": to edit the message and send it back to the same recipient or on to another recipient.

- To confirm the setting, press function F3:



To edit and send a message again, see "**To write and send a message (SMS) - To write and send a message from the cordless phone**".

FROM THE LIST OF MESSAGES WRITTEN AND SAVED

- Press the upper or lower part of the key



until the display shows:

SMS MENU

- Press function key F3:



The display shows:

WRITE MESSAGE

- Press the upper or lower part of the key



until the display shows:

SMS WRITTEN

- Press function key F3:



The display shows:

WRITTEN LIST

The display shows the date and time of the first message and the start of the message text.

- From this point on, repeat the procedure from step 5.

FROM THE LIST OF MESSAGES RECEIVED

1. Press the upper or lower part of the key



until the display shows:

SMS MENU

2. Press function key F3:



The display shows:

WRITE MESSAGE

3. Press the upper or lower part of the key



until the display shows:

SMS RECEIVED

4. Press function key F3:



The display shows:

RECEIVED LIST

The display shows the date and time of the first message and the start of the message text.

5. From this point on, repeat the procedure from step 5.

THE LISTS

The lists containing the messages received, sent and written but still not sent, can be displayed as described in "To delete/edit/send again a message (SMS)" and can also be printed at any moment.

When you ask for a list printout, you can read the text of the message, have a report of all the data concerning it, for example, the date and time when it was sent or received, the selected number, the transmitter's number, whether the message was appropriately delivered, etc.

Apart from printing the complete lists, you can also require the printout of each message within a list.

NOTE

These lists may be printed from the fax machine only.

TO PRINT EVERY SINGLE MESSAGE WITHIN A LIST

1. Press the key:



The display shows:

MESSAGES MENU

SEND SMS ◆

2. Press the keys



until the display shows:

MESSAGES MENU

SMS SENT XX ◆

or:

MESSAGES MENU

SMS RECEIVED XX ◆

or:

MESSAGES MENU

SMS WRITTEN XX ◆

3. To confirm the setting, press the key:



The display shows:

DISPLAY LIST ◆

4. To confirm the setting, press the key:



The display shows from left to right: the reference number which identifies the messages present on the list of messages that you have selected, the correspondent's telephone number, the text of the message or part of it, and the date and time.

To show all the message-related data and the text of the message on the fax machine, press once the keys:



To stop the text on the display, press again the keys:



If you wish to select the displayed message, skip to step 6, otherwise move on to the next step.

5. To find in the above-mentioned list the message that you wish to select, press the keys:



6. To select the message, press the key:



The display shows:

DELETE ◆

7. Press the keys



until the display shows:

PRINT ◆

8. To confirm the setting, press the key:



The fax machine prints a report containing the data of the message that you have just selected and the text of the message, and then automatically returns to its initial stand-by mode.

To PRINT THE LISTS OF MESSAGES (SMS) SENT, WRITTEN AND RECEIVED

1. Press the key:

 The display shows:

MESSAGES MENU
SEND SMS ◆

2. Press the keys

◆ until the display shows:

MESSAGES MENU
SMS SENT XX ◆

or:

MESSAGES MENU
SMS RECEIVED XX ◆

or:

MESSAGES MENU
SMS WRITTEN XX ◆

3. To confirm the setting, press the key:

 The display shows:


DISPLAY LIST ◆

4. Press the keys

◆ until the display shows:

PRINT LIST ◆

5. To confirm the setting, press the key:

 After printing the report, the fax machine automatically returns to its initial stand-by mode.

NOTE

If there are no messages in the list selected, the display shows "EMPTY LIST" and the fax machine returns to its initial stand-by mode.

To PRINT THE LIST OF CONFIGURATION PARAMETERS

1. Press the key:

 The display shows:


MESSAGES MENU
SEND SMS ◆

2. Press the keys:

◆ until the display shows:

MESSAGES MENU
CONFIGURATION ◆

3. Press the key:

 The display shows:


CONFIGURATION
SERV. CENTRE NO. ◆

4. Press the keys

◆ until the display shows:

CONFIGURATION
PRINT CONFIG. ◆

5. To confirm the setting, press the key:

 After printing the report, the fax machine automatically returns to its initial stand-by mode.

259757T-01