


olivetti

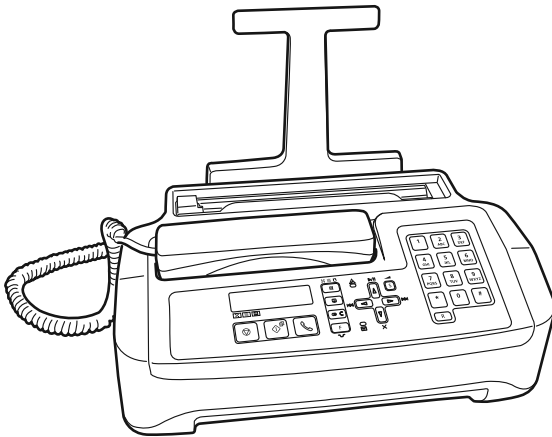

INK-JET FAX

FAX_LAB 650/680

USER'S GUIDE

EDITED/PUBLISHED/PRODUCED BY:

Printed in China.

Olivetti S.p.A. con unico azionista
Gruppo Telecom Italia

Code of user's guide: 381746B-01

Direzione e coordinamento di Telecom Italia S.p.A. Date of publication: September 2008.

Copyright © 2008, Olivetti

All rights reserved. No parts of this manual may be photocopied, reproduced or translated into other languages without prior written authorization from Olivetti S.p.A.

The manufacturer reserves the right to make any changes to the machine described in this manual, at any time, and without prior warning.

This machine has been approved, under the terms of Council Decision 98/482/EC, for Europe-wide connection as a single terminal to an analogue Public Switched Telephone System (PSTN) system. However, due to differences between individual PSTNs in the various countries, the approval does not unconditionally guarantee success operation of every PSTN termination point. If you encounter any problems, you should contact your supplier immediately.

The manufacturers declare under their own responsibility that this product complies with provisions laid down by the directive 1999/05/CE (the full declaration can be found at the end of this manual).

Conformance is certified by the application of the mark  to the product.

Network compatibility declaration

This product has been designed and developed to operate in the networks of all European Community countries, and in those of Switzerland and Norway.

Full compatibility with the networks of individual countries will depend on specific national software parameters which can be set in the product. If you encounter problems with non EC PSTN networks, contact your national technical support service.

Your attention is drawn to the following conditions that could compromise the conformity attested above as well as the machine's characteristics:

- incorrect electrical supply;
 - incorrect installation, erroneous or improper use, or any use that differs from what is indicated in the User Manual supplied with the machine;
 - replacement of components or original parts using other types, not approved by the manufacturer, or where carried out by unauthorized persons.
-

The electrical socket must be near to hand and easily accessible. To disconnect the machine from the electrical power supply, unplug it from the supply socket.

CONTENTS

1	BEFORE YOU START	1-1
	CONSULTING THE MANUAL	1-2
	ENVIRONMENTAL RECYCLING	1-2
	FOR COUNTRIES IN THE EUROPEAN UNION (EU)	1-2
	FOR OTHER COUNTRIES (NOT IN THE EU)	1-2
	SAFETY PRECAUTIONS	1-3
	RISK OF AN ELECTRIC SHOCK	1-3
	RISK OF SUFFOCATION	1-3
	RISK OF FIRE	1-3
	RISK OF ACCIDENT	1-3
	OPERATING PRECAUTIONS	1-4
	IMPROPER USE	1-4
	ABOUT THE INSTALLATION AND SETUP PARAMETERS	1-4
2	GETTING TO KNOW THE FAX MACHINE	2-1
	CONSOLE	2-2
	EXTERNAL COMPONENTS	2-4
	INTERNAL COMPONENTS	2-5
3	INSTALLATION INSTRUCTIONS	3-1
	PACKAGE CONTENTS	3-2
	INSTALLATION CONDITIONS	3-2
	CONNECTING TO THE TELEPHONE LINE AND POWER SUPPLY	3-2
	CONNECTING THE TELEPHONE HANDSET	3-2
	CONNECTING THE FAX MACHINE TO THE TELEPHONE LINE	3-3
	CONNECTING AN EMERGENCY TELEPHONE (IN THE EVENT OF A VOLTAGE DROP OR POWER FAILURE)	3-3
	CONNECTING THE FAX MACHINE TO THE POWER SUPPLY	3-4

SETTING SOME PARAMETERS	3-4
SETTING THE LANGUAGE AND THE COUNTRY OF DESTINATION	3-4
CHANGING THE LANGUAGE AND THE COUNTRY OF DESTINATION	3-5
CHANGING THE COUNTRY ONLY	3-5
CHANGING THE LANGUAGE ONLY	3-6
SETTING THE DATE AND TIME FOR THE FIRST TIME	3-6
CHANGING THE DATE AND TIME	3-7
SWITCHING FROM A PUBLIC LINE TO A PRIVATE LINE (PBX)	3-8
SETTING YOUR NAME AND FAX NUMBER	3-9
SETTING UP THE FAX MACHINE	3-11
FEEDING THE PRINT PAPER INTO THE MACHINE	3-11
INSERTING THE PRINT CARTRIDGE	3-12
PRINTING THE MENU AND ITS FUNCTIONS	3-14

4 FAX TRANSMISSION AND RECEPTION OPERATIONS 4-1

SENDING A DOCUMENT	4-2
WHAT DOCUMENTS MAY BE USED	4-2
PLACING THE DOCUMENT IN THE ADF	4-2
ADJUSTING THE CONTRAST AND RESOLUTION	4-3
SENDING A DOCUMENT	4-4
HEARING THE DIALING TONE WHEN SENDING A DOCUMENT	4-4
SENDING A DOCUMENT WITH THE RECEIVER RAISED	4-5
AUTOMATIC REDIAL	4-5
SENDING A DOCUMENT TO SEVERAL CORRESPONDENTS	4-5
SENDING A DOCUMENT FROM THE MEMORY	4-5
CHANGING/REPEATING/DELETING A TRANSMISSION FROM THE MEMORY THAT IS ALREADY SET	4-6
RECEIVING A DOCUMENT	4-7
CHOOSING THE RECEPTION MODE	4-7
RECEIVING DOCUMENTS IN THE VARIOUS RECEPTION MODES	4-8
RECEIVING A DOCUMENT IN POLLING MODE	4-8
FIRST OF ALL, WHAT POLLING IS	4-8
MAKING A TRANSMISSION REQUEST (POLLING RECEPTION)	4-9
CHANGING A POLLING RECEPTION THAT HAS BEEN SET	4-9
DELETING A POLLING RECEPTION THAT HAS BEEN SET	4-10

5	PHONE BOOK	5-1
	PHONE BOOK	5-2
	PROGRAMMING THE PHONE BOOK	5-2
	MODIFYING A NUMBER FROM THE PHONE BOOK	5-3
	DELETING A NUMBER FROM THE PHONE BOOK	5-3
	PRINTING DATA FROM THE PHONE BOOK	5-4
	SENDING A DOCUMENT USING THE PHONE BOOK SEARCH FUNCTION	5-4
	SENDING A DOCUMENT USING THE QUICKEST METHOD	5-4
6	USING THE TELEPHONE	6-1
	USING THE TELEPHONE	6-2
	TELEPHONING BY SEARCHING THROUGH THE PHONE BOOK	6-2
	TELEPHONING USING THE QUICKEST METHOD	6-2
	REDIALLING ONE OF THE LAST 20 INCOMING NUMBERS OR ONE OF THE LAST 10 OUTGOING NUMBERS	6-3
7	THE TELEPHONE ANSWERING DEVICE	7-1
	THE TELEPHONE ANSWERING DEVICE	7-2
	TURNING ON THE TAD	7-2
	THE TAD CONSOLE	7-3
	OUTGOING MESSAGES AND MEMOS	7-4
	RECORDING OGM1 (OUTGOING MESSAGE 1)	7-5
	LISTENING TO OGM1 (OUTGOING MESSAGE 1)	7-5
	RECORDING OGM2 (OUTGOING MESSAGE 2)	7-5
	LISTENING TO OGM2 (OUTGOING MESSAGE 2)	7-6
	ERASING OGM2 (OUTGOING MESSAGE 2)	7-6
	RECORDING THE TRANSFER MESSAGE (OGM3)	7-6
	LISTENING TO THE TRANSFER MESSAGE	7-6
	RECORDING MEMOS	7-6
	SETTING THE LENGTH OF MEMOS AND INCOMING MESSAGES ..	7-7
	LISTENING TO INCOMING MESSAGES AND MEMOS	7-7
	DELETING MESSAGES AND MEMOS YOU HAVE ALREADY LISTENED TO	7-8
	DELETING THE MESSAGE OR MEMO YOU ARE LISTENING TO	7-8
	DELETING ALL MESSAGES ALREADY PLAYED	7-8

TRANSFERRING MESSAGES AND MEMOS TO A REMOTE TELEPHONE	7-8
OPERATING THE TELEPHONE ANSWERING DEVICE FROM A REMOTE LOCATION	7-9
SECURITY AND ACCESS FUNCTIONS	7-9
SETTING THE TAD ACCESS CODE	7-10
CHANGING/DELETING THE TAD ACCESS CODE	7-10
ENABLING/DISABLING ACCESS TO THE TELEPHONE ANSWERING DEVICE IN LOCAL MODE	7-10
OPERATING THE TELEPHONE ANSWERING DEVICE FROM A REMOTE LOCATION	7-11
SPECIAL FUNCTIONS OF THE TELEPHONE ANSWERING DEVICE	7-12
TOLL SAVER	7-12
OUTGOING MESSAGE ONLY	7-13
SILENT RECEPTION OF INCOMING MESSAGES.	7-13
PRINTING THE TAD CONFIGURATION PARAMETERS.	7-14
8 MAKING COPIES	8-1
MAKING COPIES.	8-2
WHAT DOCUMENTS CAN BE COPIED.	8-2
MAKING A COPY	8-2
9 MORE ADVANCED OPERATIONS	9-1
ADVANCED RECEPTION SETTINGS	9-2
REDUCING THE AREA OF A DOCUMENT RECEIVED.	9-2
RECEIVING A DOCUMENT THAT IS LONGER THAN THE PAPER SIZE USED.	9-2
ENABLING/DISABLING SILENT RECEPTION.	9-3
DISPLAYING THE CALLER ID.	9-3
CHANGING THE NUMBER OF RINGS	9-4
CHANGING THE RING VOLUME.	9-5
ENABLING/DISABLING RECOGNITION OF THE RING FREQUENCY	9-5
CHANGING THE LENGTH OF THE ACOUSTIC SIGNAL.	9-6
CHANGING THE SILENCE LAPSE.	9-6
CHANGING THE REMOTE CONTROL CODE	9-7
SETTING THE BLACK LIST	9-8
MODIFYING THE BLACK LIST	9-8

DELETING THE BLACK LIST	9-8
PRINTING THE BLACK LIST	9-9
ADVANCED TRANSMISSION SETTINGS	9-9
CHANGING THE POSITION OF YOUR NAME AND FAX NUMBER	9-9
HEARING THE LINE SIGNALS	9-10
REGULATING THE SPEAKER VOLUME	9-10
REGULATING THE BUZZER VOLUME	9-10
ENABLING/DISABLING THE FLASH FUNCTION	9-11
ENABLING/DISABLING ECM	9-12
10 PRINTING REPORTS AND LISTS	10-1
PRINTING REPORTS	10-2
READING THE REPORTS	10-2
ENABLING/DISABLING THE AUTOMATIC PRINTING OF THE TRANSMISSION AND FAILED TRANSMISSION REPORT	10-3
PRINTING THE TRANSMISSION, ACTIVITY, BROADCAST TRANSMISSION AND CALLER ID REPORTS ON REQUEST	10-4
PRINTING LISTS	10-4
PRINTING THE LIST OF INSTALLATION PARAMETERS	10-4
PRINTING THE LIST OF SETUP PARAMETERS	10-4
PRINTING THE LIST OF RECEPTION SETUP PARAMETERS	10-5
PRINTING THE BLACK LIST NUMBERS	10-5
PRINTING THE DATA SAVED IN THE PHONE BOOK	10-5
11 TROUBLESHOOTING GUIDE	11-1
GENERAL	11-2
MINOR PROBLEMS	11-3
ERROR CODES	11-4
SIGNALS AND MESSAGES	11-5
ACOUSTIC ERROR SIGNALS	11-5
OTHER ACOUSTIC SIGNALS	11-6

12 MAINTENANCE OPERATIONS.....	12-1
REPLACING THE PRINT CARTRIDGE.....	12-2
CLEANING THE PRINT CARTRIDGE AND TESTING THE NOZZLES . . .	12-5
CLEANING THE ELECTRICAL CONTACTS OF THE PRINT CARTRIDGE	12-6
CLEANING THE OPTICAL READER.....	12-8
CLEANING THE CASING	12-11
REMOVING JAMMED DOCUMENTS	12-11
REMOVING JAMMED SHEETS OF PAPER.....	12-12
APPENDIX	A-1
TECHNICAL SPECIFICATIONS.....	A-2
GENERAL CHARACTERISTICS	A-2
COMMUNICATION CHARACTERISTICS	A-2
POWER SUPPLY CHARACTERISTICS	A-2
ENVIRONMENTAL CONDITIONS	A-2
OPTICAL READER CHARACTERISTICS	A-2
TRANSMISSION CHARACTERISTICS	A-2
RECEPTION CHARACTERISTICS	A-3
MANUFACTURER	A-4
CUSTOMER SERVICE	A-4

1 BEFORE YOU START

CONSULTING THE MANUAL

ENVIRONMENTAL RECYCLING

SAFETY PRECAUTIONS

ABOUT THE INSTALLATION AND SETUP PARAMETERS

CONSULTING THE MANUAL

This manual describes two models of fax machine, the only difference between them being that one is equipped with a built-in telephone answering device and the other is not.

In the description that follows, whenever a distinction is to be made between these two models, reference will be made to "**Base model**" and "**Model with a built-in TAD**".

ENVIRONMENTAL RECYCLING

The cardboard box, the plastic present in the package and the various parts of the fax machine may be recycled in accordance with the recycling regulations in force in your country.

Information about Directive 2002/96/CE on the treatment, collection, recycling and disposal of electric and electronic devices and their components.

FOR COUNTRIES IN THE EUROPEAN UNION (EU)

The disposal of electric and electronic devices as solid urban waste is strictly prohibited: it must be collected separately.

The dumping of these devices at unequipped and unauthorized places may have hazardous effects on health and the environment.

Offenders will be subjected to the penalties and measures laid down by the law.

To dispose of our devices correctly:

- a) Contact the Local Authorities, who will give you the practical information you need and the instructions for handling the waste correctly, for example: location and times of the waste collection centres, etc.
- b) When you purchase a new device of ours, give a used device similar to the one purchased to our dealer for disposal.

The crossed dustbin symbol on the device means that:



- when it to be disposed of, the device is to be taken to the equipped waste collection centres and is to be handled separately from urban waste;
- Olivetti guarantees the activation of the treatment, collection, recycling and disposal procedures in accordance with Directive 2002/96/CE (and subsequent amendments).

FOR OTHER COUNTRIES (NOT IN THE EU)

The treatment, collection, recycling and disposal of electric and electronic devices will be carried out in accordance with the laws in force in the country in question.

SAFETY PRECAUTIONS

RISK OF AN ELECTRIC SHOCK

- Never attempt to repair the fax machine yourself. If you remove the casing, you risk getting an electric shock or suffering some other kind of injury. Repairs should be carried out by qualified technical staff only.
- **During storms we recommend you unplug the device from both the power outlet and the telephone line so as to eliminate the risk of it being damaged by lightning.**
- Never pour liquids on the fax machine and avoid exposing it to the damp. If liquids seep inside it, unplug it immediately from the mains power supply and the telephone line. Before using it again, have it repaired by qualified, technical staff.
- Do not use the fax machine outside in bad weather.
- Connect the fax machine exclusively to a certified wall power socket.
- To unplug the power cable from the wall power socket, remove the plug and refrain from yanking the cable.
- Never touch the power cable or plug with wet hands.
- Do not fold or squash the power cable. Keep it away from heat sources.
- Before cleaning the fax machine, unplug it from the wall power socket.
- Before using the fax machine, check that it has not been damaged or dropped. If it has, have it checked by a qualified engineer.

RISK OF SUFFOCATION

- The fax machine and its accessories are wrapped in plastic so do not let children play with the packaging material.

RISK OF FIRE

- If you are to leave the fax machine unused for a long period of time, you should disconnect it from the power supply: in this way, it will be protected against the risk of damage due to interference or power surges.

RISK OF ACCIDENT

- Place it on a stable, flat surface free of all vibrations so as to avoid drops that could cause damage to the machine and injury to persons.
- Lay the power cable so that it cannot be trodden on or tripped over.
- Never let children use or play with the fax machine.

OPERATING PRECAUTIONS

- Keep the fax machine in a dust-free place away from sources of water, steam and excessive heat. Do not expose it to direct sunlight.
- Ensure that no books, documents, or other objects obstruct normal ventilation in any way.
- Use the fax machine exclusively at a temperature of between 5 °C and 35 °C and a relative humidity of between 15% and 85%.
- Keep the fax machine away from other electrical and electronic appliances that may cause interference, e.g. radios, televisions, etc.
- If a voltage drop or power failure occurs, it will not be possible to make or receive telephone calls as the keypad will be disabled.
- In an emergency, if you wish to make a call, you must use a telephone certified by the telephone company, connecting it directly to the fax machine (in countries where this is allowed) or directly to the telephone wall socket.
- Leave enough room in front of the outlet from which documents and received/copied documents are unloaded, so that they do not fall on the floor.

IMPROPER USE

The fax machine was designed to send and receive documents and to copy paper documents. The machine may also be used as a telephone. All other uses are to be considered improper. In particular, it is never to be connected directly to an ISDN line and, if it is, the guarantee becomes null and void.

ABOUT THE INSTALLATION AND SETUP PARAMETERS

As the country default values for each installation and setup parameter may change due to certification requirements or specific customers' needs, these values do not always correspond to those indicated in the manual: it is therefore advisable to print them before changing them (see chapter "**Printing reports and lists**").


2 GETTING TO KNOW THE FAX MACHINE

CONSOLE

EXTERNAL COMPONENTS


INTERNAL COMPONENTS

CONSOLE

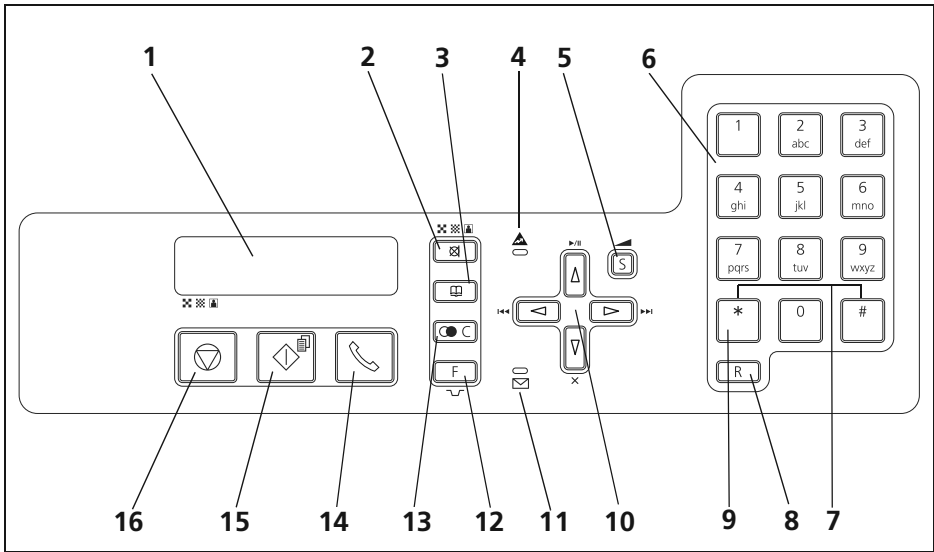


Ref.	Description
1	A two-line liquid crystal display with a capacity of 16 characters per line. Shows operator prompts and error messages.
2	<ul style="list-style-type: none"> Adjusts the resolution of the documents to be sent and copied (only with the document inserted in the ADF). Puts the line on hold during a telephone conversation (with the handset raised).
3	Gives access to the Phone book.
4	Error LED indicator, signals an operating fault during transmission or reception.
5	<ul style="list-style-type: none"> After the  key has been pressed, turns the speaker volume "up" or "down". Gives access to the SMS menu and its functions.
6	<ul style="list-style-type: none"> Dial the fax or telephone number. If held down for more than one second, they automatically dial (once set) the telephone number or fax number assigned to them. Enter numeric data. Select digits and alphanumeric characters during the entry of numbers and names.

Ref.	Description
7	<ul style="list-style-type: none"> • With tone dialling, they send a tone down the line for special network services. • They scroll "backwards" and "forwards" through characters and special symbols during the entry of names.
8	<p>With the handset lifted, gives access to the special functions made available by the network manager and commonly known as REGISTER RECALL (R function).</p> <p>With the fax machine connected to a private exchange: When pressed before the telephone or fax number is dialled, it enables a call to be made on the public line (if the output mode is Flash and if the fax machine was programmed appropriately).</p>
9	<p>When pressed before dialling a number, it enables you to switch from pulse dialling to tone dialling.</p>
10	<ul style="list-style-type: none"> • They scroll cyclically forwards or backwards through the functions and related parameters on the menu. • Move the cursor to the "right" and to the "left" while entering numbers and names. <p>Model with a built-in TAD only</p> <ul style="list-style-type: none"> • Used to perform TAD functions. See the corresponding chapter.
11	<p>Blinking, indicates that the memory contains documents that have not been printed.</p> <p>Off, indicates that the memory is empty.</p> <p>Model with a built-in TAD only</p> <p>On, indicates that there are messages or memos in the memory that have already been played.</p> <p>Blinking, indicates that the memory contains documents that have not been printed, messages or memos that have not been played.</p> <p>Off, indicates that the memory is empty.</p>
12	<ul style="list-style-type: none"> • Gives access to the menu and its functions. • Inserts a pause during the dialling of the telephone or fax number.
13	<ul style="list-style-type: none"> • Deletes incorrect settings from the display. • During the function programming phase, it moves one function back. • Displays a list of the last 10 fax or telephone numbers dialled (outgoing calls) or the last 20 numbers from which calls have been received and not answered (incoming calls), irrespective of whether or not a document was present in the ADF.
14	<p>Used to dial a telephone or fax number without lifting the telephone handset.</p>


Ref.	Description
15	<ul style="list-style-type: none"> In "MANUAL" and "PHONE/FAX" reception modes, starts receiving a document. After the fax number has been dialed, starts sending a document (only with the document inserted in the ADF). Confirms the selection of menus, submenus, parameters and their values and moves on to the next condition. Starts copying a document (only with the document inserted in the ADF).
16	<ul style="list-style-type: none"> Unloads a document from the ADF. Turns off the  LED indicator. Returns the fax machine to the stand-by mode. Stops the programming, transmission, reception or copying operation in progress.

EXTERNAL COMPONENTS

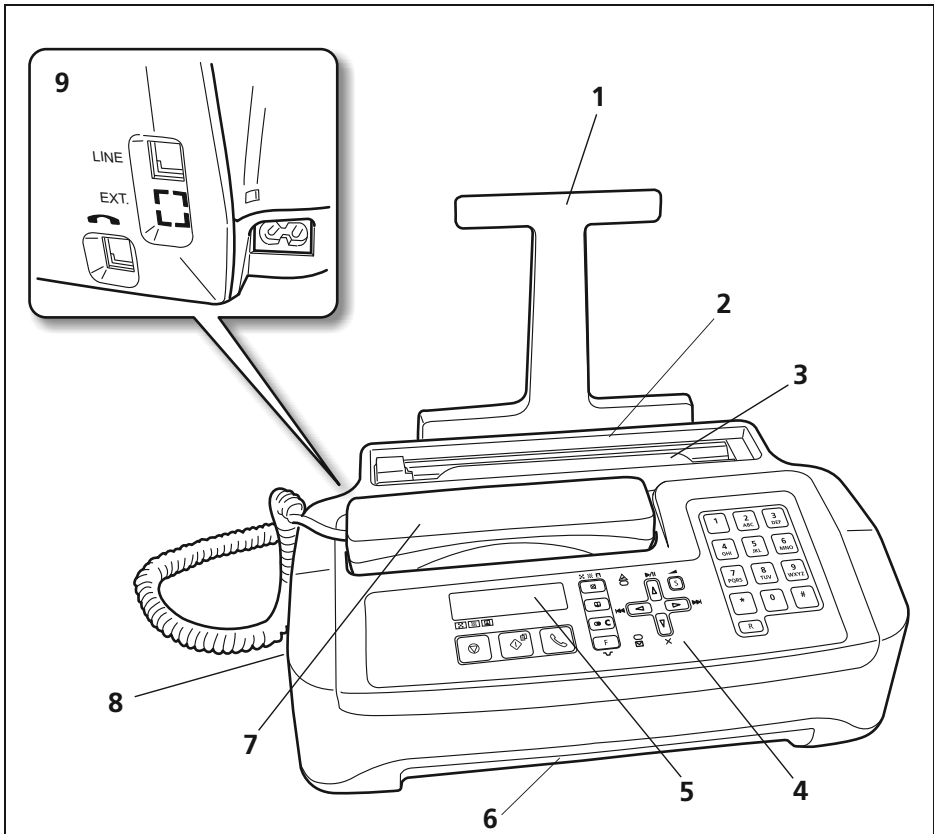

Ref.	Description
1	Paper support extension
2	Plain paper feed compartment (ASF). Maximum capacity: 40 sheets (80 gr/m ²).
3	Automatic feeder for documents to be sent and copied (ADF). Maximum capacity: 10 sheets of A4 size paper (80 gr/m ²).
4	Operator console
5	Display, consists of two lines of 16 characters each. It shows the date and time, menu items, error messages, resolution and contrast values.
6	Received or copied document output
7	Built-in telephone handset
8	Speaker
9	Connection sockets

INTERNAL COMPONENTS

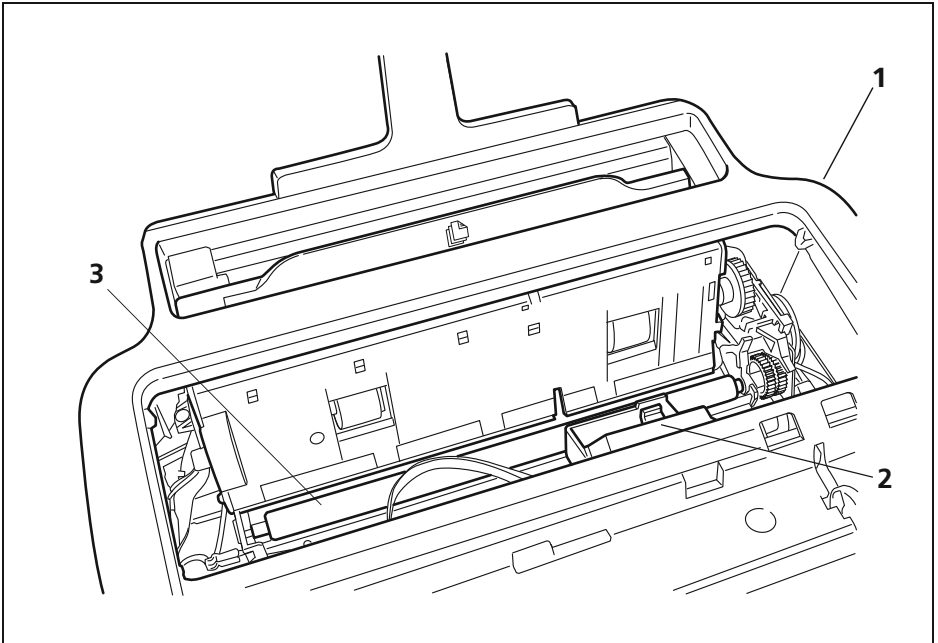

Ref.	Description
1	Machine serial number plate (see base)
2	Cartridge compartment
3	Optical reader

3 INSTALLATION INSTRUCTIONS

PACKAGE CONTENTS

INSTALLATION CONDITIONS

CONNECTING TO THE TELEPHONE LINE AND POWER SUPPLY

SETTING SOME PARAMETERS


SETTING UP THE FAX MACHINE

PRINTING THE MENU AND ITS FUNCTIONS

PACKAGE CONTENTS

In addition to the fax machine and this manual, you will find the following items in the package:

- The paper support extension.
- The cable for connecting the fax machine to the telephone line.
- The power cable
- The telephone plug (if applicable).
- The box containing a free monochrome print cartridge provided with the machine.
- The telephone handset.
- Aftersales support information.


 **Warning:** The use of non-original or refilled print cartridges makes the product's guarantee null and void.


INSTALLATION CONDITIONS

Place the fax machine on a stable, flat surface. Make sure there is enough room for ventilation. Keep the fax machine in a dust-free place away from sources of excessive heat or humidity. Do not expose it to direct sunlight.


CONNECTING TO THE TELEPHONE LINE AND POWER SUPPLY

CONNECTING THE TELEPHONE HANDSET

1. Insert the connector of the handset cable into the socket marked with the symbol  on the rear of the fax machine.

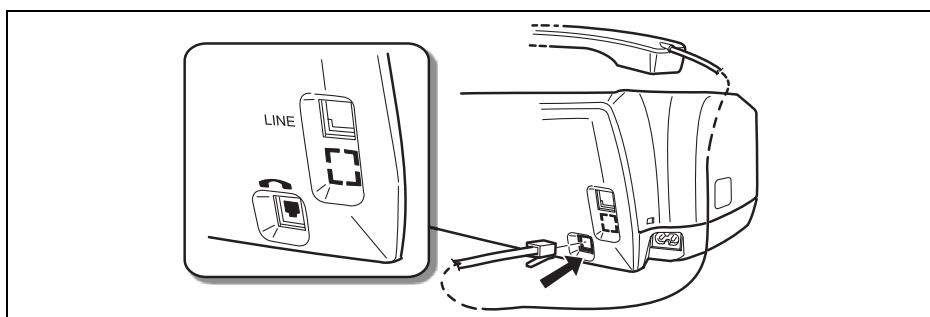


2. Place the handset in its seat.

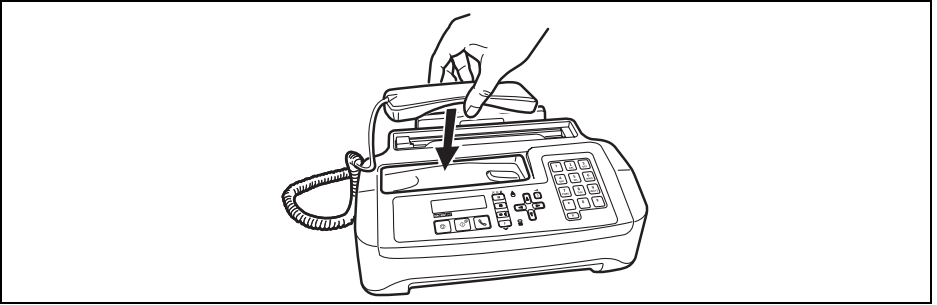


CONNECTING THE FAX MACHINE TO THE TELEPHONE LINE

1. Insert the plug on the cable for connection to the telephone line into the "LINE" socket on the rear of the fax machine (A).
2. Insert the connector or the plug (if applicable) at the other end of the cable into the wall telephone line socket (B).

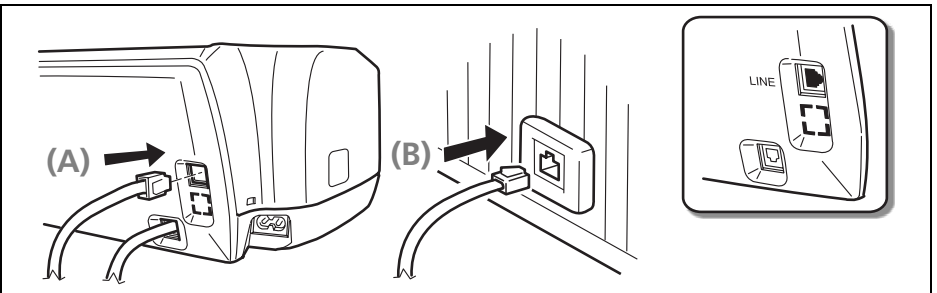

CONNECTING AN EMERGENCY TELEPHONE (IN THE EVENT OF A VOLTAGE DROP OR POWER FAILURE)


1. Remove the cover from the socket for connection to the external line and then insert the plug of the emergency telephone in this socket.

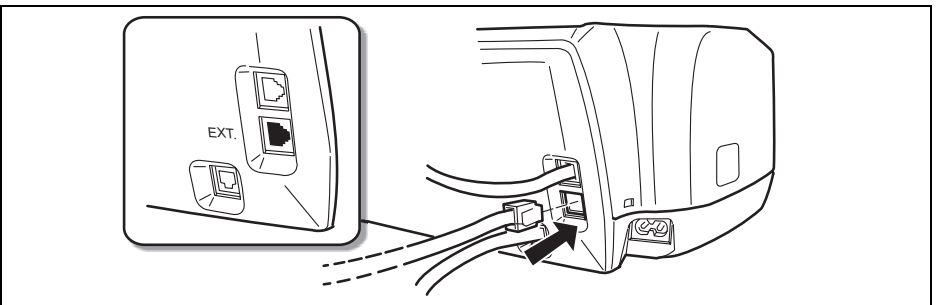

➔ **Warning:** In countries where this kind of connection is not allowed (for example, Germany and Austria), connect the emergency telephone directly to the telephone wall socket.

CONNECTING THE FAX MACHINE TO THE POWER SUPPLY

1. Insert the female connector at one end of the power cable into the male connector on the rear of the fax machine (A). Then insert the plug at the other end of the cable into the wall power socket (B).

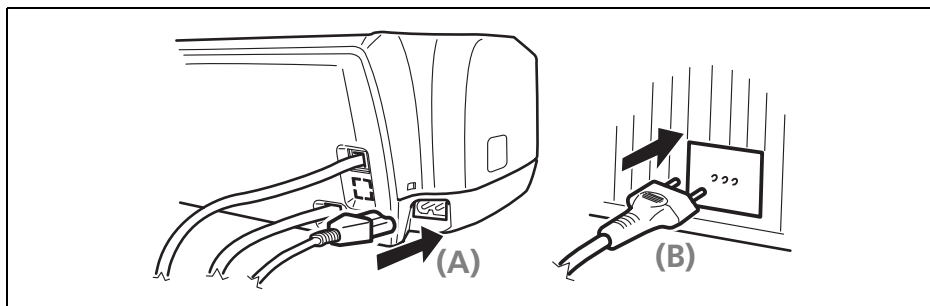

Note: The plug of the power supply cable may vary from country to country.


SETTING SOME PARAMETERS

Once the fax is connected to the power supply, it automatically runs a short test to check that its components are working and the display may show:

- the language in which the messages will be displayed
or
- the message *AUTOMATIC DO* (*AUTOMATIC* in the **base model**) and, alternating on the second line, the messages *SET DATE/TIME* and *CHECK CARTRIDGE*.

In the first case, to enable the fax machine to work properly, you must set the language and country in which it is to be used as described in the procedure below. In the second case, you can move on to set the date and time directly.

SETTING THE LANGUAGE AND THE COUNTRY OF DESTINATION


1. To select the desired language, press the ∇/Δ keys.
2. To confirm the setting, press the  key.
3. To select the desired country, press the ∇/Δ keys.

To select a different country, see the following table:

Country	Country to be selected
Argentina	ARGENTINA
Australia	AUSTRALIA
Austria	ÖSTERREICH
Belgium	BELGIUM
Brazil	BRASIL
Chile	AMERICA LATINA




Cont.

Country	Country to be selected
China	CHINA
Colombia	AMERICA LATINA
Denmark	DANMARK
Finland	SUOMI
France	FRANCE
Germany	DEUTSCHLAND
Holland	NEDERLAND
Irlanda	IRELAND
Italy	ITALIA
Luxembourg	BELGIUM
Mexico	AMERICA LATINA
New Zealand	AUSTRALIA
Norway	NORGE
Peru	AMERICA LATINA
Portugal	PORTUGAL
Rest of world	INTERNATIONAL
Spain	ESPAÑA
Sweden	SVERIGE
Switzerland	SWITZERLAND
UK	U.K.
Uruguay	AMERICA LATINA
Venezuela	AMERICA LATINA



4. To confirm the setting, press the  key.
The fax machine automatically returns to its initial stand-by mode.





Note: The fax machine may not be on sale in all of the countries listed above.

CHANGING THE LANGUAGE AND THE COUNTRY OF DESTINATION






 
Press  +  and repeat the procedure "**Setting the language and the country of destination**" from the start remembering always to confirm, by pressing the  key, the settings made.

CHANGING THE COUNTRY ONLY

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *COUNTRY SET-UP*.

5. Press the  key. The display shows the default country.
6. To display the other available countries, press the ∇/Δ keys.
7. To confirm your choice, press the  key.
8. To return the fax machine to its initial stand-by mode, press the  key.
9. If you want to move back one function, press the  key.

CHANGING THE LANGUAGE ONLY






 

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *LANGUAGE*.
5. Press the  key. The display shows the default language.
6. To display the other available languages, press the ∇/Δ keys.
7. To confirm your choice, press the  key.
8. To return the fax machine to its initial stand-by mode, press the  key.
9. If you want to move back one function, press the  key.

SETTING THE DATE AND TIME FOR THE FIRST TIME

The **first time** you **connect** the fax machine to the **power supply** or whenever there is a **power failure** you must set the date and time as described below.

The date and time will be printed at the top of all documents sent and will be shown on the display when the fax is in stand-by mode.

Once set, the date and time can be changed at any time. You can also modify the format in which they are shown on the display, see "**Changing the date and time**". The display shows *AUTOMATIC 00* (*AUTOMATIC* in the **base model**) on the first line and *SET DATE/TIME* on the second line.

1. Press the  key.
2. Press the  key. The display shows *SET DATE/TIME* where *XX-XX-XX XX:XX* indicate the date and time shown on the display for the first time having connected the fax machine.
3. To enter the new date and time (e.g. 10-05-08; 12:25), press the  -  keys. As each digit is entered, the cursor will move to the next one.
4. If you wish to move the cursor to digits to be modified, press the $\triangleleft/\triangleright$ keys.
5. Then overwrite the digits with the correct ones, by pressing the  -  keys.
6. To confirm the setting, press the  key. The fax machine automatically returns to its initial stand-by mode.

Note: **Stand-by mode** is the status in which the fax machine is idle and is the mode in which the machine can be programmed. Stand-by mode will be shown on the display as follows:

- Without the original document inserted in the ADF.

For the model with a built-in TAD:

*AUTOMATIC 00
10-MAY-08 12:25*

For the base model:

*AUTOMATIC
10-MAY-08 12:25*







- With the original document inserted in the ADF.

*DOCUMENT READY
NORMAL*

CHANGING THE DATE AND TIME


 





If the date and time shown on the display are not correct, you can change them at any time.

Bear in mind that if you have the caller ID function enabled, the date and time will be automatically brought up to date whenever you receive a call.

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *FAX SET-UP*.
3. Press the  key.
4. Press the  key to select *DATE AND TIME*.
5. At this point, you can choose between the following options:
SET DATE/TIME - To modify the date and time set previously.
DATE FORMAT - To choose the date format that will be shown on the display.
HOURLY FORMAT - To choose the time format that will be shown on the display.
6. Press the  key. The display shows *SET DATE/TIME* where *XX-XX-XX XX:XX* indicate the current date and time.
7. To display one of the options listed above, press the ∇/Δ keys.
8. To confirm the setting, press the  key.
9. If you have made a mistake or wish to abort the procedure in progress, press the  key.

SET DATE/TIME OPTION

 If you have chosen the *SET DATE/TIME* option, proceed as follows:

1. Enter the new date and time (e.g. 13-05-08; 18:00), by pressing the  -  keys. As each digit is entered, the cursor will move to the next one.
2. If you wish to move the cursor to digits to be modified, press the $\triangleleft/\triangleright$ keys.
3. Then overwrite the digits with the correct ones, by pressing the  -  keys.
4. To confirm the setting, press the  key.
5. To return the fax machine to its initial stand-by mode, press the  key.
6. If you want to move back one function, press the  key.

DATE FORMAT OPTION

If you have chosen the *DATE FORMAT* option, proceed as follows:

1. The display shows *DATE FORMAT* and *DD/MM/YY*.
2. If you want to select a different format from the one displayed, press the ∇/Δ keys.
3. To confirm the setting, press the key.
4. To return the fax machine to its initial stand-by mode, press the key.
5. If you want to move back one function, press the key.

HOURLY/FORMAT OPTION

If you have chosen the *HOURLY FORMAT* option, proceed as follows:

1. The display shows *HOURLY FORMAT* and *24 HOURS*.
2. If you want to select a different format from the one displayed, press the ∇/Δ keys.
3. To confirm the setting, press the key.
4. To return the fax machine to its initial stand-by mode, press the key.
5. If you want to move back one function, press the key.

Note: If you have chosen the 12-hour time format, the display will show the letter "p" (post meridiem) or the letter "a" (ante meridiem). To switch from one format to the other:

- 1 Repeat the procedure until the message *DATE AND TIME - SET DATE/TIME* appears and then press the key.
- 2 Position the cursor, using the $\triangleleft/\triangleright$ keys, below the letter to be modified.
- 3 Press the ∇/Δ keys.




SWITCHING FROM A PUBLIC LINE TO A PRIVATE LINE (PBX)

The fax machine is set up for connection to a public line but you can connect it to a private line and use it on a public line, too. To do this, proceed as follows:








- Select the *PRIVATE (PBX)* parameter.
- Set the same dialling mode (**tone** or **pulse**) as the one used by the private telephone exchange that manages the line to which you have connected the fax machine. If in doubt about the choice to be made, ask the company that manages your private telephone network.

Switching from the public line to the private line:

1. Press the key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the key.
4. Press the ∇/Δ keys until the display shows *TEL.LINE SETUP*.
5. Press the key.
6. Press the key.

7. To view the available option *LINE TYPE - PUBLIC (PSTN)* or *LINE TYPE - PRIVATE (PBX)*, press the ∇/Δ keys.
8. To confirm the setting, press the  key.
9. To return the fax machine to its initial stand-by mode, press the  key.
10. If you want to move back one function, press the  key.




Modifying the dialling mode (only enabled in some countries):

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the keys ∇/Δ until the display shows *TEL.LINE SETUP*.
5. Press the  key.
6. Press the ∇/Δ keys until the display shows: *DIAL MODE*.
7. Press the  key.
8. To view the available option *DIAL MODE - PULSE* or *DIAL MODE - TONE*, press the ∇/Δ keys.
9. To confirm the setting, press the  key.
10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.





SETTING YOUR NAME AND FAX NUMBER

Once set, the name (**max. 16 characters**) and number (**max. 20 digits**) will remain unchanged until they are intentionally changed and will be printed on each page received by your correspondent's fax machine.

Setting your name:

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the  key to select *STATION NAME*.

To:

- select the characters of each key cyclically, press the  -  keys.
- Leave a space, press the $\triangleleft/\triangleright$ keys.
- Move the cursor under the first character of the name, press the Δ key.
- Move the cursor after the last character in the name, press the ∇ key.
- Include a variety of special symbols, e.g. &, in your name, press the  -  keys.

- Insert a character in the name, move the cursor to the point where you want to insert the new character, by pressing the $\triangleleft/\triangleright$ keys and then type the character you want to add.
 - Delete incorrect characters, move the cursor to the right of the incorrect character by pressing the $\triangleleft/\triangleright$ keys and then press the C/C key.
 - To delete the whole name, hold down the C/C key.
5. To confirm the name, press the P/P key.

Setting your fax number:

1. Press the F key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the P/P key.
4. Press the ∇/Δ keys until the display shows *STATION NUMBER*.
5. Press the P/P key.
6. To enter your fax number, press the 0 - 9 wyżc keys.
7. To leave a space, press the $\triangleleft/\triangleright$ keys.

If you make any typing errors, correct them in the same way as for your name.

If you want to include the international code in your number, instead of the zeros,

press the * key; the display will show the symbol "+".

8. To confirm the fax number, press the P/P key.
9. To return the fax machine to its initial stand-by mode, press the V/V key.
10. If you want to move back one function, press the C/C key.

Positioning your name and fax number:

The information at the top of the document to be sent (name, fax number, date and time and number of pages) may be received by your correspondent's fax machine:

- outside the text area





or

- inside the text area.

Your fax machine is designed to send this information inside the text area.

Changing the position:


1. Press the F key.
2. Press the ∇/Δ keys until the display shows *FAX SET-UP*.
3. Press the P/P key.
4. Press the ∇/Δ keys until the display shows *VARIOUS SETT*.
5. Press the P/P key.
6. Press the ∇/Δ keys until the display shows *FAX HEADER*.

7. Press the  key.
8. To select the INSIDE or OUTSIDE parameter, press the ∇/Δ keys.
9. To confirm the setting, press the  key.
10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.


SETTING UP THE FAX MACHINE

FEEDING THE PRINT PAPER INTO THE MACHINE

1. Push the paper support extension in the slot until it clicks into position.

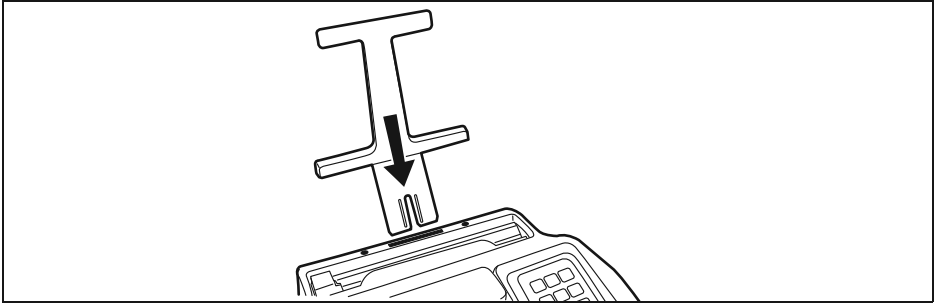

2. Holding the sheets by their upper edge, insert them by letting them "drop" into the ASF without folding or forcing them.

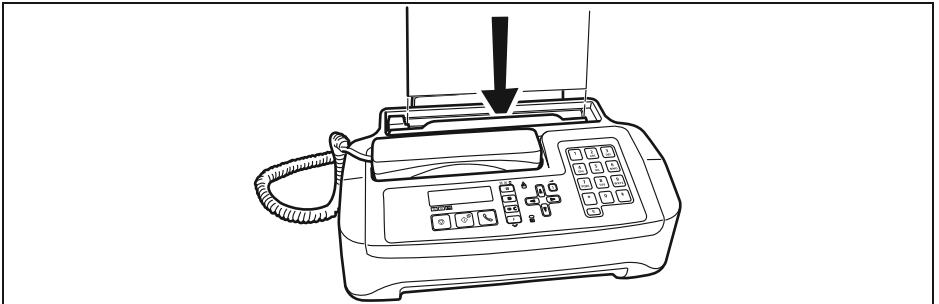

Note: If you add sheets (max. 40) to the ASF, make sure you place them **under** and not on top of those already present. The fax machine has a **memory** that enables it to **receive** up to **50 pages (base model only)** even if you do not add any paper; **for the model with a built-in telephone answering device only**, the capacity may be less than 50 pages according to the duration of the messages recorded on the telephone answering device.

INSERTING THE PRINT CARTRIDGE


- ➔ **Warning:** The fax machine comes with a free starter cartridge which may, however, only be used once. If you reinsert it after the ink out message has been displayed, the following message will appear:

BEWARE! CARTRIDGE ALREADY USED! THE CARTRIDGE MAY ONLY BE USED ONCE.


Remember only to use original cartridges (see code printed at the end of the manual). Non-original or refilled cartridges are not to be used. The use of such cartridges makes the product's guarantee null and void.

If, after the cartridge has been installed, the *CHECK CARTRIDGE* message appears again, try removing it and then reinserting it, pressing it more firmly into position. If the message remains on the display, remove the cartridge and clean the electrical contacts of the cartridge and the carriage, see the "**Cleaning the electrical contacts of the print cartridge**" section of the "**Maintenance operations**" chapter.


1. Lower the handset and place it on a stable surface.

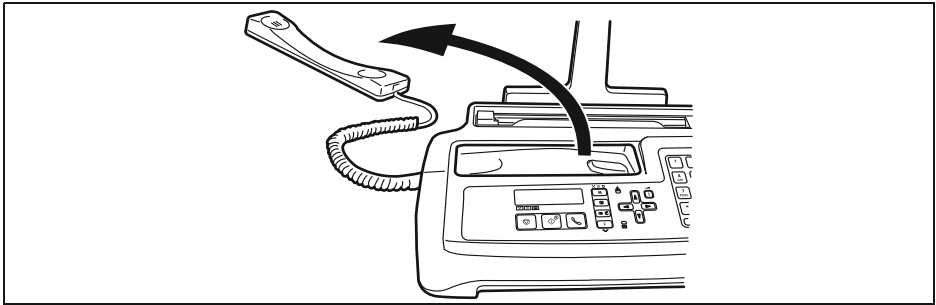


2. Lift the operator console as indicated by the arrow.

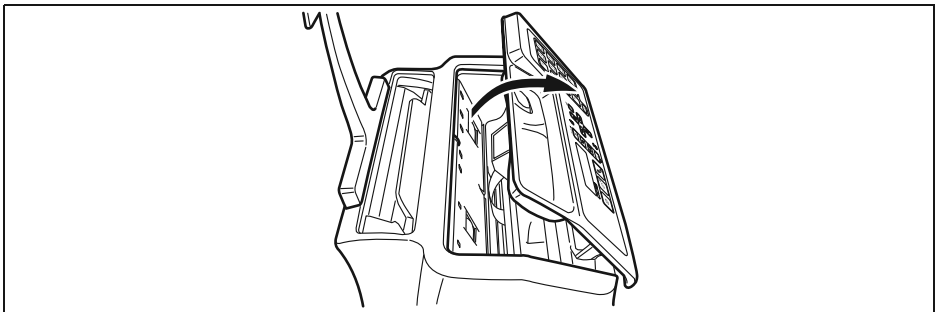


3. Take the cartridge out of its package and, holding it on both sides, peel off the film covering the nozzles.

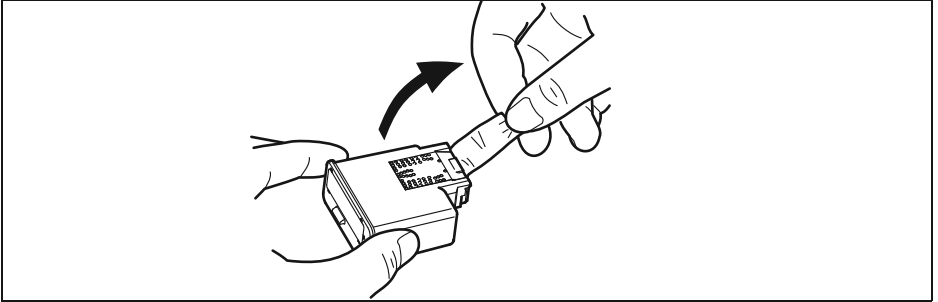

4. Insert the cartridge in its compartment with the electrical contacts facing towards the print cartridge compartment.

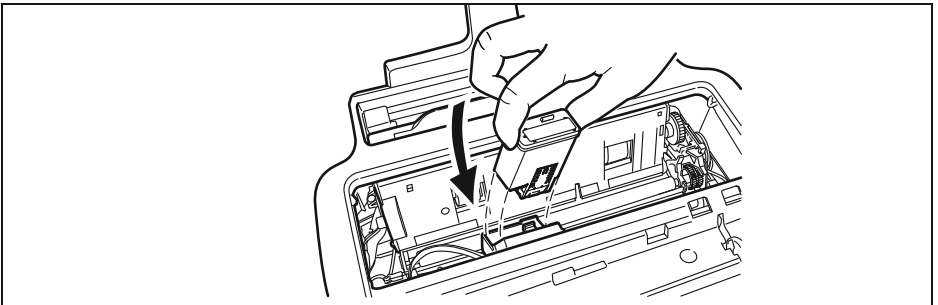

5. Push the cartridge until it clicks into place.

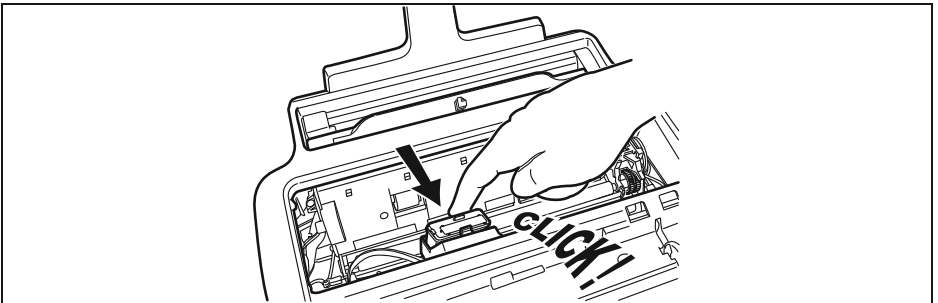







Note: The **free cartridge provided with the machine** allows you to **print up to 60 pages***, whereas the **cartridges that you will buy subsequently** have a greater capacity and will thus allow you to **print up to 300 pages***.

 *Based on Test Chart ITU-TS n.1 (black coverage = 3,8%).

Once the cartridge has been inserted, the operator console closed and the handset replaced, the fax machine starts the nozzle cleaning and checking procedure. When the display shows **SET DATE/TIME :**





XX-XX-XX XX:XX

1. Enter the new date and time (eg. 13-05-08; 18:00) by pressing the  -  keys and then press .
 2. When the display shows *CONFIRM D/T*, press the  key to confirm the data entered or press the  key to make any modification. The procedure is completed by:
 - the **printing**, on the sheet loaded automatically, of a diagnostic test sheet containing:
 - a **numbered scale**, for checking the flow of ink and the electrical circuits of the cartridge nozzles.
 - a group of **graphics and text**, so that the printing quality may be evaluated.
 - the display of the message: *CHECK PRINT OUT, 1=EXIT 0=REPEAT*.
- Examine the print test sheet as follows:
1. Check that the numbered scale **is not broken at any point** and that the black areas **do not present any horizontal white lines**: if these conditions, which confirm that the cartridge has been inserted correctly and is working properly, are respected, set the value **1**. The fax machine returns to its initial stand-by mode and is ready for use. The display shows *AUTOMATIC 00* (*AUTOMATIC* on the **base model**) on the first line and the current date and time on the second line.
 2. On the other hand, if there are any **breaks or white lines** present, set **0** to clean the nozzles again: if the new print test continues to be unsatisfactory, repeat the procedure another time. At this point:
 - if the printing quality still does not meet your expectations, clean the electrical contacts as indicated in the "**Cleaning the electrical contacts of the print cartridge**" section of the "**Maintenance operations**" chapter.
 - if the printing quality is satisfactory, set the value **1**. The fax machine returns to its initial stand-by mode and is ready for use.

 **Warning:** When the cartridge is about to run out of ink, the display shows *CARTRIDGE LOW* and the fax machine **prints**, on a sheet loaded automatically, the indication that **the ink is about to run out**. When there is no ink left, the display shows *CHANGE CARTRIDGE*. To replace the cartridge, see chapter "**Maintenance operations**". When buying new print cartridges, use the related code at the end of the manual.

PRINTING THE MENU AND ITS FUNCTIONS

As it is always useful to have the menu structure and its functions close at hand, it is suggested that you print it out.

1. Press the .
2. Press the  /  keys until the display shows *PRINT FUNC.LIST*.
3. To confirm the setting, press the  key. Having printed the report, the fax machine automatically returns to its initial stand-by mode.

4 FAX TRANSMISSION AND RECEPTION OPERATIONS

SENDING A DOCUMENT

RECEIVING A DOCUMENT

RECEIVING A DOCUMENT IN POLLING MODE

SENDING A DOCUMENT

WHAT DOCUMENTS MAY BE USED

Dimensions

- Width 210 mm
- Length min. 105 mm - max. 600 mm
- Unit weight 70 - 90 gr/m² (max. 10 sheets)

For documents of different sizes from those specified above, photocopy the original onto A4 sheets or another supported format and send the copy.

NEVER USE

- curled paper
- excessively thin paper
- torn paper
- damp or set paper
- excessively small paper
- crumpled paper
- carbon paper


In addition, in order to avoid damaging your fax machine and invalidating your guarantee, make sure that the documents you are to use do not contain:

- staples
- paper clips
- adhesive tape
- correcting liquid or glue that has not yet dried.

In all these cases, photocopy the document and send the copy.

PLACING THE DOCUMENT IN THE ADF

1. Place the document in the automatic document feeder (ADF) with the side to be sent face down (A).
Place the document against the right-hand side of the feeder (B): see the mark printed on the fax machine's casing.

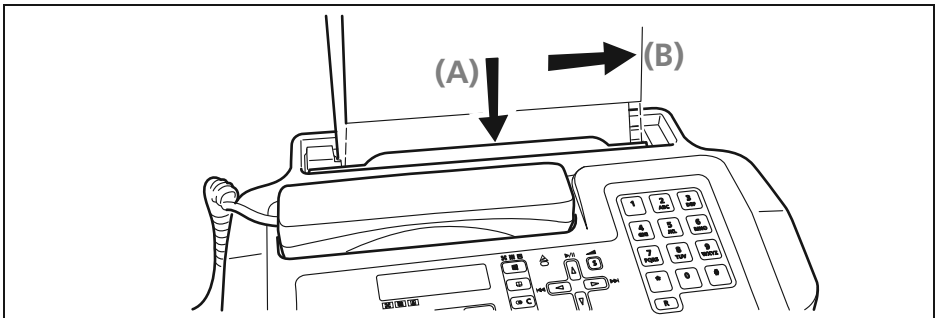








- Once the document has been inserted in the automatic document feeder (ADF), the display shows on the top line *DOCUMENT READY* and on the bottom line, the default contrast value *NORMAL*.

Note: If you do not perform any operation within about two minutes of inserting the document in the automatic document feeder (ADF), the fax machine will automatically unload the document from the feeder.

ADJUSTING THE CONTRAST AND RESOLUTION

Before sending a document you can make some **adjustments** so as to **optimize** the printing quality.

 ADJUSTING THE CONTRAST

- Press the  key.
- Press the ∇/Δ keys until the display shows: *FAX SET-UP*.
- Press the  key.
- Press the ∇/Δ keys until the display shows: *VARIOUS SETT.*
- Press the  key.
- Press the ∇/Δ keys until the display shows: *CONTRAST*.
- Press the  key.
- To view the available options, *CONTRAST - NORMAL*, *CONTRAST - DARK* and *CONTRAST - LIGHT*, press the ∇/Δ keys.
- To confirm your choice, press the  key.
- To return the fax machine to its initial stand-by mode, press the  key.
- If you want to move back one function, press the  key.

The contrast should be regulated on the basis of the following criteria:



- NORMAL**, if the document is **neither very light nor very dark**.
- LIGHT**, if the document is **dark**.
- DARK**, if the document is **light**.



ADJUSTING THE RESOLUTION

The document must be present in the automatic document feeder (ADF).

- Press the  key until the desired resolution value appears on the display.

The resolution should be regulated on the basis of the following criteria:

- STD (STANDARD)**, if the document contains **easily legible characters**. An "arrow" appears on the bottom line of the display in line with the  symbol printed on the console.
- FINE**, if the document contains **very small characters or drawings**. An "arrow" appears on the bottom line of the display in line with the  symbol printed on the console.

 
 
- **HALF TONES**, if the document contains **shaded areas**. An "arrow" in line with the  symbol and an "arrow" in line with the  symbol printed on the console appear on the bottom line of the display.


SENDING A DOCUMENT

1. Insert the document in the automatic document feeder (ADF). The default contrast value is displayed on the bottom line.



The initial resolution value is:  (standard).

If you want, change the contrast and resolution values as described previously.



2. To dial the number of the correspondent to whom you wish to send the document, press the  -  keys.

3. To start sending the document, press the  key.

If the document is sent correctly, once this operation has been completed, the display will show the message *TX COMPLETED* for a moment.

Note: To delete an incorrect digit, move the cursor, using the \leftarrow/\rightarrow keys, to the right of the incorrect digit and press the  key; if you want to delete the whole number, hold down the  key for a few seconds.

Note: If you want, you can dial the correspondent's number from the phone book, see "**Programming the phone book**" and "**Sending a document using the quickest method**".

Note: If you want to **abort the transmission in progress**, press the  key. The fax machine unloads the document from the ADF and returns to its initial stand-by mode.
If the document to be removed consists of more than one sheet, before pressing  to unload the first, **remove** all the others **by hand**.


 
HEARING THE DIALLING TONE WHEN SENDING A DOCUMENT


1. Insert the document in the automatic document feeder (ADF). The display shows on the top line *DOCUMENT READY* and on the bottom line the default contrast value

NORMAL. The initial resolution value is  (standard).




 

If you want, change the contrast and resolution values as described previously.

2. To hear the dialling tones, press the  key. The display shows *ON LINE* and the length of the transmission in minutes and seconds in the top right-hand corner.

3. To dial the number of the correspondent to whom you wish to send the document, press the  -  keys.

4. As soon as you hear the tone of your correspondent's fax machine, press the  key. Transmission is started. If the document is sent correctly, once this operation has been completed, the display will show the message *TX COMPLETED* for a moment.

SENDING A DOCUMENT WITH THE RECEIVER RAISED

1. Insert the document in the automatic document feeder (ADF). The display shows on the top line *DOCUMENT READY* and on the bottom line the default contrast value *NORMAL*.
The initial resolution value is  (standard).
If you want, change the contrast and resolution values as described previously.
2. Lift the receiver to engage the line () The display shows *ON LINE* and the length of the transmission in minutes and seconds in the top right-hand corner.
3. To dial the number of the correspondent to whom you wish to send the document, press the  -  keys.
If your correspondent's fax machine is set up for **automatic reception**, you will hear the **fax machine signal**.
If it is set up for **manual reception**, the correspondent himself will answer so you can ask him to press the **start key** on his fax machine, after which you will hear the **fax machine signal**.
4. To start sending, press the  key. If the document is sent correctly, once this operation has been completed, the display will show the message *TX COMPLETED* for a moment.










AUTOMATIC REDIAL








If no connection is established due to line errors or because the correspondent's number is busy, the fax machine **automatically redials** the number of times laid down by the legislation in your country.

SENDING A DOCUMENT TO SEVERAL CORRESPONDENTS

The fax machine's **memory** allows you to **send a document** (even at a preset time: "Delayed transmission") **to several correspondents** (max. 10): "Broadcast transmission". See the following section "**Sending a document from the memory**".



SENDING A DOCUMENT FROM THE MEMORY

1. Insert the document in the automatic document feeder (ADF). The display shows on the top line *DOCUMENT READY* and on the bottom line the default contrast value *NORMAL*. The initial resolution value is  (standard).
If you want, change the contrast and resolution values as described previously.
2. Press the  key.
3. Press the  /  keys until the display shows *TX FROM MEMORY*.
4. Press the  key.
5. Press the  key to select *NEW SETTING*. The fax machine starts to save the document.
6. When prompted, type the time at which you wish to send the document, for example "16:50", by pressing the  -  keys.
7. Confirm both the current time and the time set in step 6, by pressing the  key.

8. Type your correspondent's number directly on the numeric keypad, by pressing the  -  keys.
9. If you like, you can find your correspondent's number in the phone book (see "**Programming the phone book**" further on).
To do this:
 - 1 Press the  key.
 - 2 Press the ∇/Δ keys to find the desired number.
or
 - 1 Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.
10. Press the  key. The fax machine prompts you to enter another number. If you want to send the document to more than one correspondent, repeat the previous two steps once for each correspondent. If, instead, you want to send the document to one correspondent only, move straight on to the next step without typing any numbers.
11. Press the  key.
12. To view the available option *PRINT SETTINGS - YES*, press the ∇/Δ keys.
13. To confirm your choice, press the  key:
14. To view the available option *CONFIRM SETTINGS - NO*, press the ∇/Δ keys.
15. To confirm your choice, press the  key.
If you chose *CONFIRM SETTINGS - YES*, the fax ends the procedure and the display shows the messages *AUTOMATIC OO* on the first line (*AUTOMATIC* on the **base model**) and *TX FROM MEMORY* on the second line.
If you chose *CONFIRM SETTINGS - NO*, the fax allows you to modify the previous settings, for example: the correspondent's number or the time at which you want to send the document.

Note: If there is a **power failure**, the transmission from the memory will be cancelled.

CHANGING/REPEATING/DELETING A TRANSMISSION FROM THE MEMORY THAT IS ALREADY SET


1. Press the  key.
2. Press the ∇/Δ keys until the display shows *TX FROM MEMORY*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *CHANGE*.

You can choose any of the following options:

TX FROM MEMORY - CHANGE - To change the correspondent's number or the time at which you want to send the document.

TX FROM MEMORY - PRINT SETTINGS - To print the memory transmission parameters only. When it has finished printing, the fax machine returns automatically to its initial stand-by mode.

TX FROM MEMORY - DELETE - To clear the setting. The fax machine returns to its initial stand-by mode.







5. To view the available options, press the ∇/Δ keys.
6. To confirm your choice, press the  key.
If you chose *TX FROM MEMORY - CHANGE*, follow the procedure described in "**Sending a document from the memory**" from step 6.

RECEIVING A DOCUMENT

You can set up the fax machine to receive the documents sent by your correspondents in **four separate modes**:

- **Manual reception**, for all occasions in which you are **present** and you can therefore answer the calls yourself.
- **Automatic reception**, for all occasions in which you are **out** but want to receive documents anyway. This is the mode originally set on your fax machine.
- **Automatic reception with recognition of the type of call**. In this reception mode, after a given number of rings (default setting: 2 rings), the fax machine connects to the telephone line and is capable of recognizing whether the incoming call is a fax call or a telephone call.
- **Reception with telephone answering device (only the model with a built-in telephone answering device)**. In this reception mode, the TAD receives the calls, records any messages left by the correspondent and, if he wants to send you a document, enables the fax machine to receive it. See chapter "**The telephone answering device**".




CHOOSING THE RECEPTION MODE

1. Press the  key.
2. Press the  key.
3. Press the  key again. The display shows the message *RECEPTION MODE* .
4. To view the available options *RECEPTION MODE - AUTOMATIC*, *RECEPTION MODE - MANUAL*, *RECEPTION MODE - PHONE/FAX* and *RECEPTION MODE - TAD/FAX* (**only the model with a built-in telephone answering device**), press the ∇/Δ keys.
5. To confirm the setting, press the  key.
6. To return the fax machine to its initial stand-by mode, press the  key.
7. If you want to move back one function, press the  key.

Note: To activate reception with TAD mode, you must first **record the OUTGOING MESSAGE 1** (see chapter "**The telephone answering device**").

RECEIVING DOCUMENTS IN THE VARIOUS RECEPTION MODES

MANUAL RECEPTION

1. When the telephone rings, lift the handset () to engage the line.
2. As soon as you hear the fax machine signal or if the correspondent asks you to receive a document, press the  key.
3. Hang up (). The fax machine starts to receive and the display shows some information about the reception in progress, including your correspondent's fax number or, if programmed, his name.
Once the document has been received, the display shows the message *RX COMPLETED* for a few seconds and then the initial stand-by mode.

AUTOMATIC RECEPTION



After two rings, the fax machine prepares to receive a document. The document is received as in manual reception mode.


AUTOMATIC RECEPTION WITH RECOGNITION OF THE TYPE OF CALL

The action taken by the fax machine in this reception mode depends on who is calling:

- If the caller is another fax machine, after two rings your fax machine automatically prepares to receive a document.
- If the caller is a telephone, after two rings, the fax machine emits an acoustic signal for about 20 seconds and the display shows *LIFT HANDSET*. If you do not lift the handset within 20 seconds, the fax machine automatically prepares to receive a document.

If you lift the handset before the fax machine connects to the telephone line and you hear the dialling tone, proceed as follows:

1. Press the  key.
2. Hang up (

Note: Any kind of reception may be stopped by pressing the  key. The fax machine then returns to its initial stand-by mode.

RECEIVING A DOCUMENT IN POLLING MODE

FIRST OF ALL, WHAT POLLING IS




It is a transmission request that a fax machine makes to another fax machine so that the latter sends the document requested automatically.

There are two main characteristics of communication using the polling method:

 
 

- **the user who is to receive the document requests transmission.** In other words, a user may connect to another fax machine and request it to send a document (specially prepared) to him, even when the user at the other end of the line is out.
- **the transaction is paid for by the person who requested transmission** (that is, the user who receives the document) and not the person whose fax machine sends the document.



MAKING A TRANSMISSION REQUEST (POLLING RECEPTION)

Arrange with your correspondent the time at which you intend to make the transmission request so that he has time to put the document to be sent in his fax machine. Then set up your fax machine to receive the document, by programming the dialling mode to be used to call your correspondent and the time at which you wish to receive the document.

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *POLLING RX*.
3. Press the  key.
4. Press the  key to select *NEW SETTING*.

At this point, you can confirm the current time or overwrite the time with the correct one.

5. To overwrite the new time, press the  -  keys.
6. To confirm both the current time and the new time, press the  key.
7. Type your correspondent's number directly on the numeric keypad.

To do this, press the  -  keys.

8. If you like, you can find your correspondent's number in the phone book (see "**Programming the phone book**").

To do this:

- 1 Press the  key.

- 2 Press the ∇/Δ keys to find the desired number.




or

- 1 Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.

- 2 To confirm the setting, press the  key.





9. The fax machine shows the message *POLL SET* for a few seconds and then returns automatically to its initial stand-by mode.
The second line of the display shows *POLL RX 18:20*.

CHANGING A POLLING RECEPTION THAT HAS BEEN SET

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *POLLING RX*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *CHANGE*.
5. Press the  key.

6. From this point on, follow the procedure described in "**Making a transmission request (polling reception)**" from step 5.

DELETING A POLLING RECEPTION THAT HAS BEEN SET

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *POLLING RX*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *DELETE*.
5. Press the  key.
6. To view the available options *DELETE? - YES* or *NO*, press the ∇/Δ keys.
7. To confirm your choice, press the  key.

Polling reception is cancelled automatically and the fax machine returns automatically to its initial stand-by status.

5 PHONE BOOK





 







PHONE BOOK

The fax can also **store 100 numbers** and associate a name to them, thus creating an **electronic diary** which not only saves time but also eliminates the risk of making mistakes in dialling numbers.




The telephone number or fax number that you associated with each of the first **10 numeric keys (0 - 9)** may be **dialled quickly** simply by pressing and holding down the relevant key for more than a second.

 Each number in the phone book may be assigned one of the 4 ring tunes to make it even easier to recognize the caller (for all new numbers added, the default ring tune is number 1).





PROGRAMMING THE PHONE BOOK

1. Press the  key.
2. Press the  key until the display shows *PHONE BOOK*.
3. Press the  key.
4. Press the  key to select *NEW NUMBER*.
5. Choose the position where you want to save the telephone number or fax number, for example: 01. To do this, press the  -  keys.
6. To confirm the setting, press the  key.
7. Dial your correspondent's telephone number or fax number. To do this, press the  -  keys.
8. To leave a space, to correct typing mistakes or to enter characters or special symbols, proceed as explained in "**Setting your name and fax number**".
9. To confirm the setting, press the  key.
10. Enter the correspondent's name (max. 16 characters) as you did for your name (see "**Setting your name and fax number**").
11. To confirm the setting, press the  key.
12. To view the other available ring types *RING TYPE 2*, *RING TYPE 3* or *RING TYPE 4*, press the  keys.

 






When switching from one ring tune to another, the fax machine plays the first few seconds of the tune.

13. To confirm the setting, press the  key.
At this point, you can **terminate** the procedure or you can **program** another **number**.
14. To abort the procedure, press the  key.
15. To program other numbers, repeat the procedure from step 4.
16. If you want to move back one function, press the  key.




MODIFYING A NUMBER FROM THE PHONE BOOK

1. Press the  key.
2. Press the ∇/Δ key until the display shows *PHONE BOOK*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *MODIFY*.
5. To confirm the setting, press the  key. The display shows the number and the name associated with the first of the 100 available positions (00-99) saved previously.
6. To find the telephone number or name you want to modify, you can:
 - 1 Press the ∇/Δ keys until the desired number or name appears on the display.
or
 - 2 Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.
7. To confirm the setting, press the  key.
From this step on, to modify the number, repeat the procedure "**Programming the phone book**" from step 7.

DELETING A NUMBER FROM THE PHONE BOOK


 

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *PHONE BOOK*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *DELETE*.
5. To confirm the setting, press the  key.
The display shows the number and the name associated with the first of the 100 available positions (00-99) saved previously.
6. To find the telephone number or name you want to delete:
 - 1 Press the ∇/Δ keys until the desired number or name appears on the display.
or
 - 2 Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.
7. Press the  key.
8. To view the available option *DELETE? YES* or *NO*, press the ∇/Δ keys.
9. To confirm the setting and delete the number, press the  key.
At this point, you can terminate the procedure or delete another number.
10. To abort the procedure, press the  key.
11. To delete other numbers, repeat the procedure from step 5.
12. If you want to move back one function, press the  key.

PRINTING DATA FROM THE PHONE BOOK



 

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *PHONE BOOK*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *PRINT PHONE B*.
5. To confirm the setting, press the  key.
Having printed the report, the fax machine automatically returns to its initial stand-by mode.

SENDING A DOCUMENT USING THE PHONE BOOK SEARCH FUNCTION

If you cannot remember the position with which you associated a given number, you can send the document from the phone book as follows:

1. Insert the document in the automatic document feeder (ADF). The display shows on the top line *DOCUMENT READY* and on the bottom line the default contrast value *NORMAL*.
The initial resolution value is:  (standard).
If you want, change the contrast and resolution values as described previously.
2. Press the  key.
The display shows the fax number or telephone number and the name associated with the first of the 100 available positions (00-99) saved previously.
3. To locate the fax number or name of the correspondent to whom you wish to send your document:
 1. Press the ∇/Δ keys until the desired number or name appears on the display.
or
 2. Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.
4. To start sending, press the  key.


SENDING A DOCUMENT USING THE QUICKEST METHOD

1. Insert the document in the automatic document feeder (ADF). The display shows on the top line *DOCUMENT READY* and on the bottom line the default contrast value *NORMAL*.
The initial resolution value is:  (standard).
If you want, change the contrast and resolution values as described previously.
2. Press the number key ( - ) under which you previously saved the fax number to which you want to send the document, for example , for more than one second. The display shows the digits in the fax number that you assigned to it (see **"Programming the phone book"**). If the name has also been saved, the display shows this as well.
3. Once the number has been dialled, transmission continues in the ordinary way.


6 USING THE TELEPHONE

USING THE TELEPHONE

 When you engage the line by **lifting the telephone handset** (), you may use all the telephone functions available on ordinary telephones sold on the market.



 
These also include the **R** function (REGISTER RECALL, activated by pressing the  key) which provides access to the special services made available by the company that manages the telephone network.

You can also use the following functions:

- Call the correspondent using the phone book, see **"Telephoning by searching through the phone book"** and **"Telephoning using the quickest method"**.
- **Momentarily hold a telephone call** by pressing the  key. The call is resumed as soon as the same key is pressed again.


 


TELEPHONING BY SEARCHING THROUGH THE PHONE BOOK

Do not place the document in the ADF.

1. Lift the handset to engage the line (). The display shows the length of the call in minutes and seconds in the top right-hand corner.
2. Press the  key. The display shows the fax number or telephone number and, if set, the name associated with the first of the 100 available positions (00-99) saved previously (see **"Programming the phone book"**, chapter **"Phone book"**).
3. To find the telephone number or name of the person you wish to call:
 - 1 Press the ∇/Δ keys until the desired number or name appears on the display.
or
 - 2 Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.
4. To start dialling, press the  key.
Once the number has been dialled, if the correspondent is free, you can start talking.





 


TELEPHONING USING THE QUICKEST METHOD

Do not place the document in the ADF.

1. Press and hold down for more than one second the number key ( - ) under which you saved previously the telephone number you wish to call, for example  . The display shows the digits of the telephone number that you associated with it (see **"Programming the phone book"**, chapter **"Phone book"**). If you also associated a name with it, the display will show this as well.
2. Having dialled the number, if the correspondent is free, lift the handset to talk (). The display shows the length of the call in minutes and seconds in the top right-hand corner.

REDIALLING ONE OF THE LAST 20 INCOMING NUMBERS OR ONE OF THE LAST 10 OUTGOING NUMBERS

Do not place the document in the ADF.

1. Lift the handset to engage the line (). The display shows the length of the call in minutes and seconds in the top right-hand corner.
2. Press the  key.
3. To select the list of incoming calls, press the  key.
4. To select the list of outgoing calls, press the  key.
5. To find the telephone number or name of the correspondent you wish to call on the list of the last 20 unanswered incoming calls or on the list of the last 10 outgoing calls, press the  /  keys.
6. To start dialling, press the  key. Once the number has been dialled, if the correspondent is free, you can start talking.

Page intentionally left blank.

7 THE TELEPHONE ANSWERING DEVICE

THE TELEPHONE ANSWERING DEVICE

TURNING ON THE TAD

THE TAD CONSOLE

OUTGOING MESSAGES AND MEMOS

SETTING THE LENGTH OF MEMOS AND INCOMING MESSAGES

LISTENING TO INCOMING MESSAGES AND MEMOS

DELETING MESSAGES AND MEMOS YOU HAVE ALREADY LISTENED TO

TRANSFERRING MESSAGES AND MEMOS TO A REMOTE TELEPHONE

**OPERATING THE TELEPHONE ANSWERING DEVICE FROM A REMOTE
LOCATION**

SPECIAL FUNCTIONS OF THE TELEPHONE ANSWERING DEVICE

THE TELEPHONE ANSWERING DEVICE

If you have purchased the fax machine model equipped with a built-in **telephone answering device** you can perform the same functions as those performed by external telephone answering devices. You can therefore:

- **record outgoing messages** which will be **played automatically** when you are out, to request callers to leave a message or call back later;
- **record memos;**
- **listen to the outgoing messages;**
- **change the outgoing messages;**
- **record the messages** left by callers when you are out, to ensure that your **calls** do not get lost;
- **listen to the messages and memos recorded;**
- **delete the messages and memos recorded;**
- **transfer messages to a remote telephone;**
- **control the TAD from a remote location.**

The TAD **recording capacity** depends on the size of the memory available (18 minutes), which may be less according to the number of pages in the memory. The length of the messages is programmable and may be **30 or 60** seconds, see "**Setting the length of memos and incoming messages**".

TURNING ON THE TAD


The answering machine may only be activated after recording outgoing message 1. See "**Outgoing messages and memos**", and, in particular, "**Recording OGM1 (outgoing message 1)**".

In addition, **the fax must be set to "TAD/FAX" reception mode.** See "**Choosing the reception mode**" of the "**Receiving a document**" section of chapter "**Fax Transmission and reception operations**".

In "**TAD/FAX**" reception mode, the fax machine automatically prepares to receive when it is called by another fax machine, to prevent the documents that are sent to you from getting lost.

THE TAD CONSOLE


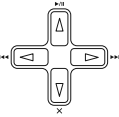


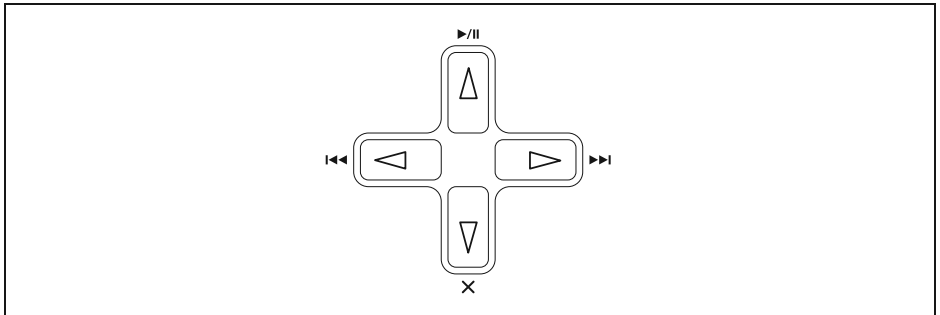
Keys only present on model with a telephone answering device:



Key	Description
-----	-------------

- | | |
|----|--|
| ▶/ | To start playing new messages and memos. If there are any messages or memos that you have not heard, start with the memos from the first one you have not heard.
Momentarily to stop playing messages and memos. When pressed again, resumes the play function. |
| ▶▶ | To start recording "MEMOS" (personal memos).
To move, while playing messages and memos, to the start of the next message or memo. |
| ⏮ | To return, while playing messages and memos, to the previous message or memo. |
| X | (DELETE)
To delete messages and memos that have already been played. |
| ✉ | INDICATOR LED (MESSAGES)
On , to indicate that there are messages or memos that have already been played in the memory.
Blinking , to indicate that there are new messages or memos in the memory.
Off , to indicate that there are no messages or memos in the memory. |

Keys required to use the telephone answering device:








Key	Description
	To access to the TAD configuration menu.
	To select submenus. To select the available options of a parameter.
	To start recording or playing. To confirm the selection of the menus for setting up the TAD, submenus, parameters and settings, and to switch to the next condition.
	To stop recording or playing. To abort the current programming function. To return the fax machine to the initial stand-by mode.
	To remove an incorrect setting from the display. To move one function back during the programming phase.


OUTGOING MESSAGES AND MEMOS

You can record several **different types of outgoing messages**:






 
- **OGM 1**, which has a maximum length of 20 seconds, prompting the caller to leave a message on the TAD, for example:
"You have called the telephone number ... I'm out at the moment. You can leave a message after the beep or press the Start key on your fax machine if you want to send a fax. Thanks".
- **OGM 2**, which has a maximum length of 10 seconds, may be recorded:
 - if you are out and have selected the **"TAD/FAX"** reception mode, to inform the caller that the answering device cannot receive messages because its memory is full, for example:
"I'm sorry but I can only receive faxes at the moment. If you need to speak to me, please call back later";
 - if you are in but have selected **"PHONE/FAX"** mode, to tell the caller not to hang up, for example: *"Please wait"*.
- **OGM 3 (CALL TRANSFER MESSAGE)**, which has a maximum **length of 10 seconds**, to inform you on a **remote telephone that there are new messages for you** on the telephone answering device. To actually transfer the new messages, you must:
 - have set up the telephone answering device correctly (see **"Transferring messages and memos to a remote telephone"** later on in this chapter).
 - activate the functions that enable you to operate the telephone answering device from a remote location (see **"Operating the telephone answering device from a remote location"**).
- **MEMOS (Voice)**, which have a **length that may be programmed to 30 or 60 seconds**, for personal memos. This message is never played when an incoming call is received.

RECORDING OGM1 (OUTGOING MESSAGE 1)

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *TAD SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *OGM # 1*.
5. Press the  key.
6. Press the ∇/Δ keys until the display shows *RECORD*.
7. Press the  key.
8. Lift the handset ().
9. To start recording the message, press the  key.
You have 20 seconds (counted on the display) to record your message:
 - if the message lasts **less than 20 seconds**, when you reach the end of the message hang up or press the  key or the **X** key.
 - the fax machine automatically plays back the message you have recorded.

Note: If the **volume** of the message is **too low** or **too high** you can adjust it, during playback, using the  key. The display shows the volume level set on the bottom line.

LISTENING TO OGM1 (OUTGOING MESSAGE 1)

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *TAD SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *OGM # 1*.
5. Press the  key.
6. To listen to message 1 recorded previously, press the  key to select *PLAY*.
When it gets to the end of the message, the fax machine automatically prepares to record a new OUTGOING MESSAGE 1. In this case, if you like, you can change or replace the message recorded previously by repeating the recording procedure.
7. To return the fax machine to the initial stand-by mode, press the  key.
8. If you want to move back one function, press the  key.

RECORDING OGM2 (OUTGOING MESSAGE 2)

Record outgoing message 2 as you recorded OUTGOING MESSAGE 1, but modifying **step 4** as follows:

1. Press the ∇/Δ keys until the display shows *OGM # 2*.

Note: Bear in mind, however, that you only have 10 seconds.

LISTENING TO OGM2 (OUTGOING MESSAGE 2)

Play back outgoing message 2 as you played back OUTGOING MESSAGE 1, modifying **step 4** as follows:

1. Press the ∇/Δ keys until the display shows: *OGM # 2*.

ERASING OGM2 (OUTGOING MESSAGE 2)

1. Press the key.
2. Press the ∇/Δ keys until the display shows *TRD SET-UP*.
3. Press the key.
4. Press the ∇/Δ keys until the display shows *OGM # 2*.
5. Press the key.
6. Press the ∇/Δ keys until the display shows *DELETE*.
7. To erase outgoing message 2 recorded previously, press the key.
8. To select *DELETE? YES*, press the ∇/Δ keys.
9. To confirm the setting, press the key.
10. To return the fax machine to the initial stand-by mode, press the key.

RECORDING THE TRANSFER MESSAGE (OGM3)

Record the transfer message as you recorded OUTGOING MESSAGE 1, but modifying **step 4** as follows:

1. Press the ∇/Δ keys until the display shows *OGM # 3*.

Note: Bear in mind, however, that you only have 10 seconds.


LISTENING TO THE TRANSFER MESSAGE

Play back the transfer message as you played back OUTGOING MESSAGE 1, but modifying **step 4** as follows:

1. Press the ∇/Δ keys until the display shows *OGM # 3*.

 





RECORDING MEMOS

As mentioned previously, the telephone answering device may be used to record one or more memos, which are handled in the same way as incoming messages.


1. Press the **▶▶** key.
2. Lift the handset ().
3. To start recording, press the key.

Note: You have **30 or 60 seconds** at your disposal (see "**Setting the length of memos and incoming messages**") to record your memo in the same way as OUTGOING MESSAGES 1 and 2.

SETTING THE LENGTH OF MEMOS AND INCOMING MESSAGES


1. Press the  key.
2. Press the ∇/Δ keys until the display shows *TRD SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *ICM REC. TIME*.
5. Press the  key.
6. To view the other available value *ICM REC. TIME - 30 SECS* or *60 SECS*, press the ∇/Δ keys.
7. To confirm the setting, press the  key.
8. To return the fax machine to the initial stand-by mode, press the  key.
9. If you want to move back one function, press the  key.

LISTENING TO INCOMING MESSAGES AND MEMOS

If there is one or more incoming messages or memos in the memory of the telephone answering device that have not yet been played back, the  (MESSAGES) LED indicator blinks. On the right-hand side of the first line, the display shows the total number of messages recorded (including the memos).





At this point, you can listen to all the messages (through the speaker or the handset), including the memos - which are recorded in the memory and numbered progressively up to a maximum of 50 - starting from the first that you have not yet played. Whenever a message is played, the display shows the day and time at which the message was received.

You can listen to the messages **through the speaker** of the fax machine, which plays them in sequence, separating them by a brief audible signal.

To do this, press the  key.

You can also listen to the messages without anyone else hearing.

To do this:

1. Press the  key.
2. Lift the handset ().
3. Press the  key.
Having played back the last message, the fax machine emits two short beeps and returns automatically to the initial stand-by mode. The  (MESSAGES) indicator LED stops blinking and will remain on steady.

DELETING MESSAGES AND MEMOS YOU HAVE ALREADY LISTENED TO

You cannot **delete** a message or a memo **until you have started listening to it**. Incoming messages and memos that have not been played back cannot be deleted. The memory cannot therefore be completely cleared until all the messages and memos present in it have been played back.


DELETING THE MESSAGE OR MEMO YOU ARE LISTENING TO

1. To start listening to the messages or memos, press the ►/|| key.
2. To delete the message you are listening, press the ✕ key. The TAD moves to the next message.
3. To delete the next message, press the ✕ key.
Proceed in the same way for all the messages you want to delete.

Note: If you do not want to delete any messages, press the  key.

DELETING ALL MESSAGES ALREADY PLAYED

Let's suppose there are 6 messages on the TAD of which 3 have already been played back:




1. Press the ✕ key.
2. To select *DELETE OLD MSGP - YES*, press the ▽/△ keys.
3. To confirm the setting, press the  key.




 




The display shows the initial stand-by status and the number of messages remaining after deletion. In this case, 3.

Note: If you do not want to delete any messages, press the  key.

TRANSFERRING MESSAGES AND MEMOS TO A REMOTE TELEPHONE

If you wish, **you can program the TAD to call you on a remote telephone** at a given time to let you listen to any new messages received. In addition to the time and number at which you wish to be called, **you can program** the way in which **the transfer** is to be made (**once only** or **once a day**).

 1. Press the  key.
2. Press the ▽/△ keys until the display shows *TAD SET-UP*.
3. Press the  key.
4. Press the ▽/△ keys until the display shows *FORWARD MSGS*.
5. Press the  key. The display shows *NEW SETTING*.

6. To view the other available mode, *FORWARD MSGS - DELETE* or *FORWARD MSGS - CHANGE*, press the ∇/Δ keys.
FORWARD MSGS - DELETE - To cancel the transfer of incoming messages and memos to a remote telephone.
FORWARD MSGS - CHANGE - To modify the parameters of a transfer already set: transfer time, frequency and telephone number to be called.
7. To confirm *NEW SETTING*, press the  key.
8. To view the other available mode, *FORWARD MSGS - OFF*, *FORWARD MSGS - ONE TIME* or *FORWARD MSGS - DAILY*, press the ∇/Δ keys.
FORWARD MSGS - OFF - To exit (not programmed).
FORWARD MSGS - ONE TIME - To transfer incoming messages and memos to a remote telephone once only.
FORWARD MSGS - DAILY - To transfer incoming messages and memos every day at the same time.
9. To confirm the setting, press the  key.
10. Type the time at which you want the messages to be transferred, for example: "11:45", by pressing the  -  keys.
11. To confirm the setting, press the  key.
12. Type the telephone number at which you want to be called, by pressing the  -  keys.
13. To confirm the setting, press the  key.
 If you have not recorded the transfer message yet, see "**Recording the transfer message (OGM3)**". If, however, you have recorded it the fax machine will return to stand-by mode.

Note: The message transfer setting is **cancelled by a power failure**.

Note: To change or replace the transfer message, see "**Recording the transfer message (OGM3)**".

Now that you have programmed the TAD to transfer new messages to a remote location, you can listen to them by operating the TAD as described in the following section "**Operating the telephone answering device from a remote location**".

OPERATING THE TELEPHONE ANSWERING DEVICE FROM A REMOTE LOCATION

 
 

 



 



SECURITY AND ACCESS FUNCTIONS

To operate the TAD from a remote location (except to leave messages), you must set a four-digit **numeric code** which you can change or delete at any time (see "**Changing/Deleting the TAD access code**").

 
 

 







The same code may also be used to:

- **prevent** unauthorized subscribers **from playing the messages left for you** and **from modifying the set-up parameters** you have set on the telephone answering device **in local mode** (see **"Enabling/Disabling access to the telephone answering device in local mode"**).

SETTING THE TAD ACCESS CODE

  

1. Press the  key.
2. Press the  keys until the display shows *TAD SET-UP*.
3. Press the  key.
4. Press the  keys until the display shows *SECURITY*.
5. Press the  key.
6. Press the  key again to select *SET ACCESS CODE*.
7. Enter the code, for example "0001", by pressing the  -  keys.
8. To confirm the setting, press the  key.
9. To return the fax machine to the initial stand-by mode, press the  key.
10. If you want to move back one function, press the  key.




CHANGING/DELETING THE TAD ACCESS CODE

1. Press the  key.
2. Press the  keys until the display shows *TAD SET-UP*.
3. Press the  key.
4. Press the  keys until the display shows *SECURITY*.
5. Press the  key.
6. Press the  key again to select *SET ACCESS CODE*.
7. To change the code, press the  key once for each digit you have to replace and then type in the new digit.
8. If you like, you can delete the entire code by holding down the  key.
9. To confirm the setting, press the  key.
10. To return the fax machine to the initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.

 ENABLING/DISABLING ACCESS TO THE TELEPHONE ANSWERING DEVICE IN LOCAL MODE

Follow the procedure described in **"Setting the TAD access code"** to step 5, then carry out the following procedure:

1. Press the  keys until the display shows *ACCESS LOCK*.
2. Press the  key.

3. To stop unauthorized users from playing the messages received on the telephone answering device, press the ∇/Δ keys. The display shows **YES**.
4. To confirm the setting, press the  key.
5. To return the fax machine to the initial stand-by mode, press the  key.
6. If you want to move back one function, press the  key.

OPERATING THE TELEPHONE ANSWERING DEVICE FROM A REMOTE LOCATION

You can operate the TAD not only directly using specific keys on the operator console of the fax machine, but also from any other location providing the telephone used operates in tone mode, **for example: a mobile phone**.

To operate the TAD from a remote location, you must set the fax machine in "TAD/FAX" or "PHONE/FAX" reception mode and, **once the fax has answered the call**, you must also **type in the access code set previously** (see "Setting the TAD access code").

The remote functions available are activated by another numeric code consisting of one or two digits (see the following table). **If the code has two digits, it is advisable to wait for the confirmation signal between one digit and the other.**

Code	Operating function
1	Plays new messages.
2	Plays all messages.
3	Stops playing current message and returns to previous message.
4	Stops playing current message and skips to next message.
5	Plays outgoing message 1.
6 + 6	Deletes all played messages.

Code	Programming function
#1	Disables the "TAD/FAX" reception mode and enables the "AUTOMATIC" reception mode.
#2	Sets up the fax machine for "TAD/FAX" reception mode.
#3	Enables the OUTGOING MESSAGE 1 to be recorded.
#4	Enables the OUTGOING MESSAGE ONLY to be played.
#5	Disables the transfer of messages and memos to a remote telephone.

Typing **0** after an operating sequence **from 1 to 6** aborts the function in progress. Typing **0** after a programming sequence **from #1 to #5** aborts the programming function in progress and returns to the operating functions. In this case, to resume the programming phase, press # again.

If any code is typed during the recording of outgoing message 1 (programming **#3**), the TAD will stop immediately and confirm the recording.

To perform both the remote playback and programming functions:

- Dial the fax number on the remote telephone. The TAD will answer the call and play OUTGOING MESSAGE 1.
- Type the access code on the remote telephone keypad.
- If the code is correct, the TAD will confirm the operation by emitting a beep.
- Choose the function that you want to perform and type its code with reference to the previous table.

The TAD confirms the operation by emitting a beep.

Terminate communication using the method applicable to the telephone you are using.

SPECIAL FUNCTIONS OF THE TELEPHONE ANSWERING DEVICE

You can set up the TAD for the following special functions:

 





- TOLL SAVER
- OUTGOING MESSAGE ONLY
- SILENT RECEPTION OF INCOMING MESSAGES

TOLL SAVER

Using this function, when you access the TAD from a remote location to listen to any messages, the fax machine will answer as follows:

- if **there are no new messages**, it will answer the call **two rings after** the number preset;
- if **there are some new messages**, it will answer the call **after the preset number of rings** (see "**Changing the number of rings**", chapter "**More advanced operations**").

Therefore, if you hear **one ring more** than the preset number, you will know that **there are no new messages** and you can **hang up before** the fax machine answers the call. This function may only be enabled by the customer engineering service and is not available in all countries.








1. Press the  key.
2. Press the ∇/Δ keys until the display shows *TAD SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *TOLL SAVER*.
5. To confirm the setting, press the  key.
6. To view the available options *TOLL SAVER - YES* or *NO*, press the ∇/Δ keys.
7. To confirm the setting, press the  key.
8. To return the fax machine to the initial stand-by mode, press the  key.
9. If you want to move back one function, press the  key.

OUTGOING MESSAGE ONLY

Using this function, whenever an incoming call is received, the TAD plays the OGM 1 but does not record any incoming messages.







You can use this function when you expect to be away for a long time and it would not be possible to record all messages received in your absence.

In this case, in place of the ordinary outgoing message, it is advisable to record a different one, for example: "From 22nd June to 19th September only faxes will be accepted. No incoming messages will be recorded".




1. Press the  key.
2. Press the ∇/Δ keys until the display shows *TAD SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *ANNOUNCE ONLY*.
5. To confirm the setting, press the  key.
6. To select the option *ANNOUNCE ONLY - YES*, press the ∇/Δ keys.
7. To confirm the setting, press the  key.
8. If you have already recorded OGM 1, the display will show the message *PLAYING* and the TAD will play it back. If you have not recorded it the display will show the message *OGM NOT RECORDED* for a few seconds, followed by the message *RECORD*.
9. To change the outgoing message recorded previously or to record a new one, press the  key and then lift the handset ().
10. To start recording, press the  key.

SILENT RECEPTION OF INCOMING MESSAGES

Using this function you can receive messages confidentially. In other words, the TAD receives messages without playing them over the speaker so that any other persons present cannot hear your messages.

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *TAD SET-UP*.
3. Press the  key.
4. Press the  key to select *ICM ON SPEAKER*.
5. To view the available option *ICM ON SPEAKER - YES* or *NO*, press the ∇/Δ keys.
6. To confirm the setting, press the  key.
7. To return the fax machine to the initial stand-by mode, press the  key.
8. If you want to move back one function, press the  key.

PRINTING THE TAD CONFIGURATION PARAMETERS

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *TAD SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *PRINT SET-UP*.
5. To start printing, press the  key.
Once this operation has been completed, the fax machine automatically returns to its initial stand-by status.

8 MAKING COPIES

MAKING COPIES








WHAT DOCUMENTS CAN BE COPIED




As for transmission, **copying requires the document to be inserted in the automatic document feeder (ADF)**. Before making a copy, make sure that the document is correctly inserted in the feeder and that it respects the characteristics described previously (see the "**Sending a document**" section).

Bear in mind, however, that for the **copying function you can only insert one sheet at a time** in the automatic document feeder (ADF). In addition, if no copies are made within about two minutes, the fax will automatically unload the original and return to stand-by mode.



MAKING A COPY

As mentioned previously, you can also use the fax machine as a **photocopier**. The printing quality obtained depends on the type of copy you want to obtain "**Normal copy**" or "**Quality copy**" and the **contrast** and **resolution** values that you select before starting the copying function.

1. Choose the type of **contrast** on the basis of the following criteria:
 - **NORMAL**, if the document **is neither very light nor very dark**.
 - **LIGHT**, if the document **is very dark**.
 - **DARK**, if the document **is very light**.
2. Choose the type of **resolution** on the basis of the following criteria:
 - **TEXT**, if the document contains **easily legible text** or **simple graphics**.
 - **PHOTO**, if the document contains **shaded areas**.
3. Insert the document in the ADF. The display shows on the top line *DOCUMENT READY* and on the bottom line the default contrast value *NORMAL* (for fax transmission).
4. Press the  key. The display shows the default copy size, contrast and resolution settings: *100%*, *NORMAL* and *TEXT*, respectively. It also shows the number of copies set (1).
5. If you want to confirm these values, press the  key. The fax machine starts copying. To change some of the values indicated above, skip straight to the next step.
6. Press the  key.
7. To view the available option *QUALITY - NORMAL* or *HIGH*, press the ∇/Δ keys.
8. To confirm your choice, press the  key.
9. To choose the desired copy size setting (ZOOM), *200%*, *140%*, *100%*, *70%* or *50%*, press the ∇/Δ keys.
10. To confirm your choice, press the  key.
11. To display the other types of contrast available, *CONTRAST - LIGHT*, *CONTRAST - NORMAL* or *CONTRAST - DARK*, press the ∇/Δ keys.
12. To confirm your choice, press the  key. The display shows the values that you have just selected. At this point, simply choose the resolution you want and set the number of copies you want to make:
13. To choose the desired resolution setting, *TEXT* or *PHOTO*, press the  key.

14. If you want to make more than one copy (max. 9), enter the desired number by pressing the  -  keys.
15. If you only want to make one copy, skip to the next step.
16. To make the copy, press the  key.

The fax machine starts to save the document. Having done this, the fax machine starts copying.

Note: If you want to abort the copy in progress, press the  key. The fax machine will stop copying, unload the document from the ADF and return to its initial stand-by mode, displaying the message *COPY INTERRUPTED* .
Press the  key to clear the message from the display.

Note: To make enlarged or reduced copies of the document, remember to place the document against the right-hand side of the feeder (see the mark printed on the fax machine's casing). The maximum printing width is 210 mm and the maximum length is 282 mm. The maximum unprintable margins are: 4 mm on the left and right sides, 3 mm at the top and 14 mm at the bottom.

Page intentionally left blank.

 






9 MORE ADVANCED OPERATIONS

ADVANCED RECEPTION SETTINGS

ADVANCED TRANSMISSION SETTINGS








ADVANCED RECEPTION SETTINGS

REDUCING THE AREA OF A DOCUMENT RECEIVED

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *FAX SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *PRINTER PARAM.*
5. Press the  key.
6. Press the  key to select *REDUCTION*.
7. To choose one of the available reduction ratios *94%*, *80%*, *76%*, *70%*, and *NO*, press the ∇/Δ keys.
8. To confirm your choice, press the  key.
9. To return the fax machine to its initial stand-by mode, press the  key.
10. If you want to move back one function, press the  key.

RECEIVING A DOCUMENT THAT IS LONGER THAN THE PAPER SIZE USED

If you receive a document that is longer than the paper size used, you can have the surplus text printed by your fax machine on another sheet.







1. Press the  key.
2. Press the ∇/Δ keys until the display shows *FAX SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *PRINTER PARAM.*
5. Press the  key.
6. Press the ∇/Δ keys until the display shows *SURPLUS*.
7. Press the  key.
8. To choose one of the other available settings, *SURPLUS-NO*, *SURPLUS-YES* or *SURPLUS-AUTOMATIC*, press the ∇/Δ keys.
9. To confirm your choice, press the  key.
10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.

Note: If you choose the *SURPLUS-AUTOMATIC* setting, the fax machine will print the surplus text on another sheet providing the surplus exceeds 8 mm. If you choose the *SURPLUS-YES* setting, the fax machine will always print the surplus text on another sheet.
If you choose the *SURPLUS-NO* setting, the fax machine will not print the surplus text.


ENABLING/DISABLING SILENT RECEPTION

In the "AUTOMATIC", "PHONE/FAX" and "TAD/FAX" reception modes, you can set up the fax machine to **receive documents without any rings being emitted when an incoming call is received**.

When this function is enabled, the behaviour of the fax machine depends on the reception mode selected and the caller:

- in "AUTOMATIC" and "TAD/FAX" modes, the fax machine **will never ring** when an incoming call is received;
 - in "PHONE/FAX" mode, when an incoming call is received, the fax machine **will only not ring if the caller is another fax machine**. If the call is a **telephone call**, the fax machine will emit an **acoustic signal**, in place of the ring, to prompt you to lift the handset.
1. Press the  key.
 2. Press the  key.
 3. Press the ∇/Δ keys until the display shows *SILENT RX*.
 4. Press the  key. The display shows *NO*.
 5. To select one of the available options *SILENT RX - DAILY* or *SILENT RX - YES*, press the ∇/Δ keys.
 6. To confirm your choice, press the  key.
 7. To return the fax machine to its initial stand-by mode, press the  key.
 8. If you want to move back one function, press the  key:

Note: If you have confirmed the option *SILENT RX - DAILY*, the fax machine will prompt you to enter the time at which it is to start and end silent reception.

Once you have set the time, press the  key to confirm.

Note: The daily silent reception setting (*SILENT RX - DAILY*) is **cancelled by a power failure**.


DISPLAYING THE CALLER ID

This function, which may be activated by the telephone company on request by the user, **is only available in some countries** and **conforms** to the **ETSI ETS 300 778-1 standard**.

This function **tells you immediately who is calling**. In this way, you will be able to decide whether to answer the call or not.


 

 



 
 

 
When this function is enabled, if the fax machine is in **stand-by mode**, whenever a call is received, it **always shows one of the following items of information**:

- **number or name of the correspondent** who called you;
- **PRIVATE:** if the correspondent has chosen not to reveal his identity to you;
- **UNAVAILABLE:** if the correspondent is connected to a telephone exchange that does not support this service.

If you are **programming** your fax machine and, when an incoming call is received, want to **know who is calling you, you must press** the  key before answering the call.

It may however happen, if you are connected to a particular kind of telephone network, that the number of the caller is not displayed on the fax machine. If this happens, call your local customer engineering service centre.

The fax machine is **already set up to display the caller ID**. You may however set it up not to display it, as follows:



 

 



1. Press the  key.
2. Press the  keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the  keys until the display shows *TEL. LINE SETUP*.
5. Press the  key.
6. Press the  keys until the display shows *CALLER ID*.
7. Press the  key.
8. To view the available option *CALLER ID-YES* or *NO*, press the  keys.
9. To confirm your choice, press the  key.
10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.

 Note: With this function enabled, the date and time will be brought up to date whenever a call is received.







CHANGING THE NUMBER OF RINGS

This function is only enabled in some countries.

If set in "**AUTOMATIC**", "**PHONE/FAX**" or "**TAD/FAX**" reception mode, the fax machine automatically answers calls after a certain number of rings. If you want, you can change the number of rings as follows:

1. Press the  key.
2. Press the  key to select *RECEPT. SET-UP*.
3. Press the  keys until the display shows *RINGS NUMBER*.
4. Press the  key. The display shows the predefined value (2).
5. To view the other available values *RINGS NUMBER - 1*, *RINGS NUMBER - 3*, *RINGS NUMBER - 4*, *RINGS NUMBER - 5*, *RINGS NUMBER - 6*, *RINGS NUMBER - 7* and *RINGS NUMBER - 8*, press the  keys.
6. To confirm your choice, press the  key.
7. To return the fax machine to its initial stand-by mode, press the  key.
8. If you want to move back one function, press the  key.

CHANGING THE RING VOLUME

1. Press the  key.
2. Press the  key to select *RECEPT. SET-UP*.
3. Press the ∇/Δ keys until the display shows *RING VOLUME*.
4. Press the  key. The display shows the preset volume level.
5. To turn the volume up/down, press the ∇/Δ keys.
6. To confirm your choice, press the  key.
7. To return the fax machine to its initial stand-by mode, press the  key.
8. If you want to move back one function, press the  key.








ENABLING/DISABLING RECOGNITION OF THE RING FREQUENCY


In some countries, local telephone companies offer the possibility of **assigning the same telephone line two or more numbers**, corresponding to different users. When an incoming call is received, a **different ring frequency** will indicate which user is to answer the call.


This function is extremely useful at home or in small offices, where the same telephone line is shared by more than one person.

Your fax machine is capable of "learning" one of these frequencies (see the following procedure). In this way, when a call with the specific ring frequency is received, the fax machine (in "**PHONE/FAX**" and "**TAD/FAX**" reception modes) prepares exclusively to receive a document.

This function is **particularly useful when associated with silent reception** in that the fax machine will only ring if the call is coming from a telephone.

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *DISTINCT. RING*.
5. Press the  key.
6. To view the available option *DISTINCT. RING - SET PATTERN*, press the ∇/Δ keys.
7. To confirm the setting, press the  key. The display shows *AUTODETECT RING*.
8. Call the fax machine with the desired frequency so that the fax machine detects it. The display now shows *RING DETECTED*.
At this point you can enable the new ring frequency.
9. To enable the new ring frequency, return to the point at which the display shows *DISTINCT. RING-SET OPTION*.
10. Press the  key.
11. To view the available option *SET OPTION - YES or NO*, press the ∇/Δ keys.
12. To confirm your choice, press the  key.
13. To return the fax machine to its initial stand-by mode, press the  key.

14. If you want to move back one function, press the  key.

Note: If the fax machine cannot detect that particular frequency, the display will show the message *RING NOT DETECT*. At this point, press the  key and repeat the procedure.








CHANGING THE LENGTH OF THE ACOUSTIC SIGNAL

This function is only enabled in some countries.

When the fax machine is set up for **automatic reception with recognition of the type of call**, it behaves as follows:

 


- if it is being called by a **fax machine**, it will automatically prepare to receive a document after the preset number of rings
- if it is being called by a **telephone**, it will emit an **acoustic signal** for a time of 20 seconds, after which, if you still have not lifted the handset, it will automatically prepare to receive a document.





If you want, you can change the length of the acoustic signal as follows:

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *TEL. LINE SETUP*.
5. Press the  key.
6. Press the ∇/Δ keys until the display shows *FAX/TEL TIMER*.
7. Press the  key. The display shows the predefined value of 20 seconds.
8. To view the other available value *FAX/TEL TIMER - 15 SECS*, *FAX/TEL TIMER - 30 SECS* or *FAX/TEL TIMER - 40 SECS*, press the ∇/Δ keys.
9. To confirm your choice, press the  key.
10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.


CHANGING THE SILENCE LAPSE

When a call is received with the fax machine in "TAD/FAX" reception mode, if the TAD hears no answering message within the programmed time (silence lapse), it stops recording and returns to the initial stand-by mode.

 









1. Press the  key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *TEL. LINE SETUP*.
5. Press the  key.
6. Press the ∇/Δ keys until the display shows *SILENCE LAPSE*.



7. Press the  key. The display shows the predefined value of 6 seconds.
8. To view the other available value *SILENCE LAPSE - 3 SECS*, *SILENCE LAPSE - 4 SECS*, *SILENCE LAPSE - 8 SECS*, *SILENCE LAPSE - 10 SECS* or *SILENCE LAPSE - NO*, press the ∇/Δ keys:
If you select *SILENCE LAPSE - NO*, the fax machine will not interrupt the recording in any case.
9. To confirm your choice, press the  key.
10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.

CHANGING THE REMOTE CONTROL CODE

 If the fax machine is connected to an **extension** that operates in **tone dialling mode** and is set up for **manual reception**, whenever there is a call from a correspondent wishing to send you a document, you can **set it to receive** the document by typing the code * * on the extension. This operation has the same effect as pressing the  key on the fax machine.

You can replace the second "asterisk" of this code using digits from 0 to 9.

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *TEL. LINE SETUP*.
5. Press the  key.
6. Press the ∇/Δ keys until the display shows *REMOTE CONTROL*.
7. Press the  key.
8. Press the ∇/Δ keys until the display shows *YES*.
9. Press the  key. The display shows the code you set previously.
10. To type the new code, press the  -  keys.
11. To confirm the new code, press the  key.
12. To return the fax machine to its initial stand-by mode, press the  key.
13. If you want to move back one function, press the  key.

Note: If you want to disable this function, after step **7**, press the ∇/Δ keys to display *REMOTE CONTROL - NO*, then press the  key to confirm and the  key to return the fax machine to its initial stand-by mode.

SETTING THE BLACK LIST

As mentioned previously, you can save a series of unwanted numbers on a black list (max. 10) so as to avoid receiving documents from the correspondents on this list.

1. Press the **F** key.
2. Press the **◊** key to select *RECPT. SET-UP*.
3. Press the **∇/Δ** keys until the display shows *BLACK LIST*.
4. Press the **◊** key.
5. Press the **◊** key to select *NEW NUMBER*.
6. Dial the fax number you wish to inhibit.
To do this, press the **0** - **9** keys.
7. To leave a space, to correct typing mistakes or to enter characters or special symbols, proceed as explained in **"Setting your name and fax number"**.
8. To confirm the setting, press the **◊** key. At this point, you can abort the procedure or inhibit another number.
9. To abort the procedure, press the **◊** key.
10. To block another number, repeat the procedure from step 5.




MODIFYING THE BLACK LIST

1. Press the **F** key.
2. Press the **◊** key to select *RECPT. SET-UP*.
3. Press the **∇/Δ** keys until the display shows *BLACK LIST*.
4. Press the **◊** key.
5. Press the **∇/Δ** keys until the display shows *MODIFY NUMBER*.
6. To confirm the setting, press the **◊** key. The display shows the first number on the black list.
7. To find the number you wish to modify, press the **∇/Δ** keys.
8. To confirm the setting, press the **◊** key.

 



From this point on, to change the number, repeat the **"Setting the black list"** procedure from step 6.

DELETING THE BLACK LIST

1. Press the **F** key.
2. Press the **◊** key to select *RECPT. SET-UP*.
3. Press the **∇/Δ** keys until the display shows *BLACK LIST*.
4. Press the **◊** key.
5. Press the **∇/Δ** keys until the display shows *DELETE NUMBER*.

6. To confirm the setting, press the  key. The display shows the first number on the black list.
7. To find the number you wish to delete, press the ∇/Δ keys.
8. To confirm the setting, press the  key.
9. To view the available option *DELETE? - YES* or *NO*, press the ∇/Δ keys.
10. To confirm the setting, press the  key.
11. From this point on, to delete other numbers from the list, repeat the procedure from step 6.

PRINTING THE BLACK LIST

1. Press the  key.
2. Press the  key to select *RECPT. SET-UP*.
3. Press the ∇/Δ keys until the display shows *BLACK LIST*.
4. Press the  key.
5. Press the ∇/Δ keys until the display shows *PRINT LIST*.
6. To confirm the setting, press the  key.

Having printed the report, the fax machine automatically returns to its initial stand-by mode.






ADVANCED TRANSMISSION SETTINGS



CHANGING THE POSITION OF YOUR NAME AND FAX NUMBER

The information in the heading of the document to be sent (name, fax number, date and time and number of pages) may be received by your correspondent's fax machine outside the text area or inside the text area.

Your fax machine is set up to send this information inside the text area.


 

 

 
 



 
Changing the position

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *FAX SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *VARIOUS SETT*.
5. Press the  key.
6. Press the ∇/Δ keys until the display shows *FAX HEADER*.
7. Press the  key.
8. To select the alternative parameter, press the ∇/Δ keys until the display shows *OUTSIDE* or *INSIDE*.
9. To confirm the setting, press the  key.

10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.


HEARING THE LINE SIGNALS




The fax machine is set up so that you can hear the **dialling tones** during the dialling phases as well as the **connection** signals exchanged between your fax machine and your correspondent's fax machine. If you cannot hear them, program the function as follows:

1. Press the  key.
2. Press the  keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the  keys until the display shows *TEL. LINE SETUP*.
5. Press the  key.
6. Press the  keys until the display shows *LINE MONITOR*.
7. Press the  key.
8. To view the available option *LINE MONITOR - YES* or *NO*, press the  keys.
9. To confirm the setting, press the  key.
10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.

REGULATING THE SPEAKER VOLUME


 

 

If the volume of the dialling tones and connection signals is **too low** or **too high**,





adjust it using the  key.

1. Press the  key.
2. To raise or lower the volume of the speaker, press the  key. The display shows the volume level set on the top line.
3. To return the fax machine to its initial stand-by mode, press the  key.

REGULATING THE BUZZER VOLUME







 
The buzzer indicates particular operating conditions and faults or errors. The volume of the buzzer may be set to eight levels, or may be turned off altogether.

 
1. Press the  key.
2. Press the  keys until the display shows *FAX SET-UP*.
3. Press the  key.
4. Press the  keys until the display shows *VARIOUS SETT*.
5. Press the  key.

6. Press the ∇/Δ keys until the display shows *BUZZER VOLUME*.
7. Press the  key.
The display shows the preset volume level.
8. To turn the volume up/down, press the ∇/Δ keys.
9. To confirm your choice, press the  key.
10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.

ENABLING/DISABLING THE FLASH FUNCTION

If the fax machine is connected to a private branch exchange (PBX) with Flash pulse management, this function enables a call to be made on the public line.








1. Press the  key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *TEL. LINE SETUP*.
5. Press the  key.
6. Press the ∇/Δ keys until the display shows *PBX FLASH*.
7. Press the  key.
8. To view the available option *PBX FLASH - YES* or *NO*, press the ∇/Δ keys.
9. To confirm your choice, press the  key.
10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.

Note: Having enabled the Flash function, to switch from the private branch exchange (PBX) to the public line, press the  key before dialling the telephone or fax number (the letter "E" appears on the display).

ENABLING/DISABLING ECM

The **ECM (Error Correction Mode)** is a system for correcting the errors caused by interference on the line. This function only has effect if it has been enabled both on your fax machine and on your correspondent's fax machine and is indicated by a letter "E" appearing on the display.

The fax machine is set up to send documents in this mode. However, you can set it up to send documents in normal mode, as follows:

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *FAX SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *VARIOUS SETT*.
5. Press the  key.
6. Press the  key to select *ECM*.
7. To view the available option *ECM - YES* or *NO* press the ∇/Δ keys.
8. To confirm your choice, press the  key.
9. To return the fax machine to its initial stand-by mode, press the  key.
10. If you want to move back one function, press the  key.

10 PRINTING REPORTS AND LISTS

PRINTING REPORTS

PRINTING LISTS

PRINTING REPORTS

By printing out reports, the fax machine enables you to check the result of all the transactions carried out (transmission and reception), the volume of documents handled and provides a lot of other useful information.

The fax machine prints the following reports:


 

 



- **Power failure report:** it is **always** and **automatically** printed after a **power failure, if there are documents in the memory**.
Once normal operating conditions have been restored, the fax machine will automatically print a report indicating the number of pages in the memory up to that time that you have lost. In this case, it is advisable to print the activity report to track down the number or name of the persons who sent you the documents that were lost.
- **Activity report:** contains information about the **last 42 transactions** carried out (fax transmission and reception operations), which the fax machine keeps in its memory and is **printed automatically** after the thirty-second transaction or **on request**.
- **Last transmission report:** contains information about the **last transmission** and can be **printed**, once programmed, **always and automatically** after each transmission or **on request** at the desired moment.
- **Failed transmission report:** also contains information about the **last transmission** but is **printed automatically** only **when the transmission has failed**. The fax machine is set by default to print this kind of report automatically, if you want to disable it, see the relevant section.
- **Last broadcast transmission report:** contains information about **the last broadcast transmission** and may be **printed always and automatically after each broadcast transmission** or **on request** at the desired moment.
- **Caller list:** contains the last 20 calls received (telephone or fax).

READING THE REPORTS

Item	Description
Act.N.	Progressive number of the transactions (transmission/reception) carried out.
Type	Type of transaction: TX or TX ECM for transmission. RX, RX ECM or RX POLLING for reception.
Doc.N	Reference number of document stored, assigned directly by the fax machine.
Dialled Number	Fax number of the correspondent you called.
Name	Name of the correspondent you called. Only displayed if you have saved it in the phone book. This field is not printed on the activity report.

Item	Description
Remote Id	Number (and, sometimes, name) of the correspondent called. This number corresponds to the number you dialled, only if the correspondent set his own fax number correctly. Otherwise, it may be different or not be present at all.
Date/Time	Date and time at which the transaction was carried out.
Duration	Length of transaction (in minutes and seconds).
Pages	Total number of pages sent/received.
Result	Result of the transaction: <ul style="list-style-type: none"> • OK: if the transaction was completed successfully. • ERROR CODE XX: if the transaction was not completed due to the cause indicated by the error code (see "Error codes", chapter "Troubleshooting guide").

ENABLING/DISABLING THE AUTOMATIC PRINTING OF THE TRANSMISSION AND FAILED TRANSMISSION REPORT

 



1. Press the  key.
2. Press the  keys until the display shows *FAX SET-UP*.
3. Press the  key.
4. Press the  keys until the display shows *VARIOUS SETT*.
5. Press the  key.
6. Press the  keys until the display shows *TX REPORT*.
7. Press the  key.

You can choose any of the following options: *TX REPORT - FOR FAILED TX*, *TX REPORT - ALWAYS* and *TX REPORT - NO*.




TX REPORT - FOR FAILED TX - the fax machine will automatically print a report only after each failed transmission.

 TX REPORT - ALWAYS - the fax machine will automatically print a report after each transmission irrespective of the result.

TX REPORT - NO - the fax machine will not print any report.

8. To view the other available options, press the  keys.
9. To confirm the setting, press the  key.
10. To return the fax machine to its initial stand-by mode, press the  key.
11. If you want to move back one function, press the  key.




PRINTING THE TRANSMISSION, ACTIVITY, BROADCAST TRANSMISSION AND CALLER ID REPORTS ON REQUEST

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *PRINT REPORT*.
3. Press the  key.
You can choose any of the following options: *PRINT REPORT - LAST TX REPORT*, *PRINT REPORT - LAST BROADCAST*, *PRINT REPORT - ACTIVITY REPORT* and *PRINT REPORT - CALLER ID LIST*.
4. To view the other available options, press the ∇/Δ keys.
5. To confirm the setting, press the  key.
Having printed the report, the fax machine automatically returns to its initial stand-by mode.




PRINTING LISTS

At any time, you can **print a complete list of the installation parameters, setup parameters and disabled numbers** as well as **print the data saved in the phone book**. By printing out the lists of installation and setup parameters, you will obtain an up to date report of the default values and those that you have set to adapt it to your operating requirements.

 


PRINTING THE LIST OF INSTALLATION PARAMETERS

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *INSTALLATION*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *PRINT INSTALL*.
5. To confirm the setting, press the  key. Having printed the report, the fax machine automatically returns to its initial stand-by mode.

PRINTING THE LIST OF SETUP PARAMETERS

1. Press the  key.
2. Press the ∇/Δ keys until the display shows *FAX SET-UP*.
3. Press the  key.
4. Press the ∇/Δ keys until the display shows *PRINT SET-UP*.
5. To confirm the setting, press the  key. Having printed the report, the fax machine automatically returns to its initial stand-by mode.

PRINTING THE LIST OF RECEPTION SETUP PARAMETERS

1. Press the  key.
2. Press the  key to select *RECEPT. SET-UP*.
3. Press the ∇/Δ keys until the display shows *PRINT SET-UP*.
4. To confirm the setting, press the  key. Having printed the report, the fax machine automatically returns to its initial stand-by mode.

PRINTING THE BLACK LIST NUMBERS

Once programmed (see "**Setting the black list**", chapter "**More advanced operations**"), the fax machine can disable a series of correspondents from whom you do not wish to receive any documents whatsoever. This function is useful to avoid receiving undesired documents such as: advertisements, propaganda, etc. All you have to do is save the undesired numbers on a list. Having done this you will not receive any documents from the correspondents whose numbers appear on the list (see "**Printing the black list**", chapter "**More advanced operations**").

PRINTING THE DATA SAVED IN THE PHONE BOOK

As described previously, you can print a list of the telephone numbers and fax numbers that you have saved in the phone book, see "**Programming the phone book**" and "**Printing data from the phone book**".

Page intentionally left blank.

11 TROUBLESHOOTING GUIDE

GENERAL


MINOR PROBLEMS

ERROR CODES

SIGNALS AND MESSAGES

ACOUSTIC ERROR SIGNALS

GENERAL

Problem	Description
There is a power failure.	If a power failure occurs, the fax machine keeps the following data in the memory: the numbers set in the phone book and the reports , while the documents present in the memory will be lost. The date and time will also be lost so they will have to be reset by carrying out the procedure described in the "Setting the date and time for the first time" section of chapter "Installation conditions" .
The paper or ink has run out.	If, during reception, the paper runs out or gets jammed, the ink runs out or the operator console is raised , the machine stops printing and the display shows the relevant message and the document you are receiving is temporarily recorded in the memory . Once the problem has been solved, the fax machine resumes printing.
The transmission is unsuccessful.	If transmission is not completed due to errors on the line or fax machine, the error LED  lights up and a short beep is emitted; in this case, the fax machine automatically prints the transmission report (see "Printing reports and lists"), on which an error code indicates the cause of the error (you will find a list of all the error codes later).
A document is placed in the automatic document feeder (ADF) while the fax machine is printing.	If you place a document in the automatic document feeder (ADF) while the fax machine is making a copy, printing a report or printing a document being received, the fax machine behaves as follows: <ul style="list-style-type: none">• if it is making a copy, the fax machine will stop printing and display a series of prompts to enable you to restore it to its initial stand-by mode;• if it is printing a report, the fax machine will stop printing and display a series of prompts to enable you to restore it to its initial stand-by mode;• if it is receiving a document:<ul style="list-style-type: none">- it will stop printing and start to save the document received. The display will show the message <i>RX IN MEMORY</i> .- Having saved the document, the display shows the message <i>DOC IN MEMORY</i> . At this point, the fax machine will prompt you to remove the document from the document feeder. The fax machine will then print the saved document.

MINOR PROBLEMS

The list below may be used as a guide to the solution of minor problems.

Problem	Solution
The fax machine displays no message at all.	Check that it is connected to the power outlet and the telephone socket.
The document is not fed in correctly.	Check that the document respects the recommendations listed in "What documents may be used" , chapter "Fax Transmission and reception operations" .
The fax machine will not send a document.	Check that the document is not jammed. The line is busy: wait until it is free and then try sending the document again.
The fax machine will not receive a document automatically.	It is set for manual reception: set it up for automatic reception.
The fax machine will not copy or receive documents.	Check that no documents or sheets of paper are jammed. You are using an unsuitable kind of paper: check the characteristics of the paper listed under "Technical data" in the "Appendix" .
The fax machine prints blank sheets.	Place the document in the correct position with the side to be copied face down.

Note: Incorrect transmission or reception by the fax machine may also depend on factors other than those listed above, which will be signalled in the form of **error codes** on the **"Transmission report"** and **"Activity report"**, see chapter **"Printing reports and lists"**.


ERROR CODES

The error codes printed both on the transmission report and the activity report consist of **two digits** indicating the **cause** of the error. To save space, the two-digit code without any message is printed on the activity report.

Code	Message	Cause of error	What to do
OK	<i>OK</i>	Operation performed successfully.	No action.
02	<i>IMPOSSIBLE CONNECTION CHECK WITH OTHER PARTY</i>	The fax machine does not detect any dialling tone or receives an irregular signal.	Check that the fax machine is correctly connected to the telephone line and that the handset is not off the hook. Then try connecting again.
03	<i>RECEIVER DOES NOT ANSWER</i>	The correspondent is not answering or is a fax machine.	Check that the correspondent's number is correct.
04	<i>ERR. WHILE TRANSMITTING RESEND FROM PAGE:</i>	An error occurred during transmission.	Resume transmission from the page indicated in the report.
05	<i>ERR. WHILE TRANSMITTING RESEND PAGES:</i>	The correspondent's fax machine found errors during reception.	Resume transmission of the pages indicated in the report.
06	<i>LINE BUSY</i>	The line is busy.	Retry when the line is free.
07	<i>DOCUMENT TOO LONG</i>	The document to be sent is too long. The time taken to send it exceeds the allowed limits.	Split up the document to be sent.
01 and 08	<i>CHECK THE DOCUMENT</i>	The optical reader cannot read the document.	Remove the document from the ADF and reinsert it. Then try connecting again.
09	<i>STOP PRESSED</i>	You aborted transmission.	No action.
10	<i>ERRORS WHILE RECEIVING CHECK WITH OTHER PARTY</i>	An error occurred during reception.	Call the correspondent and ask to send you the document again.

Code	Message	Cause of error	What to do
11	<i>IMPOSSIBLE RECEPTION MEMORY FULL</i>	During reception, a printing error occurred. Reception continued in the memory but the space left in the memory was filled before reception was completed.	Correct the fault and wait for the document in the memory to be printed.
OK	<i>OK?</i>	The document was received but the printing quality is unsatisfactory.	Call the correspondent.
13	<i>ERRORS WHILE POLLING CHECK WITH OTHER PARTY</i>	The correspondent did not leave any document in the ADF and did not set up fax machine for polling transmission.	Call back the correspondent.
76	<i>CARTRIDGE ERROR 76. REPLACE CARTRIDGE!</i>	Print cartridge malfunction.	Replace the cartridge.

SIGNALS AND MESSAGES

Any **problems** that may arise are generally indicated by **acoustic signals** (accompanied, in some cases, by **visual signals**: ERROR LED  indicator on) or by **error messages on the display**.

The fax machine also emits **acoustic signals** and shows **messages on the display**, which do **not indicate** an **error** condition.

ACOUSTIC ERROR SIGNALS

Short 1 second signal

- You pressed an incorrect key during an operating phase.

Long 3 second signal plus error LED indicator on

- Transaction not carried out correctly.

Continuous signal

- Request to hang up if you forgot to do so after an operation that required the handset to be lifted.

Note: To turn off the ERROR LED  indicator, press the  key.

OTHER ACOUSTIC SIGNALS

Short 1-second signal

- Transaction carried out successfully.

Intermittent 20-second signal

- Prompt to lift the handset to answer a telephone call.

12 MAINTENANCE OPERATIONS

REPLACING THE PRINT CARTRIDGE

CLEANING THE PRINT CARTRIDGE AND TESTING THE NOZZLES

CLEANING THE ELECTRICAL CONTACTS OF THE PRINT CARTRIDGE

CLEANING THE OPTICAL READER

CLEANING THE CASING

REMOVING JAMMED DOCUMENTS

REMOVING JAMMED SHEETS OF PAPER


REPLACING THE PRINT CARTRIDGE

The print cartridge **must be replaced** when **the ink runs out (used print cartridges cannot be used)** or when you notice a **deterioration in the print quality**.


In the former case, the fax machine automatically prints a sheet to remind you that the ink is about to run out and that you should replace the print cartridge.

The print cartridge being used is univocally associated to the fax machine. Therefore to safeguard correct printing, do not swap the print cartridges between fax machines.


1. Lower the handset and place it on a stable surface.

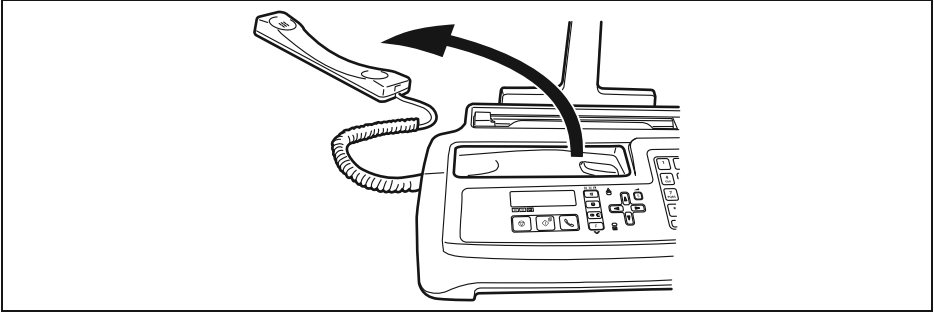


2. Lift the operator console as indicated by the arrow.

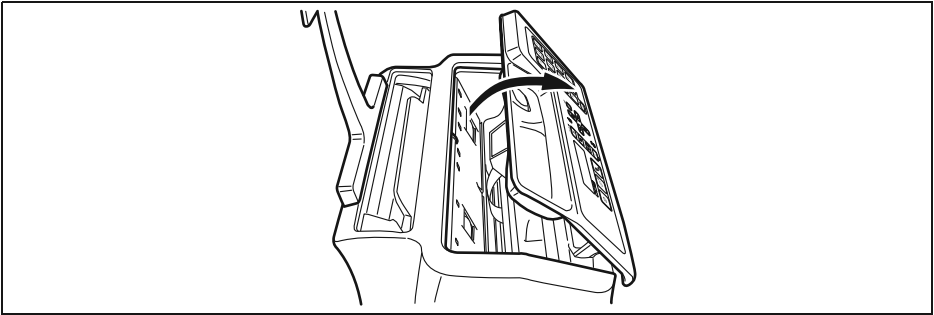


3. Release the print cartridge by pressing the lever as indicated by the arrow.

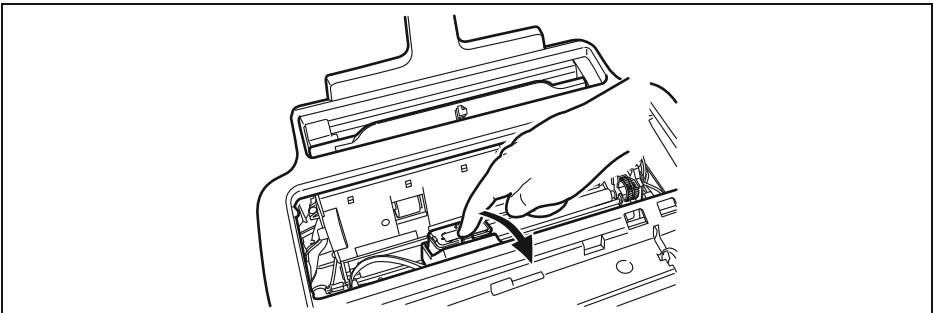


4. Remove the used print cartridge from its compartment.

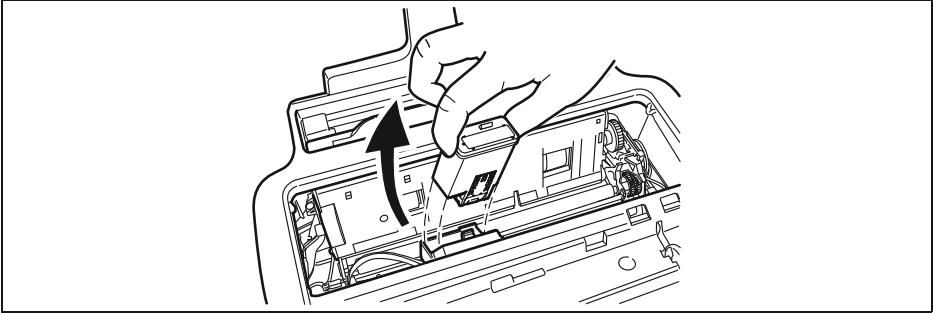


5. Take the new print cartridge out of its package and, holding it on both sides, peel off the film covering the nozzles.

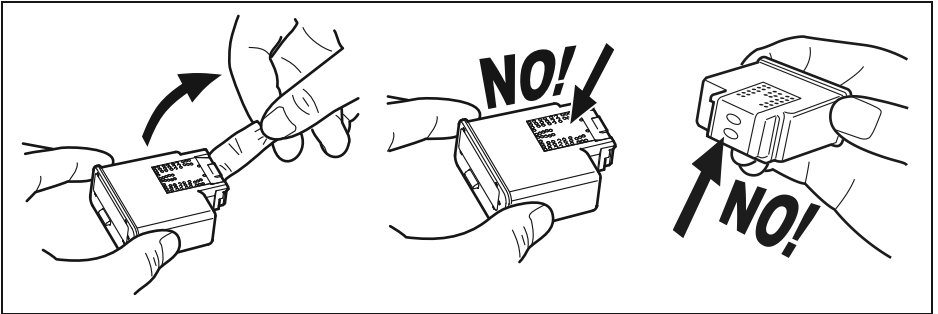


 **Warning:** Avoid touching the electrical contacts and the nozzles.

6. Insert the new print cartridge in its compartment with the electrical contacts facing towards the print cartridge compartment.

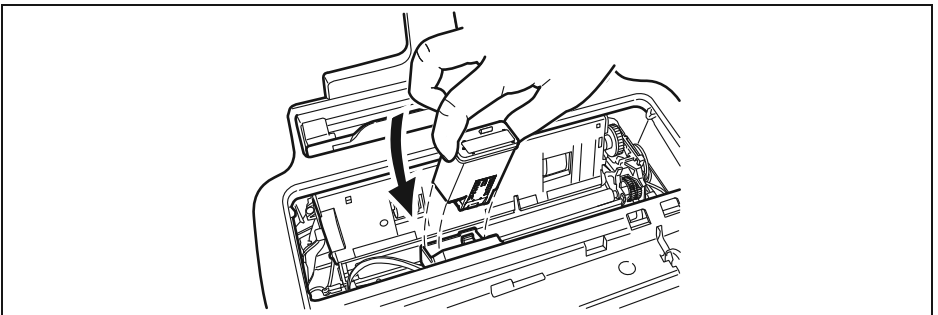

7. Push the print cartridge until it clicks into place.

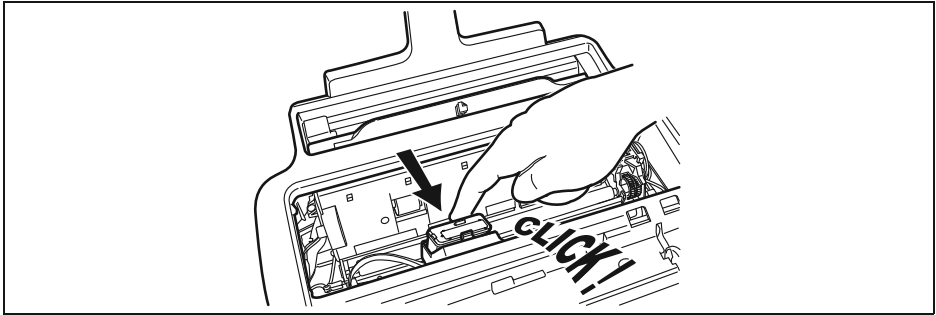

8. Close the operator console and put the handset back on its support.

Note: If you have replaced the cartridge because the **ink ran out**, when the operator console is closed, the fax machine will automatically recognize that the cartridge has been replaced and the **display will show** the message

SET DATA/TIME :
XX-XX-XX XX:XX




- 1 Enter the new date and time (eg. 13-05-08; 18:00) by pressing the -
wxyz keys and then press .
- 2 When the display shows *CONFIRM D/T* , press the key to confirm the data entered or press the key to make any modification.

At this point, the fax machine **automatically resets the cartridge and tests the nozzles**, and prints out a numbered scale and a message indicating that the cartridge has been replaced correctly on a sheet that it has loaded automatically.


If the print quality of the numbered scale is not satisfactory, see "**Inserting the print cartridge**" in the "**Installation instructions**" chapter.

CLEANING THE PRINT CARTRIDGE AND TESTING THE NOZZLES

If you notice a **deterioration in the print quality**, you can quickly clean the print cartridge and test the nozzles by following a procedure that ends by printing out the diagnostic test result with regard to its condition.


1. Press the  key until the display shows *RECEPT. SET-UP*.
2. Press the ∇/Δ keys until the display shows *CLEAN CARTRIDGE*.
3. To confirm your choice, press the  key.
4. To view the available option *CLEAN CARTRIDGE - YES*, press the ∇/Δ keys.
5. Press the  key.

The fax machine resets the cartridge and tests the nozzles, and then prints out the result of the diagnostic test. To interpret the diagnostic test result correctly, see "**Inserting the print cartridge**" in the "**Installation instructions**" chapter.


Note: The procedure may be aborted at any time, if desired, by pressing the  key.

- Note:** If the quality of the test result still fails to meet your expectations after carrying out the cleaning procedure, continue as follows, stopping when you get a satisfactory printing quality:
- Make a copy of a document with the desired type of graphics or text on the fax machine and evaluate its quality.
 - Change the type of paper (the paper in use could be excessively porous) and repeat the procedure.
 - Remove and reinsert the print cartridge.
 - Remove the print cartridge and check that there are no foreign bodies on the print nozzles; if there are, remove them carefully, taking care not to touch the electrical contacts. Finally, reinstall the print cartridge.
 - Remove the print cartridge and clean the electrical contacts both on the print cartridge and on the print cartridge carriage, see the following section "**Cleaning the electrical contacts of the print cartridge**".
 - Reinstall the print cartridge.
 - Call the engineering service.


CLEANING THE ELECTRICAL CONTACTS OF THE PRINT CARTRIDGE

 **Warning:** Before proceeding, the fax machine must be unplugged from the electrical outlet.


1. Unplug the fax machine's power cord from the electrical outlet.

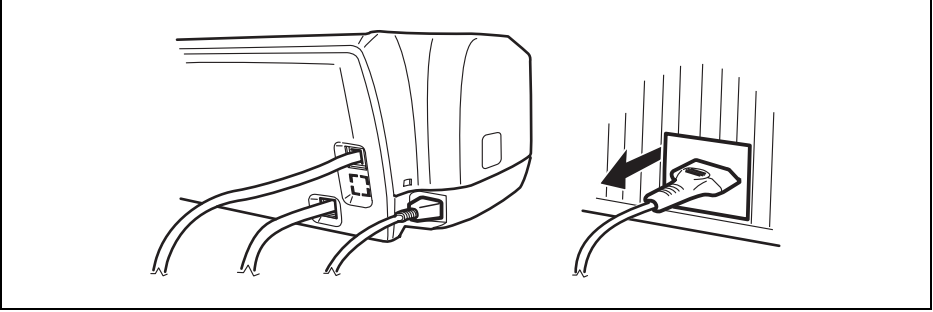


2. Lower the handset and place it on a stable surface.

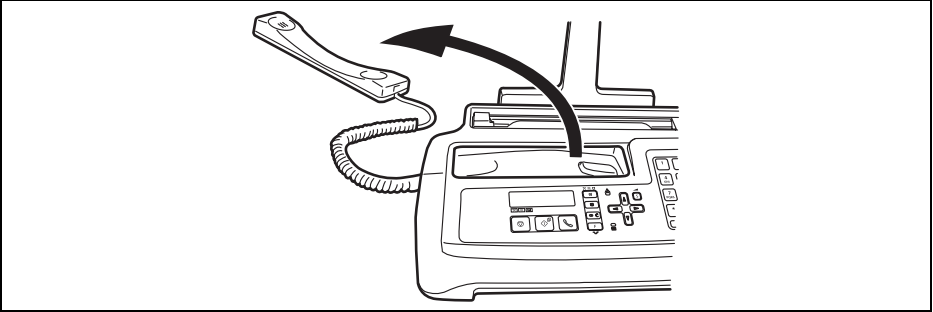


3. Lift the operator console as indicated by the arrow.

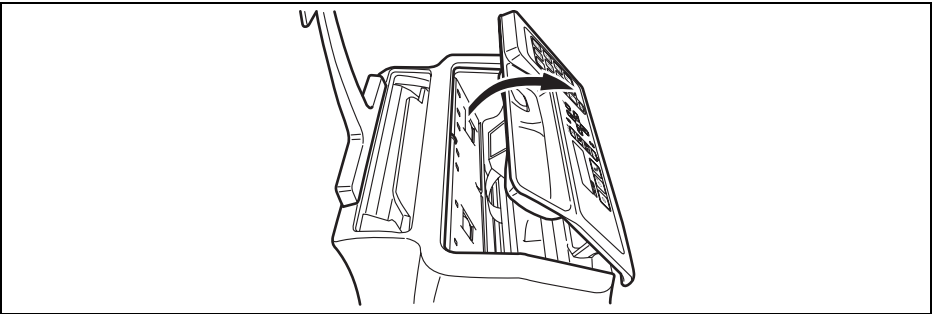


4. Release the print cartridge by pressing the lever as indicated by the arrow.

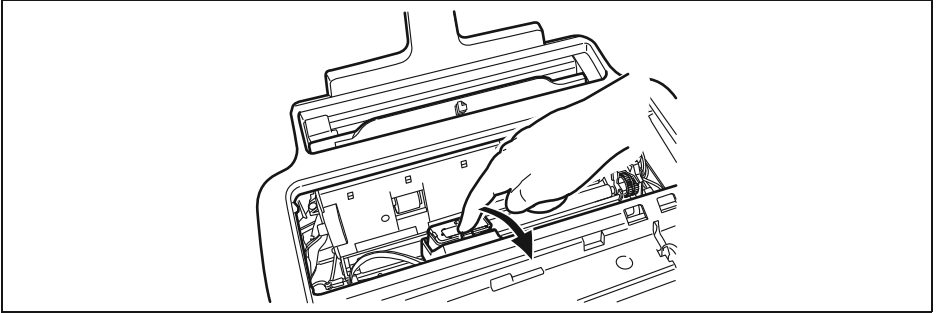


5. Take the print cartridge out of its compartment.

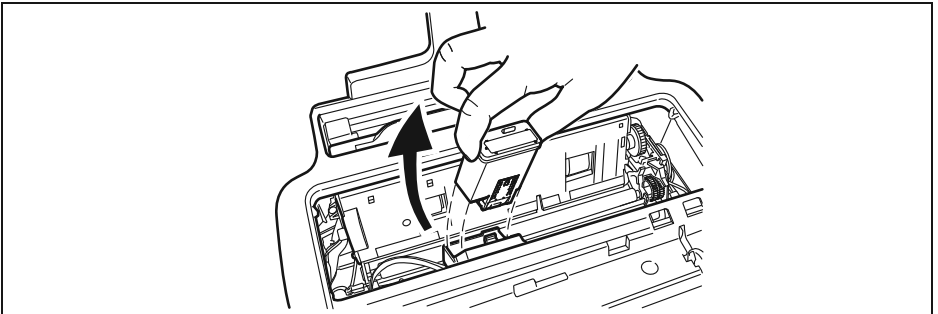


6. Clean the electrical contacts using a slightly damp cloth.

 **Warning:** Do not touch the nozzles!

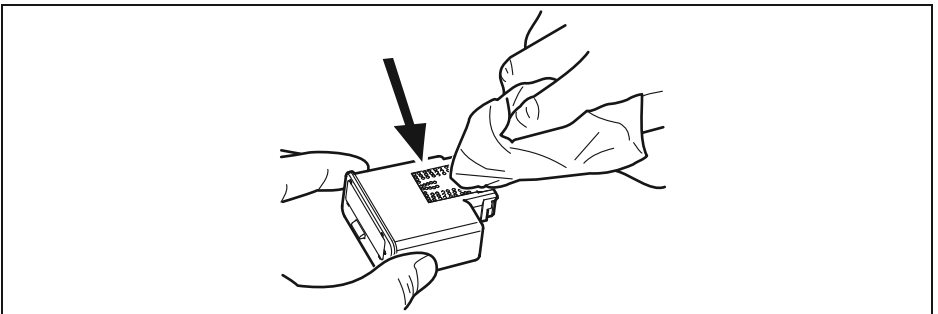


7. Clean the electrical contacts of the print cartridge carriage with a slightly damp cloth.

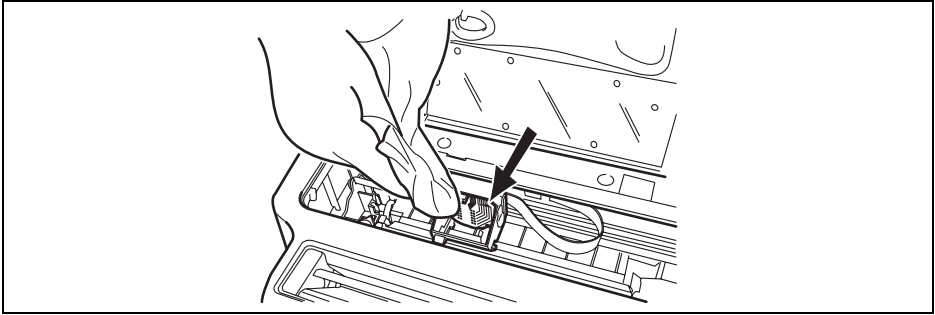


8. Insert the print cartridge in its compartment with the electrical contacts facing towards the print cartridge compartment.
9. Push the print cartridge until it clicks into place.
10. Close the operator console and put the handset back on its support.

CLEANING THE OPTICAL READER


Dust accumulating on the glass surface of the optical reader may cause problems in the scanning of documents. To avoid these problems, the glass should be cleaned every now and again as follows:

 **Warning:** Before proceeding, the fax machine must be unplugged from the electrical outlet.


1. Unplug the fax machine's power cord from the electrical outlet.

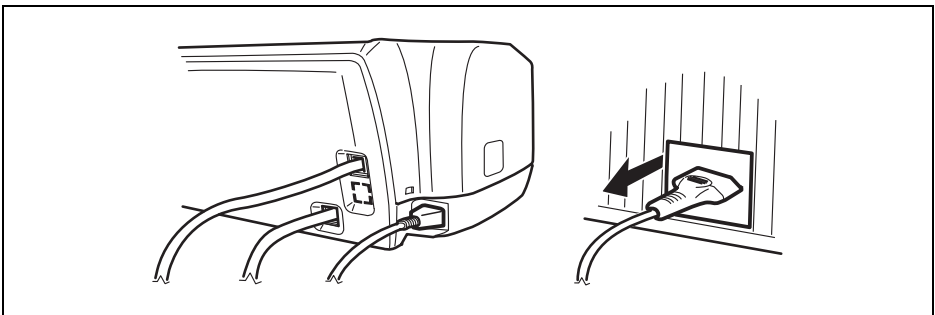


2. Lower the handset and place it on a stable surface.

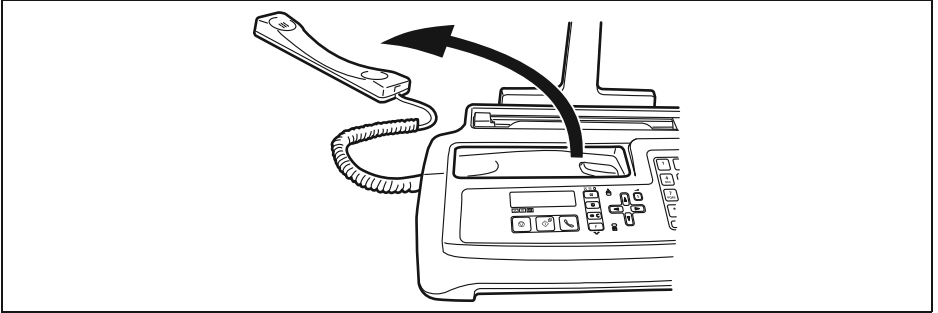


3. Lift the operator console as indicated by the arrow.

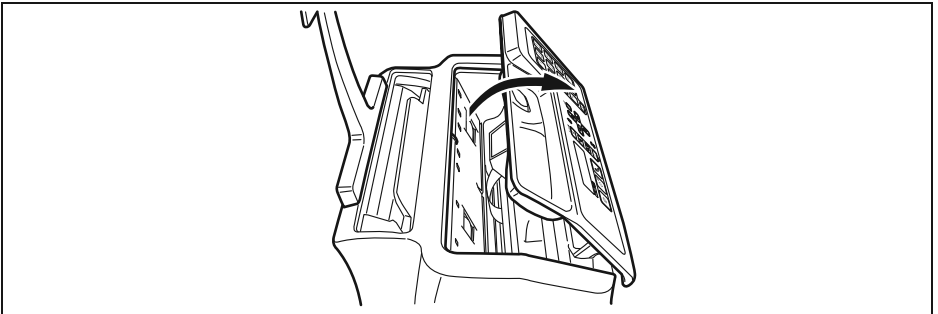


4. Move the print cartridge carriage to the left-hand edge of the fax machine.

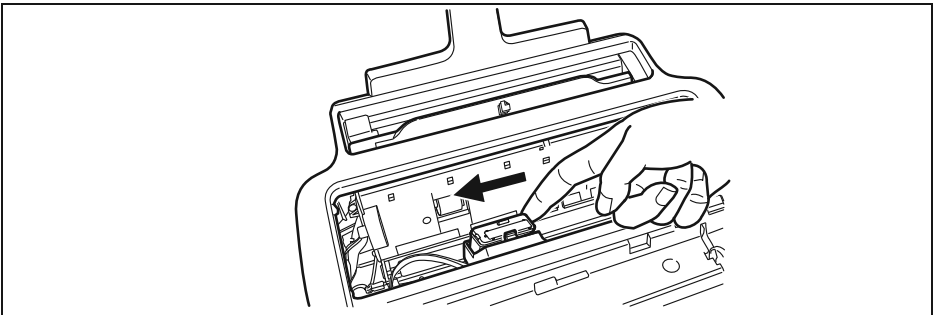


5. Release the paper feed roller by pressing the lever, as indicated by the arrow.

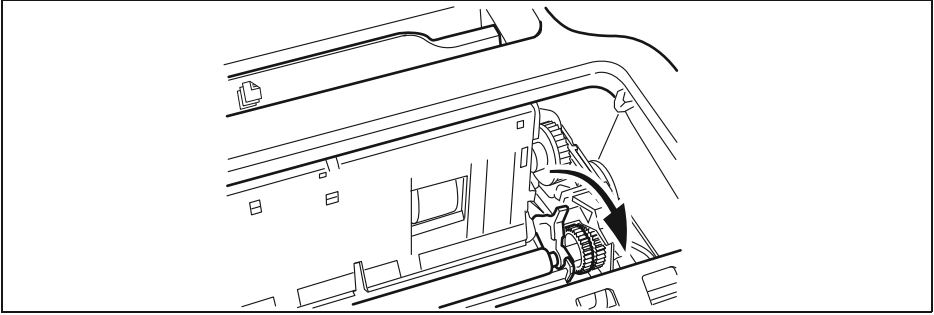


6. Remove the roller from its compartment.

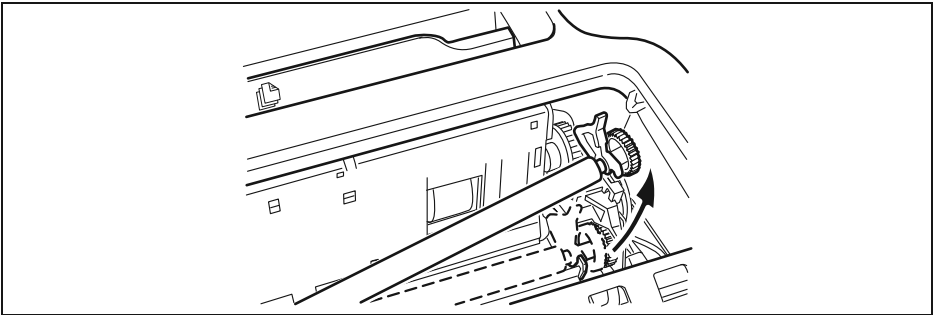


7. Clean the glass surface of the optical reader with a **cloth dampened** with a product designed specifically for cleaning glass and then dry it thoroughly.


 **Warning:** Do not pour or spray the cleaning product directly onto the glass surface.

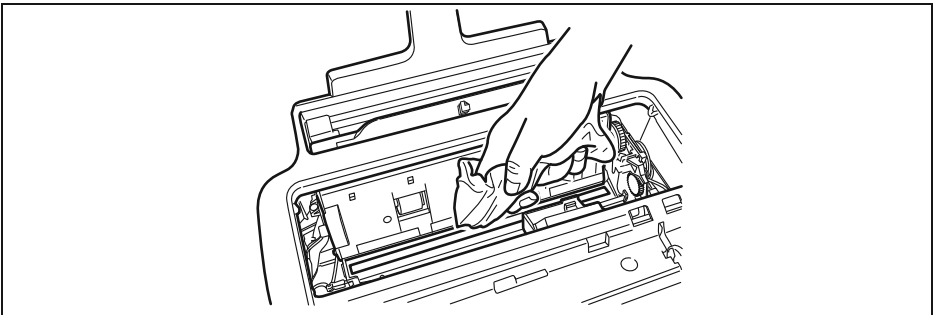

- Place one end of the roller on the pin situated on the left-hand side of the fax machine, as indicated by the arrow.

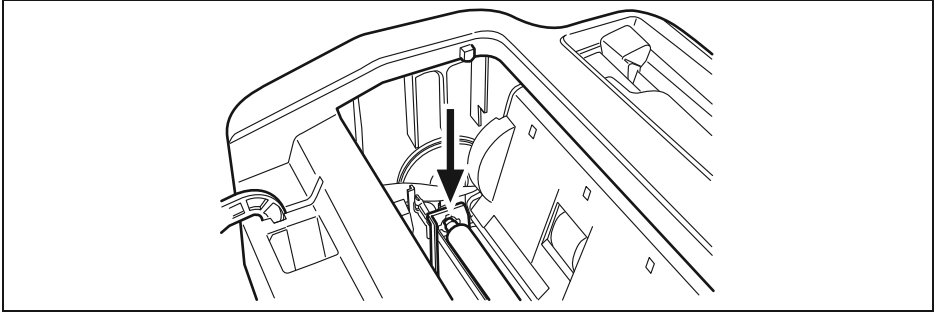

- Engage the roller by pressing the lever, as indicated by the arrow.

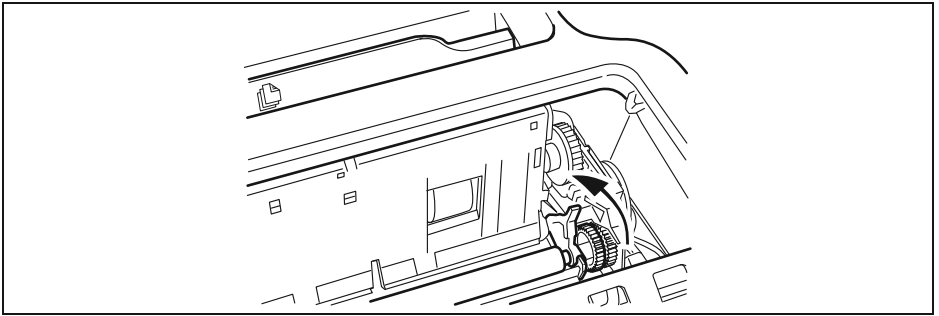


- Close the operator console and put the handset back on its support.

Note: To check whether the optical reader is clean, make a copy of a blank sheet. If any vertical lines appear on the copy and the optical reader looks perfectly clean, contact qualified technical staff.

CLEANING THE CASING

- Unplug the fax machine from the power outlet and the telephone socket.**
- Use exclusively a soft, lint-free cloth dampened with a neutral detergent diluted with water.

REMOVING JAMMED DOCUMENTS

During **transmission** or **copying**, a **document** could get jammed (this condition is signalled by the display showing the message: *REMOVE DOCUMENT, PRESS<V>*). Try to unload the document by pressing the  key.

If the document is not unloaded, remove it manually as follows:

1. Pull the document upwards, taking care not to tear it.




or

2. Pull the document downwards, taking care not to tear it.


Note: Never use pointed objects to remove jammed documents.



REMOVING JAMMED SHEETS OF PAPER

If the paper used to print received documents or to copy documents gets jammed (this error is signalled on the display by the message *PAPER ERROR, PRESS <▽>*), try to unload the sheet by pressing the  key. If the sheet is not unloaded, remove it manually as follows:

1. Pull the sheet upwards, taking care not to tear it.

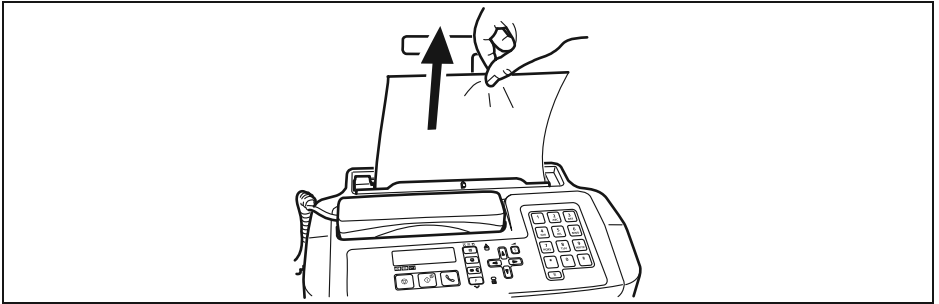

or

2. Pull the sheet downwards, taking care not to tear it.



Note: Never use pointed objects to remove jammed sheets of paper.

Note: If you cannot manage to remove the jammed document or sheet of paper after performing the removal operations, it may be trapped inside the fax machine. If this is the case, proceed as follows:

1. Lower the handset and place it on a stable surface (see fig. 2 of procedure "**Cleaning the optical reader**").
2. Open and lift the operator console (see fig. 3 of procedure "**Cleaning the optical reader**").
3. Move the print cartridge carriage to the left-hand edge of the fax machine (see fig. 4 of procedure "**Cleaning the optical reader**").
4. Release the paper feed roller by pressing the lever (see fig. 5 of procedure "**Cleaning the optical reader**").
5. Remove the roller from its compartment (see fig. 6 of procedure "**Cleaning the optical reader**").
6. Remove the jammed document or sheet of paper.
7. Place one end of the roller on the pin situated on the left-hand side of the fax machine (see fig. 8 of procedure "**Cleaning the optical reader**").
8. Engage the roller by pressing the lever (see fig. 9 of procedure "**Cleaning the optical reader**").
9. Close the operator console and put the handset back on its support.

Page intentionally left blank.

APPENDIX

TECHNICAL SPECIFICATIONS

MANUFACTURER

CUSTOMER SERVICE

TECHNICAL SPECIFICATIONS

GENERAL CHARACTERISTICS

Model Desktop transceiver
Display LCD, 16 + 16 char.
Capacity memory max. 50 pages

Dimensions
Width 340 mm
Depth..... 220 mm - 235 mm (**)
Height..... 133 mm - 272 mm (**)
Weight..... approx. 2.5 Kg

COMMUNICATION CHARACTERISTICS

Telephone network..... Public/private
Compatibility..... ITU
Communication speed 14400 - 9600 - 7200 - 4800 - 2400
(with automatic "fall back")
Compression method MH, MR, MMR

POWER SUPPLY CHARACTERISTICS

Voltage 220-240 VAC or 110-240 VAC
(see the data plate on the base of the fax machine)
Frequency 50-60 Hz (see the data plate on the base of the fax machine)
Power absorbed:
- in stand-by mode < 4 W
- max. power..... max. 25 W

ENVIRONMENTAL CONDITIONS

Temperature..... from +5 °C to +35 °C (operating)
from -15 °C to +45 °C (transport)
from 0 °C to +45 °C (short and long-term storage)
Relative humidity..... 15%-85% (operating/short and long term storage)
5%-95% (transport)

OPTICAL READER CHARACTERISTICS

Scanning method..... CIS
Scanning resolution:
- Horizontal 8 pixels/mm
- Vertical STANDARD 3.85 lines/mm
- Vertical FINE 7.7 lines/mm

TRANSMISSION CHARACTERISTICS

Transmission speed..... approx. 7 sec (14400 bps) (*)
Capacity of document feeders..... **Automatic Document Feeder (ADF):**
10 sheets A4 (70-90 gr/m²)

RECEPTION CHARACTERISTICS



Printing systemPrinting on plain paper, bubble ink jet printer
Max. printing width204 mm
Max. printing length282 mm
Printing paperA4 (210 x 297 mm)
Paper feedPlain paper cassette (max 40 sheets of 80 gr/m²)

TELEPHONE ANSWERING DEVICE CHARACTERISTICS (ONLY MODEL WITH A BUILT-IN TELEPHONE ANSWERING DEVICE)

- Recording capacity: about 18 minutes
- Memo
- 2 outgoing messages
- Outgoing messages-only function
- "Toll saver" function
- Fast access from console and remote location
- Access code
- Call transfer message
- Message recording
- Retention of messages in case of a power failure.

(*) = Test Sheet Slerexe Letter with standard resolution, MMR compression.

(***) = With the paper support extension.

	STANDARD FORM CCITT R1
THE SLEREXE COMPANY LIMITED	
<small>SAPORS LANE - BOOLE - DORSET - BH 25 8 ER TELEPHONE BOOLE (04513) 51617 - TELEX 123456</small>	
Our Ref. 350/PJC/EAC	4th April, 1984
 Dr. P. N. Cundall, Mining Surveys Ltd., Holroyd Road, Reading, Berks.	
Dear Pete,	
Permit me to introduce you to the facility of facsimile transmission.	
In facsimile a photocell is caused to perform a raster scan over the subject copy. The variations of print density on the document cause the photocell to generate an analogous electrical video signal. This signal is used to modulate a carrier, which is transmitted to a remote destination over a radio or cable communications link.	
At the remote terminal, demodulation reconstructs the video signal, which is used to modulate the density of print produced by a printing device. This device is scanning in a raster scan synchronised with that at the transmitting terminal. As a result, a facsimile copy of the subject document is produced.	
Probably you have uses for this facility in your organisation.	
Yours sincerely,	
	
<small>P. J. CROSS Group Leader - Facsimile Research</small>	

MANUFACTURER

Olivetti S.p.A. con unico azionista
Gruppo Telecom Italia
Direzione e coordinamento di Telecom Italia S.p.A.
Via Jervis, 77 - 10015 IVREA (TO)
ITALY

CUSTOMER SERVICE

If the fax machine is not working as it should, or you require information or clarification from the manufacturer, call the number indicated on the "Warranty Card".

Page intentionally left blank.

**ORIGINAL OLIVETTI CONSUMABLES
ECO-FRIENDLY
RESPECT YOUR HEALTH AND THE ENVIRONMENT**

Olivetti continues in its pursuit to improve the environmental conditions and protect the environment in which it operates. It provides its customers with safe and reliable consumables in respect of the best operating conditions, and strives to ensure the full environmental compatibility of its technologies and production processes.

Olivetti bases its production aims on respect of the principles of environmental protection and the conservation of natural resources for future generations.


To this aim, Olivetti has adopted the following environmental policy measures: to conform to the provisions of the national laws by taking the necessary steps to change its management policy towards the safeguarding of the environment, to take environmental aspects into consideration right from the decision-making processes involved in the design of consumables, to use materials that have a lighter impact on the environment, to avoid using raw materials containing excipients that are believed to cause cancer, to avoid manufacturing consumables that, during normal use, may cause harm to man or the environment, and to collaborate with organizations that promote the principles of environmental protection.

To implement a schedule of periodic checks of environmental performance, with the spirit of prevention that comes from the improvement achieved, such as:

- To reduce in the estimate and design phase the production of waste and pollutants, by carrying out incoming tests on the goods received;
- To use thermal, electrical and transformation energy with high efficiency, to save non-renewable natural resources;
- To choose processes and equipment with a low energy consumption both inside the company and towards suppliers;
- To recover and recycle the materials and consumables that permit effective, concrete collection processes: paper, cardboard, aluminium/iron, PET, glass, packaging wood.

All consumables are manufactured in such a way as to limit the environmental impact and conform to the regulations in force.

Olivetti has banned the use of a number of hazardous substances (chromium, cadmium, mercury, lead and others) in the manufacture of its products.

Olivetti consumables conform to the CONTROL OF POLLUTION FROM ELECTRONIC INFORMATION PRODUCTS SJ/T11363-2006 (CHINA RoHs) regulation in force since 1st March 2007 in the Republic of China and bear the  trademark "Free from hazardous substances".

In addition, Olivetti takes part in the process of implementation of the R.E.A.C.H. (Registration, Evaluation and Authorisation of Chemicals - CE 1907/2006) regulation, which establishes a single regulatory framework for the classification and registration of existing chemical substances and came into force on 1st June 2007 with a view to protecting health and the environment, using exclusively substances conforming to the regulation.

The company:

- Requests suppliers to certify that the substances, preparations, consumables and packages conform to the general health and environmental protection specifications;
- Guarantees that no substances harmful for the ozone layer are used in the processes for the manufacture of consumables and packages;
- Reduces the quantity of material used, through efficient production processes;
- Prints cartridge installation instructions only in the machine's manual without adding leaflets to the cartridge packet, thus saving many tons of paper per year;
- Designs consumables and packages in such a way that they can be recycled easily.

In the pursuit of this policy, Olivetti has started to manufacture, also for its new fax machines, a new generation of ECO-FRIENDLY consumables, following the implementation of complete and constant improvements in its development and production processes. They meet environmental safety requirements and regulations right from the design phase, offering high levels of quality, performance and reliability, using fewer materials that are more efficient from the energy point of view and easy to recycle, and maximizing added value.

FJ83

**THE ONLY CARTRIDGE TO BE USED
WITH YOUR FAX**



www.olivetti.com

Page intentionally left blank.



MANUFACTURER'S CE DECLARATION of CONFORMITY according to ISO/IEC 17050

OLIVETTI S.p.A. Via Jervis, 77 - IVREA (TO) - ITALY

Declares under its sole responsibility that:

the product described in this guide

is IN COMPLIANCE with directive 99/5/EC dated 9th March 1999

fulfills the essential requirements of **Electromagnetic Compatibility and of Electrical Safety** as prescribed by the Directives:

2004/108/EC dated 15th December 2004;

2006/95/EC dated 27th December 2006;

since designed and manufactured in compliance with the following European Harmonized Standards:

EN 55022 : 2006 (Limits and methods of measurements of radio interference characteristics of Information Technology Equipment) / Class B;

EN 61000-3-2 : 2005 (Electromagnetic Compatibility (EMC) - Part 2: Limits - Section 2: Limits for harmonic current emissions (equipment input current \leq 16 A per phase);

EN 61000-3-3/A1 : 2002 (Electromagnetic Compatibility (EMC) - Part 3: Limits - Section 3: Limitation of voltage fluctuations and flicker in low voltage supply systems for equipment with rated current up to and including 16A);

EN 55024/A2 : 2003 (Electromagnetic Compatibility - Information technology equipment - Immunity characteristics - Limits and methods of measurement);

EN 60950-1 : 2006 (Safety of Information Technology Equipment, including electrical business equipment).

Moreover the product is in compliance with following Standards:

ETSI TBR 38: May 1998 (Requirements for a terminal equipment incorporating an analogue handset function capable of supporting the justified case service when connected to the analogue interface of the PSTN in Europe);

ETSI ES 203 021: January 2006 Access and Terminal (AT); Harmonized basic attachment requirements for Terminals for connection to analogue interfaces of the Telephone Networks.

Compliance with the above mentioned essential requirements is shown by affixing the **CE marking** on the product.

Scarmagno, 8th June 2008

Olivetti S.p.A.

Notes: 1) CE Marking has been affixed in 2008.

2) The Quality System is in compliance with the UNI EN ISO 9000 series of Standards.

381746B-01