

olivetti



Ink Jet Fax

Fax_Lab 710/730

INSTRUCTIONS

EDITED/PUBLISHED/PRODUCED BY:

Printed in China.

Olivetti S.p.A. con unico azionista
Gruppo Telecom Italia
Direzione e coordinamento di Telecom Italia S.p.A.

Code of user manual: 380550N

Date of publication: October 2007.

Copyright © 2007, Olivetti

All rights reserved. No parts of this manual may be photocopied, reproduced or translated into other languages without prior written authorization from Olivetti S.p.A.

The manufacturer reserves the right to make any changes to the machine described in this manual, at any time, and without prior warning.

This machine has been approved, under the terms of Council Decision 98/482/EC, for Europe-wide connection as a single terminal to an analogue Public Switched Telephone System (PSTN) system. However, due to differences between individual PSTNs in the various countries, the approval does not unconditionally guarantee success operation of every PSTN termination point.

If you encounter any problems, you should contact your supplier immediately.

The manufacturers declare under their own responsibility that this product complies with provisions laid down by the directive 1999/05/CE (the full declaration can be found at the end of this manual).

Conformance is certified by the application of the  mark to the product.

Network compatibility declaration

This product has been designed and developed to operate in the networks of all European Community countries, and in those of Switzerland and Norway.

Full compatibility with the networks of individual countries will depend on specific national software parameters which can be set in the product. If you encounter problems with non EC PSTN networks, contact your national technical support service.

Your attention is drawn to the following conditions that could compromise the conformity attested above as well as the machine's characteristics:

- incorrect electrical supply;
- incorrect installation, erroneous or improper use, or any use that differs from what is indicated in the User Manual supplied with the machine;
- replacement of components or original parts using other types, not approved by the manufacturer, or where carried out by unauthorized persons.

The electrical socket must be near to hand and easily accessible. To disconnect the machine from the electrical power supply, unplug it from the supply socket.

BEFORE YOU START	3
CONSULTING THE MANUAL	3
ENVIRONMENTAL RECYCLING	3
SAFETY PRECAUTIONS	3
ABOUT THE INSTALLATION AND SETUP PARAMETERS	4
ABOUT THE FAX MACHINE	5
CONSOLE	5
COMPONENTS	7
HOW TO GET STARTED QUICKLY	8
PACKAGE CONTENTS	8
INSTALLATION CONDITIONS	8
CONNECTING TO THE TELEPHONE LINE AND POWER SUPPLY	8
SETTING SOME PARAMETERS	9
SETTING UP THE FAX MACHINE	14
TO PRINT THE MENU AND ITS FUNCTIONS	16
TRANSMISSION	17
RECEPTION	18
USING THE TELEPHONE	19
MAKING COPIES	21

CONSULTING THE MANUAL

This manual describes two models of fax machine, the only difference between them being that one is equipped with a built-in telephone answering device and the other is not.

In the description that follows, whenever a distinction is to be made between these two models, reference will be made to: "**Base model**" and "**Model with a built-in TAD**".

This manual is divided into **two main parts**: the first part provides a short description of the fax machine, **explaining how to install it and get started immediately**, using its basic functions only.

After this initial phase, you can consult the **second part** of the manual. In it you will find a **detailed description of the fax machine and its many functions**.

ENVIRONMENTAL RECYCLING

The cardboard box, the plastic present in the package and the various parts of the fax machine may be recycled in accordance with the recycling regulations in force in your country.

Information about Directive 2002/96/CE on the treatment, collection, recycling and disposal of electric and electronic devices and their components.

1. FOR COUNTRIES IN THE EUROPEAN UNION (EU)

The disposal of electric and electronic devices as solid urban waste is strictly prohibited: it must be collected separately. The dumping of these devices at unequipped and unauthorized places may have hazardous effects on health and the environment.

Offenders will be subjected to the penalties and measures laid down by the law.

To dispose of our devices correctly:

- a) Contact the Local Authorities, who will give you the practical information you need and the instructions for handling the waste correctly, for example: location and times of the waste collection centres, etc.
- b) When you purchase a new device of ours, give a used device similar to the one purchased to our dealer for disposal.

The crossed dustbin symbol on the device means that:



- when it is to be disposed of, the device is to be taken to the equipped waste collection centres and is to be handled separately from urban waste;
- Olivetti guarantees the activation of the treatment, collection, recycling and disposal procedures in accordance with Directive 2002/96/CE (and subsequent amendments).

2. FOR OTHER COUNTRIES (NOT IN THE EU)

The treatment, collection, recycling and disposal of electric and electronic devices will be carried out in accordance with the laws in force in the country in question.

SAFETY PRECAUTIONS

RISK OF AN ELECTRIC SHOCK

- Never attempt to repair the fax machine yourself. If you remove the casing, you risk getting an electric shock or suffering some other kind of injury. Repairs should be carried out by qualified technical staff only.
- **During storms we recommend you unplug the device from both the power outlet and the telephone line so as to eliminate the risk of it being damaged by lightning.**
- Never pour liquids on the fax machine and avoid exposing it to the damp.
If liquids seep inside it, unplug it immediately from the mains power supply and the telephone line. Before using it again, have it repaired by qualified, technical staff.
- Do not use the fax machine outside in bad weather.
- Connect the fax machine exclusively to a certified wall power socket.
- To unplug the power cable from the wall power socket, remove the plug and refrain from yanking the cable.
- Never touch the power cable or plug with wet hands.
- Do not fold or squash the power cable. Keep it away from heat sources.
- Before cleaning the fax machine, unplug it from the wall power socket.
- Before using the fax machine, check that it has not been damaged or dropped. If it has, have it checked by a qualified engineer.

RISK OF SUFFOCATION

- The fax machine and its accessories are wrapped in plastic so do not let children play with the packaging material.

RISK OF FIRE

- If you are to leave the fax machine unused for a long period of time, you should disconnect it from the power supply: in this way, it will be protected against the risk of damage due to interference or power surges.

RISK OF ACCIDENT

- Place it on a stable, flat surface free of all vibrations so as to avoid drops that could cause damage to the machine and injury to persons.
- Lay the power cable so that it cannot be trodden on or tripped over.
- Never let children use or play with the fax machine.

OPERATING PRECAUTIONS

- Keep the fax machine in a dust-free place away from sources of water, steam and excessive heat. Do not expose it to direct sunlight.
- Ensure that no books, documents, or other objects obstruct normal ventilation in any way.
- Use the fax machine exclusively at a temperature of between 5°C and 35°C and a relative humidity of between 15% and 85%.
- Keep the fax machine away from other electrical and electronic appliances that may cause interference, e.g. radios, televisions, etc.
- If a voltage drop or power failure occurs, it will not be possible to make or receive telephone calls as the keypad will be disabled.
- In an emergency, if you wish to make a call, you must use a telephone certified by the telephone company, connecting it directly to the fax machine (in countries where this is allowed) or directly to the telephone wall socket.
- Leave enough room in front of the outlet from which documents and received/copied documents are unloaded, so that they do not fall on the floor.

IMPROPER USE

The fax machine was designed to send and receive documents and to copy paper documents. The machine may also be used as a telephone. All other uses are to be considered improper. In particular, it is never to be connected directly to an ISDN line and, if it is, the guarantee becomes null and void.

ABOUT THE INSTALLATION AND SETUP PARAMETERS

As the country default values for each installation and setup parameter may change due to certification requirements or specific customers' needs, these values do not always correspond to those indicated in the manual: it is therefore advisable to print them before changing them (see "**To print reports and lists**", chapter "**Transmission and reception operations**").

CONSOLE

- Adjusts the resolution of the documents to be sent and copied (only with the document inserted in the ADF).
- Puts the line on hold during a telephone conversation (with the handset raised).
- Turns off the microphone, during a "handsfree" telephone call, so that the correspondent cannot hear what is said at your end of the line.


- Gives access to the menu and its functions.
- Inserts a pause during the dialling of the telephone or fax number.

- They scroll cyclically forwards or backwards through the functions and related parameters on the menu.
- Move the cursor to the "right" and to the "left" while entering numbers and names.

MODEL WITH A BUILT-IN TAD ONLY

- Used to perform TAD functions. Described in the corresponding chapter.

- Dial the fax or telephone number.
- If held down for more than one second, they automatically dial (once set) the telephone number or fax number assigned to them.
- Enter numeric data.
- Select digits and alphanumeric characters during the entry of numbers and names.

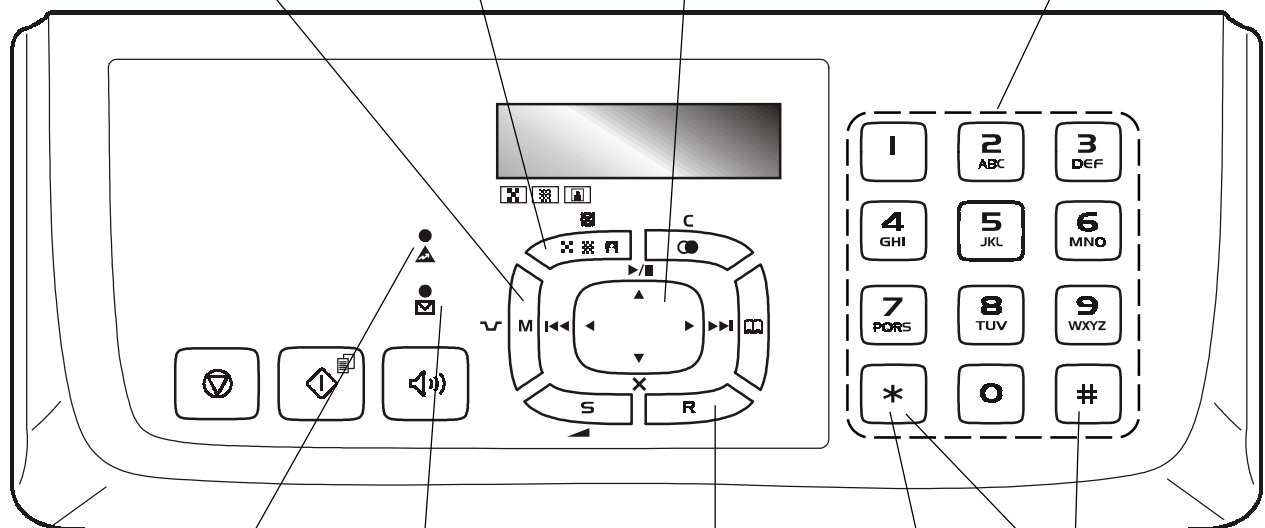

"Error" LED indicator

Signals an operating fault during transmission or reception.

Blinking, indicates that the memory contains documents that have not been printed.

Off, indicates that the memory is empty.

MODEL WITH A BUILT-IN TAD ONLY

On, indicates that there are messages or memos in the memory that have already been played.

Blinking, indicates that the memory contains documents that have not been printed, messages or memos that have not been played.

Off, indicates that the memory is empty.

With the handset lifted, gives access to the special functions made available by the network manager and commonly known as REGISTER RECALL (R function).

With the fax machine connected to a private exchange:

When pressed before the number is dialled, it enables a call to be made on the public line (if the output mode is Flash and if the fax machine was programmed correctly).

- With tone dialling, they send a tone down the line for special network services.
- They scroll "backwards" and "forwards" through characters and special symbols during the entry of names.

When pressed before dialling a number, it enables you to switch from pulse dialling to tone dialling.


- Unloads a document from the ADF.
- Turns off the "●" LED indicator.
- Returns the fax machine to the stand-by mode.
- Stops the programming, transmission, reception or copying operation in progress.

- Used to dial a telephone or fax number without lifting the telephone handset.
- Also activates the handsfree function.


Display

A two-line liquid crystal display with a capacity of 16 characters per line.

Shows operator prompts and error messages.

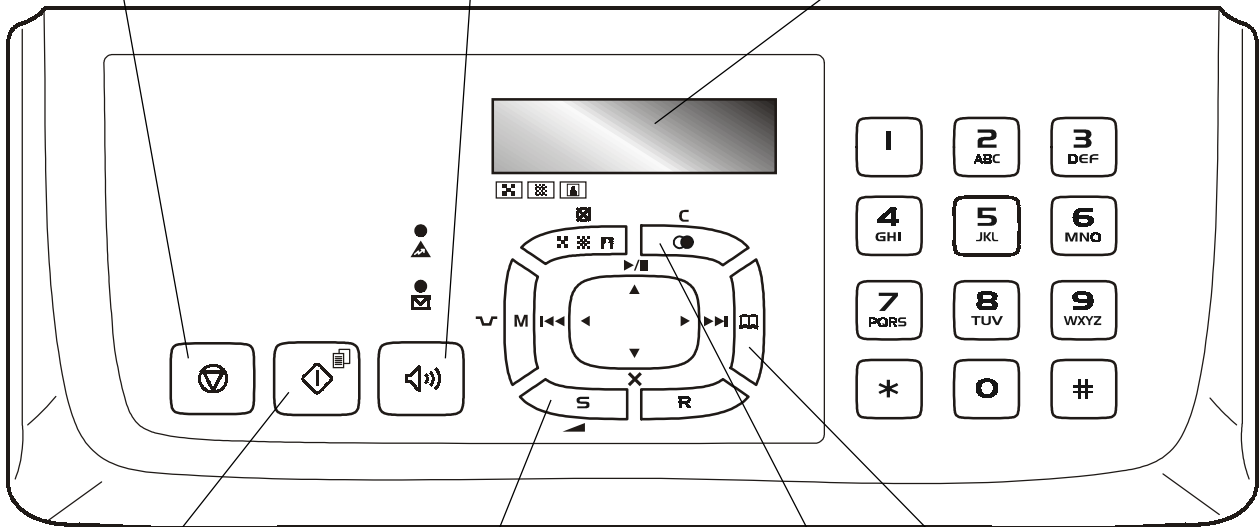

- In "MANUAL" and "PHONE/FAX" reception modes starts receiving a document.
- After the fax number has been dialled, starts sending a document (only with the document inserted in the ADF).
- Confirms the selection of menus, submenus, parameters and their values and moves on to the next condition.
- Starts copying a document (only with the document inserted in the ADF).



After the  button has been pressed, it turns the speaker volume "up" or "down".

Gives access to the Phone book.

- Deletes incorrect settings from the display.
- During the function programming phase, it moves one function back.
- Displays a list of the last 10 fax or telephone numbers dialled (**outgoing calls**) or the last 20 numbers from which calls have been received and not answered (**incoming calls**), irrespective of whether or not a document was present in the ADF.

COMPONENTS

The figure shows the external and internal parts of fax machine.

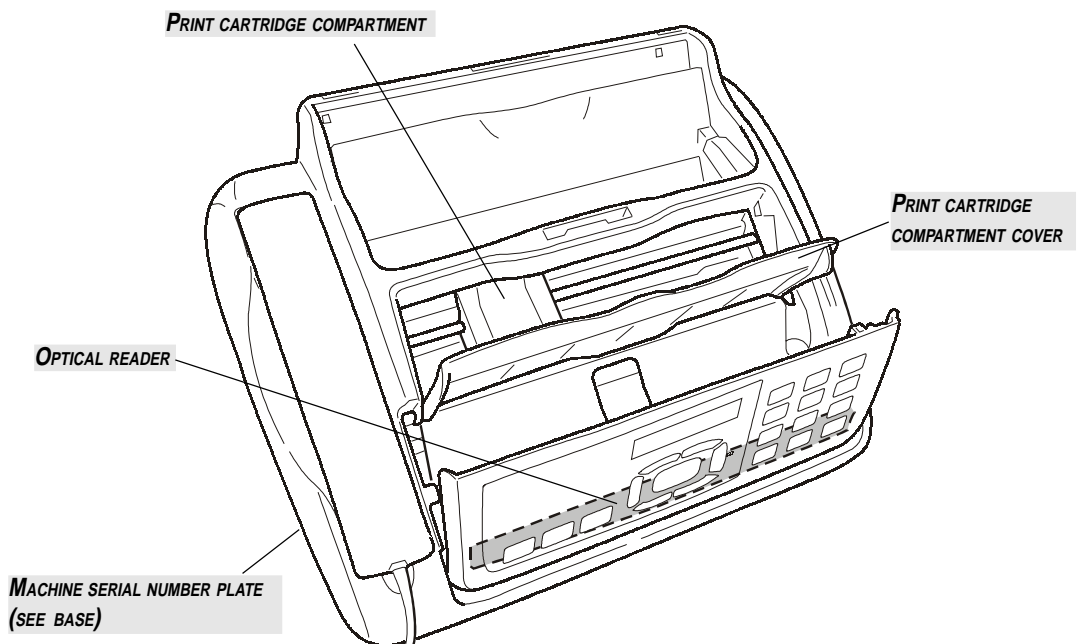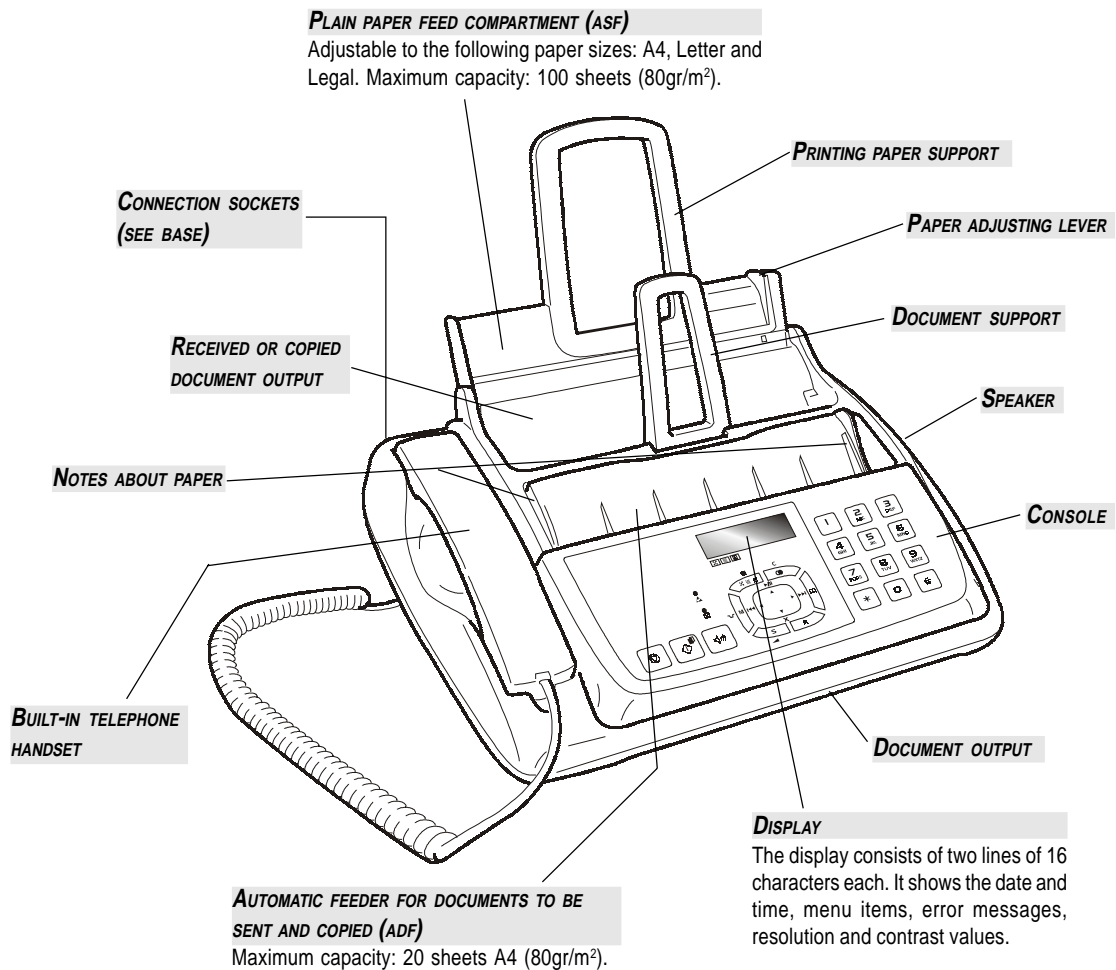

HOW TO GET STARTED QUICKLY

This section provides a **basic description** of the fax machine, explaining how to install it and get started quickly, using its basic functions only. For a **more comprehensive use** of the fax machine, **see the corresponding section**.

As this section is designed to give you a **gradual and systematic approach to the fax machine**, we recommend you read the topics in the order in which they are presented.

PACKAGE CONTENTS

In addition to the fax machine and this manual, you will find the following elements in the package:

- The document support.
- The printing paper support.
- The cable for connecting the fax machine to the telephone line.
- The power cable.
- The telephone plug (if applicable).
- The box containing a free monochrome print cartridge provided with the machine.
- The telephone handset.
- Aftersales support information.

IMPORTANT

The use of non-original or refilled print cartridges makes the product's guarantee null and void.

INSTALLATION CONDITIONS


Place the fax machine on a stable, flat surface. Make sure there is enough room for ventilation.

Keep the fax machine in a dust-free place away from sources of excessive heat or humidity. Do not expose it to direct sunlight.


CONNECTING TO THE TELEPHONE LINE AND POWER SUPPLY

CONNECT THE FAX MACHINE TO THE TELEPHONE LINE

1. Lay the fax machine on its right side.

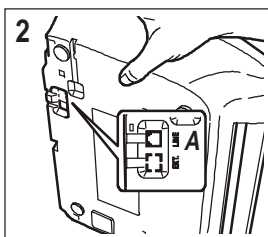


2. Insert the plug at the end of the telephone line connecting cable into the "LINE" socket on the bottom of the fax machine (A).

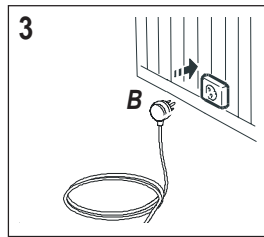


3. Insert the connector or the plug (if applicable) at the other end of the cable into the wall telephone line socket (B).


CONNECT THE TELEPHONE HANDSET

1. Lay the fax machine on its right side.

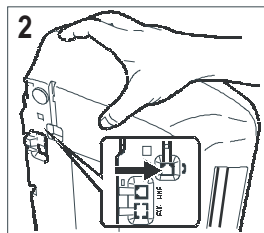

2. Insert the connector of the handset cable into the socket marked with the symbol  on the fax machine.


3. Fix the handset cable into the groove made for this purpose.
4. Replace the fax machine in its normal position.

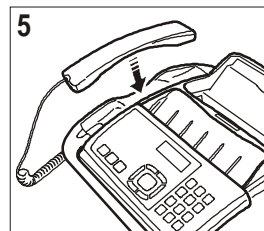

5. Place the handset in its seat.

CONNECTING THE EXTERNAL TAD (BASE MODEL ONLY) OR AN EXTERNAL TELEPHONE

1. Lay the fax machine on its right side.

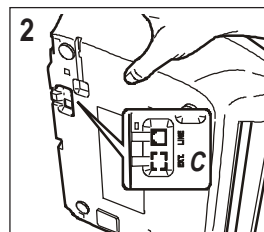


2. Remove the cover, if present, from the socket for connecting to the telephone line, "EXT", on the fax machine and insert the plug of the external TAD or external telephone in this socket (C).

IMPORTANT

In countries where this kind of connection is not allowed (for example, Germany and Austria), connect the external telephone directly to the telephone wall socket.

CONNECT THE FAX MACHINE TO THE POWER SUPPLY

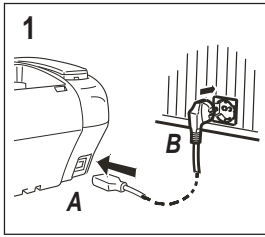

1. Insert the female connector (A) at one end of the power cable into the male connector on the rear of the fax machine.

Then insert the plug (B) at the other end of the cable into the wall power socket.

IMPORTANT

The plug (B) of the power supply cable may vary from country to country.

SETTING SOME PARAMETERS

Once the fax is connected to the power supply, it automatically runs a short test to check that its components are working and the display may show:

- the language in which the messages will be displayed or
- the message "AUTOMATIC 00" ("AUTOMATIC" in the **base model**) and, alternating on the second line, the messages "SET DATE/TIME" and "CHECK CARTRIDGE".

In the first case, to enable the fax machine to work properly, you must set the language and country in which it is to be used as described in the procedure below. In the second case, you can move on to set the date and time directly.

TO SET THE LANGUAGE AND THE COUNTRY OF DESTINATION

The display shows the language in which the messages are displayed. For example:

LINGUA
ITALIANO ◆

1. To select the desired language, press the keys:

◆ The display shows, for example:

LINGUA
ENGLISH ◆

2. To confirm the setting, press the key:

◆ The display shows a country of destination, for example:

CHOOSE COUNTRY
ITALIA ◆

3. To select the desired country, press the keys:

◆ The display shows, for example:

CHOOSE COUNTRY
U.K. ◆

To select a different country, see the table below:

COUNTRY	COUNTRY TO BE SELECTED
Argentina	AMERICA LATINA
Australia	AUSTRALIA
Austria	ÖSTERREICH
Belgium	BELGIUM
Brazil	BRASIL
Chile	AMERICA LATINA
China	CHINA
Colombia	AMERICA LATINA
Denmark	DANMARK
Finland	SUOMI
France	FRANCE
Germany	DEUTSCHLAND
Holland	NEDERLAND
Italy	ITALIA
Luxembourg	BELGIUM
Mexico	AMERICA LATINA
New Zealand	AUSTRALIA
Norway	NORGE
Peru	AMERICA LATINA
Portugal	PORTUGAL
Rest of world	INTERNATIONAL
Spain	ESPAÑA
Sweden	SVERIGE
Switzerland	SWITZERLAND
UK/Ireland	U.K.
Uruguay	AMERICA LATINA
Venezuela	AMERICA LATINA

4. To confirm the setting, press the key:

 




The fax machine automatically returns to its initial stand-by mode.

IMPORTANT

The fax machine may not be on sale in all of the countries listed above.

TO CHANGE THE LANGUAGE AND THE COUNTRY OF DESTINATION

Press  +  and repeat the procedure "To set the language and the country of destination" from the start, remembering always to confirm the settings made by pressing the  button.

TO CHANGE THE COUNTRY ONLY

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys

◆ until the display shows:

MENU
INSTALLATION ◆

3. Press the key:

 The display shows:


INSTALLATION
STATION NAME ◆

4. Press the keys

◆ until the display shows:

INSTALLATION
COUNTRY SET-UP ◆

5. Press the key:

 The display shows the default country, for example:

COUNTRY SET-UP
U.K. ◆

6. To display the other available countries, press the keys:



7. To confirm your choice, press the key:



8. To return the fax machine to its initial stand-by mode, press the key:



9. If you want to move back one function, press the key:



To CHANGE THE LANGUAGE ONLY

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys

◆ until the display shows:

MENU
INSTALLATION ◆

3. Press the key:



The display shows:

INSTALLATION
STATION NAME ◆

4. Press the keys

◆ until the display shows:

INSTALLATION
LANGUAGE ◆

5. Press the key:



The display shows the default language, for example:

LANGUAGE
ENGLISH ◆

6. To display the other available languages, press the keys:



7. To confirm your choice, press the key:



8. To return the fax machine to its initial stand-by mode, press the key:



9. If you want to move back one function, press the key:



To SET THE DATE AND TIME FOR THE FIRST TIME

The **first time** you **connect** the fax machine to the **power supply** or whenever there is a **power failure** you must set the date and time as described below.

The date and time will be printed at the top of all documents sent and will be shown on the display when the fax is in stand-by mode.

Once set, the date and time can be changed at any time. You can also modify the format in which they are shown on the display, see "To change the date and time".

The display shows "AUTOMATIC 00" ("AUTOMATIC" in the **base model**) on the first line and "SET DATE/TIME" on the second line.

1. Press the key:



The display shows:

MENU
SET DATE/TIME ◆

2. Press the key:



The display shows:

SET DATE/TIME
XX-XX-XX XX:XX

"XX-XX-XX XX:XX" indicate the date and time shown on the display for the first time having connected the fax machine.

3. To enter the new date and time (e.g. 10-09-07; 12:25), press the keys:



As each digit is entered, the cursor will move to the next one.

4. If you wish to move the cursor to digits to be modified, press the keys:



5. Then overwrite the digits with the correct ones, by pressing the keys:



- To confirm the setting, press the key:



The fax machine automatically returns to its initial stand-by mode.

N O T E

Stand-by mode is the status in which the fax machine is idle and is the mode in which the machine can be programmed. Stand-by mode will be shown on the display as follows:

- Without the original document inserted in the ADF.

For the model with a built-in TAD:

AUTOMATIC 00

10-Sep-07 12:25

For the base model:

AUTOMATIC

10-Sep-07 12:25

- With the original document inserted in the ADF.

DOCUMENT READY

NORMAL

TO CHANGE THE DATE AND TIME

If the date and time shown on the display are not correct, you can change them at any time.

Bear in mind that if you have the caller ID function enabled, the date and time will be automatically brought up to date whenever you receive a call.

- Press the key:



The display shows:

MENU

RECEPT. SET-UP ◆

- Press the keys



until the display shows:

MENU

FAX SET-UP ◆

- Press the key:



The display shows:

FAX SET-UP

DATE AND TIME ◆

- Press the key:



The display shows:

DATE AND TIME

SET DATE/TIME ◆

- At this point, you can choose between the following options:

"SET DATE/TIME" - To modify the date and time set previously.

"DATE FORMAT" - To choose the date format that will be shown on the display.

"HOUR FORMAT" - To choose the time format that will be shown on the display.

- Press the key:



The display shows:

SET DATE/TIME

XX-XX-XX XX:XX

"XX-XX-XX XX:XX" indicate the current date and time.

- To display one of the options listed above, press the keys:



- To confirm the setting, press the key:



- If you have made a mistake or wish to abort the procedure in progress, press the key:



N O T E

If you have chosen the "SET DATE/TIME" option, proceed as follows:

- Enter the new date and time (e.g. 13-09-07; 18:00), by pressing the keys: -. As each digit is entered, the cursor will move to the next one.
- If you wish to move the cursor to digits to be modified, press the keys: / .
- Then overwrite the digits with the correct ones, by pressing the keys: -.
- To confirm the setting, press the key: .
- To return the fax machine to its initial stand-by mode, press the key: .
- If you want to move back one function, press the key: .

If you have chosen the "DATE FORMAT" option, proceed as follows:





- The display shows: "DATE FORMAT" and "DD/MM/YY".
- If you want to select a different format from the one displayed, press the keys: .
- To confirm the setting, press the key: .
- To return the fax machine to its initial stand-by mode, press the key: .
- If you want to move back one function, press the key: .

If you have chosen the "HOUR FORMAT" option, proceed as follows:

- The display shows: "HOUR FORMAT" and "24 HOURS".
- If you want to select a different format from the one displayed, press the keys: .
- To confirm the setting, press the key: .
- To return the fax machine to its initial stand-by mode, press the key: .
- If you want to move back one function, press the key: .

NOTE

If you have chosen the 12-hour time format, the display will show the letter "p" (post meridiem) or the letter "a" (ante meridiem). To switch from one format to the other:

1. Repeat the procedure until the message "DATE AND TIME - SET DATE/TIME" appears and then press the  key.
2. Position the cursor, using the /  keys, below the letter to be modified.
3. Press the keys .

To switch from a public line to a private line (PBX)

The fax machine is set up for connection to a public line but you can connect it to a private line and use it on a public line, too. To do this, proceed as follows:

- Select the "PRIVATE(PBX)" parameter.
- Set the same dialling mode (**tone** or **pulse**) as the one used by the private telephone exchange that manages the line to which you have connected the fax machine. If in doubt about the choice to be made, ask the company that manages your private telephone network.


To switch from the public line to the private line:

1. Press the key:

 The display shows:

MENU
RECEPT. SET-UP 

2. Press the keys

 until the display shows:


MENU
INSTALLATION 

3. Press the key:

 The display shows:

INSTALLATION
STATION NAME 


4. Press the keys

 until the display shows:

INSTALLATION
TEL.LINE SETUP 

5. Press the key:

 The display shows:

TEL.LINE SETUP
LINE TYPE 

6. Press the key:

 The display shows:

LINE TYPE
PUBLIC(PSTN) 

7. To choose the other option, "LINE TYPE - PRIVATE (PBX)", press the keys:



8. To confirm the setting, press the key:



9. To return the fax machine to its initial stand-by mode, press the key:



10. If you want to move back one function, press the key:



To modify the dialling mode:

This function is only enabled in some countries.

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP 

2. Press the keys



until the display shows:

MENU
INSTALLATION 

3. Press the key:



The display shows:

INSTALLATION
STATION NAME 

4. Press the keys




until the display shows:

INSTALLATION
TEL.LINE SETUP 

5. Press the key:



The display shows:

TEL.LINE SETUP
LINE TYPE 

6. Press the keys



until the display shows:

TEL.LINE SETUP
DIAL MODE 

7. Press the key:



The display shows:

DIAL MODE
TONE 

8. To choose the other option, "DIAL MODE - PULSE", press the keys:



9. To confirm the setting, press the key:



10. To return the fax machine to its initial stand-by mode, press the key:



11. If you want to move back one function, press the key:



ALL THAT IS MISSING NOW IS YOUR NAME AND FAX NUMBER

Once set, the name (**max. 16 characters**) and number (**max. 20 digits**) will remain unchanged until they are intentionally changed and will be printed on each page received by your correspondent's fax machine.

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
INSTALLATION ◆

3. Press the key:



The display shows:

INSTALLATION
STATION NAME ◆

4. Press the key:



The display shows:

STATION NAME

—

5. To select the characters of each key cyclically, press the keys:



6. To leave a space, press the keys:



7. To move the cursor under the first character of the name, press the key:



8. To move the cursor after the last character in the name, press the key:



9. To include a variety of special symbols, e.g. &, in your name, press the keys:



10. To insert a character in the name, move the cursor to the point where you want to insert the new character, by pressing the keys:



11. Then type the character you want to add.

12. To delete incorrect characters, move the cursor to the right of the incorrect character by pressing the keys:



13. Then press the key:



14. To delete the whole name, hold down the key:



For example, to enter the name "LARA":



Until you have selected the letter "L".



Until you have selected the letter "A".



Until you have selected the letter "R".



Until you have selected the letter "A".

15. To confirm the name, press the key:



The display shows:

INSTALLATION
STATION NAME ◆

Now enter the fax number as indicated below:

To set your fax number:

1. Press the keys:



The display shows:

INSTALLATION
STATION NUMBER ◆

2. Press the key:



The display shows:

STATION NUMBER

—

3. To enter your fax number, press the keys:



4. To leave a space, press the keys:



If you make any typing errors, correct them in the same way as for your name.

If you want to include the international code in your number, instead of the zeros, press the * key; the display will show the symbol "+".

5. To confirm the fax number, press the key:



6. To return the fax machine to its initial stand-by mode, press the key:



7. If you want to move back one function, press the key:



Position of your name and fax number:

The information at the top of the document to be sent (name, fax number, date and time and number of pages) may be received by your correspondent's fax machine:

- outside the text area immediately below the top edge of the sheet;
- or
- inside the text area, slightly lower down than in the previous case.

Your fax machine is designed to send this information inside the text area.

To change the position:

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys
◆ until the display shows:

MENU
FAX SET-UP ◆

3. Press the key:



The display shows:

FAX SET-UP
DATE AND TIME ◆

4. Press the keys:



The display shows:

FAX SET-UP
VARIOUS SETT. ◆

5. Press the key:



The display shows:

VARIOUS SETT.
ECM ◆

6. Press the keys
◆ until the display shows:

VARIOUS SETT.
FAX HEADER ◆

7. Press the key:



The display shows:

FAX HEADER
INSIDE ◆

8. To select the alternative parameter, press the keys:



The display shows:

FAX HEADER
OUTSIDE ◆

9. To confirm the setting, press the key:



10. To return the fax machine to its initial stand-by mode, press the key:




11. If you want to move back one function, press the key:




SETTING UP THE FAX MACHINE


FEED THE PRINT PAPER INTO THE MACHINE

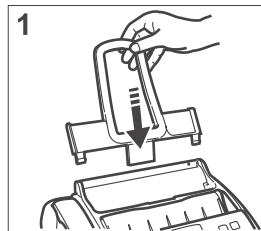


1. Push the paper support extension in the slots until it clicks into position.

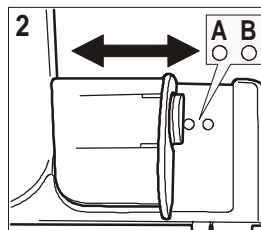

2. Using the adjusting lever, select the paper size to be used and put the lever in position A for A4 or B for Legal/Letter format.

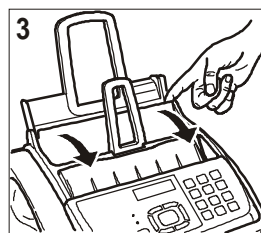

3. Open the automatic sheet feeder (ASF) panel as indicated by the arrows.

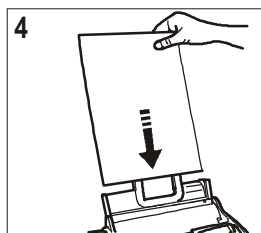

4. Grip the sheets you want to insert by the upper edge. Let them drop loosely into the ASF without bending them.



5. Close the ASF panel as indicated by the arrows.

I M P O R T A N T

If you add sheets (max. 100) to the ASF, make sure you place them **under** and not on top of those already present. The fax machine has a **memory** that enables it to **receive** up to **150 pages (base model only)** even if you do not add any paper; **for the model with a built-in telephone answering device only**, the capacity may be less than 150 pages according to the duration of the messages recorded on the telephone answering device.

CHOOSING THE PRINTING PAPER SIZE

Check the printing paper size set matches the actual size of the paper inserted. If this is not the case, correct performance of the fax machine is not guaranteed.

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
FAX SET-UP ◆

3. Press the key:



The display shows:

FAX SET-UP
DATE AND TIME ◆

4. Press the keys



until the display shows:

FAX SET-UP
PRINTER PARAM. ◆

5. Press the key:



The display shows:

PRINTER PARAM.
PAPER SIZE ◆

6. Press the key:



The display shows:

PAPER SIZE
A4 ◆

7. To choose one of the other available settings, "PAPER SIZE - LETTER" or "PAPER SIZE - LEGAL", press the keys:



8. To confirm the setting, press the key:



9. To return the fax machine to its initial stand-by mode, press the key:



10. If you want to move back one function, press the key:




INSERT THE PRINT CARTRIDGE


I M P O R T A N T

The fax machine comes with a free starter cartridge, which may however only be used once. If you reinsert it after the ink out message has been displayed, the following message will appear: "BEWARE! CARTRIDGE ALREADY USED! THE CARTRIDGE MAY ONLY BE USED ONCE". Remember only to use original cartridges (see code printed at the end of the manual). Non-original or refilled cartridges are not to be used. The use of such cartridges makes the product's guarantee null and void.


If, after the cartridge has been installed, the "CHECK CARTRIDGE" message appears again, try removing it and then reinserting it, pressing it more firmly into position. If the message remains on the display, remove the cartridge and clean the electrical contacts of the cartridge and the carriage, see "To clean the electrical contacts of the print cartridge", section "Maintenance operations".

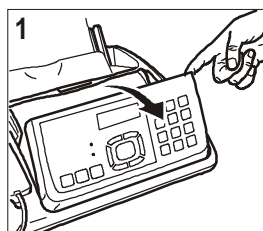


1. Flip the operator console forwards as indicated by the arrow.

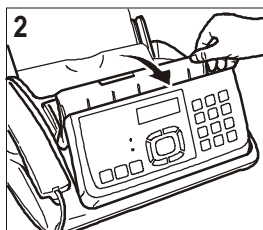

2. Lift the print cartridge compartment cover using the lever, as shown in the figure.

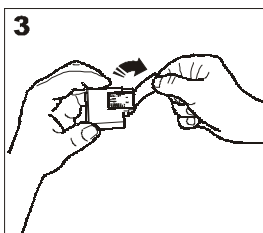


3. Take the cartridge out of its package and, holding it on both sides, peel off the film covering the nozzles. Turn the print cartridge so that the electrical contacts face downwards.

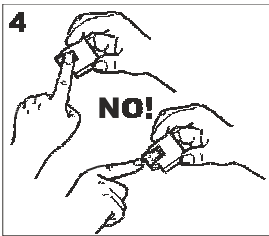


Attention:

- Avoid touching the nozzles and the electrical contacts.

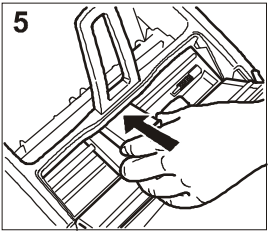

- Push the print cartridge into its housing.

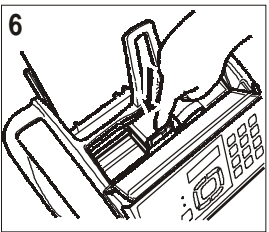

- Push the print cartridge until it audibly clicks into position.

- Close the print cartridge compartment cover and the operator console.

I M P O R T A N T

The **free cartridge provided with the machine** allows you to **print up to 80 pages***, whereas the **cartridges that you will buy subsequently** have a greater capacity and will thus allow you to **print up to 450 pages***.

* Based on Test Chart ITU T n.1 (black coverage = 3,8%).

Once the cartridge has been inserted, the fax machine starts the **nozzle cleaning and checking procedure**, which is completed by:

- the **printing**, on the sheet loaded automatically, of a diagnostic test sheet containing:
 - a **numbered scale**, for checking the flow of ink and the electrical circuits of the cartridge nozzles.
 - a group of **graphics and text**, so that the printing quality may be evaluated.
- the display shows the message: "CHECK PRINT OUT", "1=EXIT 0=REPEAT".

Examine the print test sheet as follows:

- Check that the numbered scale is **not broken at any point** and that the black areas **do not present any horizontal white lines**: if these conditions, which confirm that the cartridge has been inserted correctly and is working properly, are respected, set the value **1**. The fax machine returns to its initial stand-by mode and is ready for use. The display shows "AUTOMATIC 00" ("AUTOMATIC" on the **base model**) on the first line and the current date and time on the second line.
- On the other hand, if there are any **breaks or white lines** present, set **0** to clean the nozzles again: if the new print test continues to be unsatisfactory, repeat the procedure another time. At this point:
 - if the printing quality still does not meet your expectations, clean the electrical contacts as indicated in the **"To clean the electrical contacts of the print cartridge"** section of the **"Maintenance operations"** chapter.
 - if the printing quality is satisfactory, set the value **1**. The fax machine returns to its initial stand-by mode and is ready for use.

I M P O R T A N T

When the cartridge is about to run out of ink, the display shows:

CARTRIDGE LOW

and the fax machine **prints**, on a sheet loaded automatically, the indication that **the ink is about to run out**.

When there is no ink left, the display shows:

CHANGE CARTRIDGE

To replace the cartridge, see the section **"Maintenance operations"**.

To buy new print cartridges, see the **corresponding code at the end of the manual**.

TO PRINT THE MENU AND ITS FUNCTIONS

As it is always useful to have the menu structure and its functions close at hand, we recommend you print it out.

- Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

- Press the keys



until the display shows:

MENU
PRINT FUNC.LIST ◆

- To confirm the setting, press the key:



Having printed the report, the fax machine automatically returns to its initial stand-by mode.

TRANSMISSION

If you follow the procedures described below, you can **immediately use the fax machine to carry out simple transmission operations**. In any case, if these procedures are not enough for you, see the **"Transmission and reception operations"** chapter, which provides a detailed description of all the transmission modes and how to program the phone book.

WHAT DOCUMENTS MAY BE USED

For any type of transmission, the document has to be placed in the ADF.

CHARACTERISTICS OF THE ORIGINAL


Sizes:

- Breadth min. 148 mm - max. 216 mm
- Length min. 216 mm - max. 600 mm

Unit weight of sheet:

- 80 g/m² (max. 20 sheets)
- 60 - 90 g/m² (max. 10 sheets)
- 50 - 140 g/m² (1 sheet at a time)

For documents of different sizes from those specified above, photocopy the original onto A4 sheets or another supported format and send the copy.

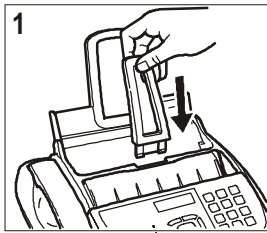

1. Push the document support into the slot until it clicks into position.

2. Place the document with the side to be sent face up (automatic document feed).

Once the document has been inserted in the automatic document feeder (ADF), the display shows on the top line:

DOCUMENT READY

and on the bottom line, the default contrast value: "NORMAL".

TO SEND A DOCUMENT



1. If these diagrams are not enough, see **"To send a document"**, section **"Transmission and reception operations"**.

TO HEAR THE DIALING TONE WHEN SENDING A DOCUMENT



1. If these diagrams are not enough, see **"To send a document"**, section **"Transmission and reception operations"**.

TO SEND A DOCUMENT WITH THE RECEIVER RAISED



1. If these diagrams are not enough, see **"To send a document"**, section **"Transmission and reception operations"**.

RECEPTION

You can set up the fax machine to receive the documents sent by your correspondents in **four different modes**, that you may access by carrying out the procedure described below. These modes are: manual reception, automatic reception, automatic reception with recognition of the type of call and reception with telephone answering device (**model with a built-in telephone answering device and base model with an external telephone answering device**).

TO CHOOSE THE RECEPTION MODE

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the key:



The display shows:

RECEPT. SET-UP
RECEPTION MODE ◆

3. Press the key:



The display shows:

RECEPTION MODE
AUTOMATIC ◆

4. To view the other available options, "RECEPTION MODE - MANUAL", "RECEPTION MODE - PHONE/FAX" and "RECEPTION MODE - TAD/FAX" (**model with a built-in telephone answering device and base model with an external telephone answering device**), press the keys:



5. To confirm the setting, press the key:



6. To return the fax machine to its initial stand-by mode, press the key:



7. If you want to move back one function, press the key:



NOTE

To activate reception with TAD mode, you must first record the **OUTGOING MESSAGE 1** (see "The Telephone Answering Device").

MANUAL RECEPTION

For all occasions in which you are **present** and you can therefore answer the calls yourself.



1. If these diagrams are not enough, see "To receive a document", section "Transmission and reception operations".

AUTOMATIC RECEPTION


For all occasions in which you are **out** but want to receive documents anyway. This is the mode originally set on your fax machine.

RECEPTION WITH TELEPHONE ANSWERING DEVICE

In this reception mode, the TAD receives the calls, records any messages left by the correspondent and, if he wants to send you a document, enables the fax machine to receive it. **This reception mode is only available for the model with a built-in telephone answering device and the base model with an external telephone answering device.**

RECEPTION IN "PHONE/FAX" MODE

The behaviour of the fax machine in this mode depends on **who is calling** and whether **you are in or not** when the fax is received. The following diagram will help you:

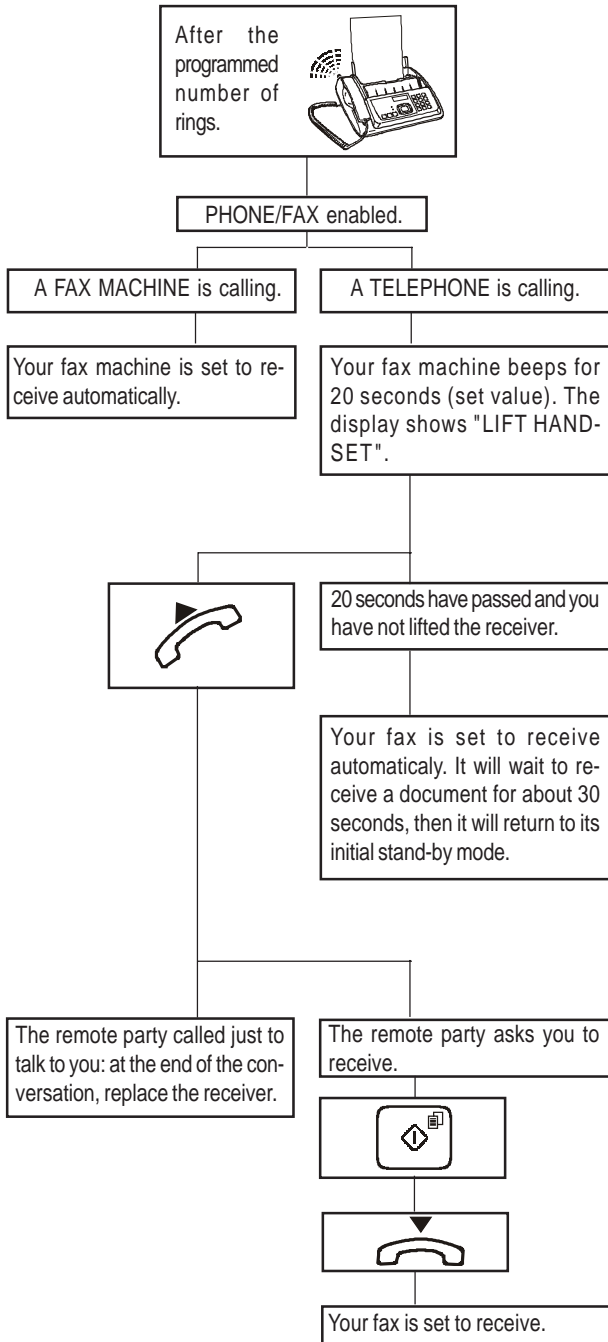

USING THE TELEPHONE

When you engage the line by **lifting the telephone handset**, you may use all the telephone functions available on ordinary telephones sold on the market.

These also include the **R** function (REGISTER RECALL, activated by pressing the key) which provides access to the special services made available by the company that manages the telephone network.

You can also use the following functions:

- Call the correspondent using the phone book, see "**To telephone by searching through the phone book**" and "**To telephone using the quickest method**".
- **Momentarily hold a telephone call** by pressing the (HOLD) key. The call is resumed as soon as the same key is pressed again.
- **Activate the "handsfree" function**, by pressing the key before or during a telephone call. This function is useful if you want other persons at your end to take part in the conversation.

NOTE

If the "handsfree" function is activated, when the handset is lifted, the display shows the message "REPLACE HANDSET". Replace the handset on its cradle and continue talking in handsfree mode. To resume talking through the handset, simply lift it: the handsfree function will be turned off automatically.

To terminate a call in handsfree mode, press the key.

TO TELEPHONE BY SEARCHING THROUGH THE PHONE BOOK

Do not place the document in the ADF.

1. Lift the handset to engage the line:



or

to activate the handsfree function, press the key:



The display shows:

ON LINE

and the length of the call in minutes and seconds in the top right-hand corner.

2. Press the key:



The display shows the fax number or telephone number and, if set, the name associated with the first of the 100 available positions (00-99) saved previously (see "**To program the phone book**", chapter "**Transmission and reception operations**").

3. To find the telephone number or name of the person you wish to call, you can:

1. Press the keys until the desired number or name appears on the display.

or

2. Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.

- To start dialling, press the key:



Once the number has been dialled, if the correspondent is free, you can start talking.

TO TELEPHONE USING THE QUICKEST METHOD

Do not place the document in the ADF.

- Press and hold down for more than one second the number key (0-9) under which you saved previously the telephone number you wish to call, for example,



The display shows the digits of the telephone number that you associated with it (see "To program the phone book", chapter "Transmission and reception operations"). If you also associated a name with it, the display will show this, too.

- Having dialled the number, if the correspondent is free, lift the handset to talk:



or

to activate the handsfree function, press the key:



The display shows the length of the call in minutes and seconds in the top right-hand corner.

TO REDIAL ONE OF THE LAST 20 INCOMING NUMBERS OR ONE OF THE LAST 10 OUTGOING NUMBERS

Do not place the document in the ADF.

- Lift the handset to engage the line:



or

to activate the handsfree function, press the key:



The display shows:

ON LINE

and the length of the call in minutes and seconds in the top right-hand corner.

- Press the key:



The display shows:

INCOMING CALLS ↑

OUTGOING CALLS ↓

- To select the list of incoming calls, press the key:



- To select the list of outgoing calls, press the key:



- To find the telephone number or name of the correspondent you wish to call on the list of the last 20 unanswered incoming calls or on the list of the last 10 outgoing calls, press the keys:



- To start dialling, press the key:



Once the number has been dialled, if the correspondent is free, you can start talking.

TO DIAL A NUMBER BEFORE ENGAGING THE LINE

If desired, before engaging the line, you can dial a number on the numeric keypad, a number in the phone book or any of the last 20 numbers of incoming calls or the last 10 numbers of outgoing calls.

Do not place the document in the ADF.

To dial a number on the numeric keypad, press keys:



Having dialled the number, lift the handset or press



to engage the line.

- To dial a number from the phone book, press the key:



The display shows the fax number or telephone number and, if set, the name associated with the first of the 100 available positions (00-99) saved previously (see "To program the phone book", chapter "Transmission and reception operations").

To find the telephone number or name of the person you wish to call, you can:

- Press the keys until the desired number or name appears on the display.

or

- Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.

or

To dial one of the last 20 numbers of incoming calls or last 10 numbers of outgoing calls, press the key:



The display shows:

INCOMING CALLS ↑

OUTGOING CALLS ↓

To select the list of incoming calls, press the key:



To select the list of outgoing calls, press the key:



To find the telephone number or name of the correspondent you wish to call on the list of the last 20 unanswered incoming calls or on the list of the last 10 outgoing calls, press the keys:



- To start dialling, press the key:



- Having dialled the number, if the correspondent is free, lift the handset to talk:



or

to activate the handsfree function, press the key:



The display shows the length of the call in minutes and seconds in the top right-hand corner.

MAKING COPIES

WHAT DOCUMENTS CAN BE COPIED

As for transmission, **copying requires the document to be inserted in the automatic document feeder (ADF)**. Before making a copy, make sure that the document is correctly inserted in the feeder and that it respects the characteristics described previously (see the "Transmission" section). **Bear in mind however that for the copying function you can only insert one sheet at a time in the automatic document feeder (ADF).**

TO MAKE A COPY

As mentioned previously, you can also use the fax machine as a **photocopier**. The printing quality obtained depends on the type of copy you want to obtain "**Normal copy**" or "**Quality copy**" and the **contrast** and **resolution** values that you select before starting the copying function.

1. Choose the type of **contrast** on the basis of the following criteria:
 - **NORMAL**, if the document is **neither very light nor very dark**.
 - **LIGHT**, if the document is **very dark**.
 - **DARK**, if the document is **very light**.
2. Choose the type of **resolution** on the basis of the following criteria:
 - **TEXT**, if the document contains **easily legible text or simple graphics**.
 - **PHOTO**, if the document contains **shaded areas**.
3. Insert the document in the ADF.

The display shows on the top line:

DOCUMENT READY

and on the bottom line, the default contrast value: "NORMAL".

4. Press the key:



The display shows the default copy size, contrast and resolution settings: 100%, NORMAL and TEXT, respectively. It also shows the number of copies set (1).

5. If you want to confirm these values, press the key:



Otherwise skip to step 6.

6. Press the key:



The display shows:

QUALITY

HIGH ◆

7. To view the other available option, "QUALITY - NORMAL", press the keys:



8. To confirm your choice, press the key:



The display shows:

ZOOM 100%

9. To choose the desired copy size setting, "200%", "140%", "70%" or "50%", press the keys:



10. To confirm your choice, press the key:



The display shows:

CONTRAST

NORMAL ◆

11. To display the other two types of contrast available, "CONTRAST - LIGHT" or "CONTRAST - DARK", press the keys:



12. To confirm your choice, press the key:



The display shows the values that you have just selected. At this point, simply choose the resolution you want and set the number of copies you want to make:

13. To choose the desired resolution setting, "TEXT" or "PHOTO", press the key:



14. If you want to make more than one copy (max. 9), enter the desired number by pressing the keys:





15. If you only want to make one copy, skip to the next step.

16. To make the copy, press the key:




The fax machine starts to save the document. Having done this, the fax machine starts copying.

NOTE

If you want to abort the copy in progress, press the  key. The fax machine will stop copying, unload the document from the ADF and return to its initial stand-by mode, displaying the message "COPY INTERRUPTED". Press the  key to clear the message from the display.

NOTE

If you want to make enlargements or reductions, lay the original in the centre in a lengthwise direction. Use the middle step in the sheet feeder as an orientation aid.

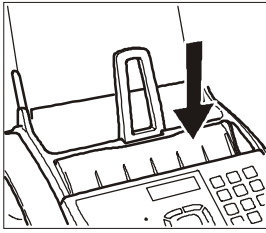

The maximum printing width is 204 mm and the maximum printing length is 282 mm. The maximum non-printing area is: right and left 4 mm, top 3 mm and bottom 14 mm.

TABLE OF CONTENTS - SECOND SECTION

TRANSMISSION AND RECEPTION OPERATIONS	25	MAINTENANCE OPERATIONS	64
TO SEND A DOCUMENT	25	TO REPLACE THE PRINT CARTRIDGE	64
TO RECEIVE A DOCUMENT	29	CLEANING THE PRINT CARTRIDGE AND TESTING THE NOZZLES	65
PHONE BOOK	30	TO CLEAN THE ELECTRICAL CONTACTS OF THE PRINT CARTRIDGE	65
TO PRINT REPORTS AND LISTS	32	TO CLEAN THE OPTICAL READER	66
THE TELEPHONE ANSWERING DEVICE	36	TO CLEAN THE CASING	66
TO TURN ON THE TAD	36	TO REMOVE JAMMED DOCUMENTS	66
THE TAD CONSOLE	36	TO REMOVE JAMMED SHEETS OF PAPER	66
SECURITY AND ACCESS FUNCTIONS	37	MANUFACTURER AND CUSTOMER SERVICE	68
OUTGOING MESSAGES AND MEMOS	38	MANUFACTURER	68
TO SET THE LENGTH OF MEMOS AND INCOMING MESSAGES	41	CUSTOMER SERVICE	68
TO LISTEN TO INCOMING MESSAGES AND MEMOS	41	TECHNICAL DATA	69
TO DELETE MESSAGES AND MEMOS YOU HAVE ALREADY LISTENED TO	41	INDEX	70
TO TRANSFER MESSAGES AND MEMOS TO A REMOTE TELEPHONE	42		
TO OPERATE THE TELEPHONE ANSWERING DEVICE FROM A REMOTE LOCATION	43		
SPECIAL FUNCTIONS OF THE TELEPHONE ANSWERING DEVICE	44		
TO PRINT THE TAD CONFIGURATION PARAMETERS	45		
MORE SOPHISTICATED OPERATIONS	46		
OTHER USEFUL RECEPTION SETTINGS	46		
OTHER USEFUL TRANSMISSION SETTINGS	53		
RECEIVING A DOCUMENT IN POLLING MODE	56		
TROUBLESHOOTING GUIDE	59		
WHAT HAPPENS IF THERE IS A POWER FAILURE	59		
WHAT HAPPENS IF THE PAPER OR INK HAS RUN OUT	59		
IF THE TRANSMISSION IS UNSUCCESSFUL	59		
FOR MINOR PROBLEMS	59		
ERROR CODES	60		
SIGNALS AND MESSAGES	61		

TO SEND A DOCUMENT

WHAT DOCUMENTS MAY BE USED

Dimensions

Sizes:

- Breadth min. 148 mm - max. 216 mm
- Length min. 216 mm - max. 600 mm

Unit weight of sheet:

- 80 g/m² (max. 20 sheets)
- 60 - 90 g/m² (max. 10 sheets)
- 50 - 140 g/m² (1 sheet at a time)

For documents of different sizes from those specified above, photocopy the original onto A4 sheets or another supported format and send the copy.

NEVER USE


- curled paper
- excessively thin paper
- torn paper
- damp or set paper
- excessively small paper
- crumpled paper
- carbon paper

In addition, in order to avoid damaging your fax machine and invalidating your guarantee, make sure that the documents you are to use do not contain:

- staples
- paper clips
- adhesive tape
- correcting liquid or glue that has not yet dried.

In all these cases, photocopy the document and send the copy.

TO PLACE THE DOCUMENT IN THE ADF

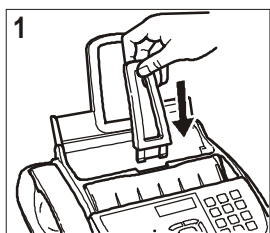

1. Push the document support into the slot until it clicks into position.

2. Place the document with the side to be sent face up (automatic document feed).

3. Once the document has been inserted in the automatic document feeder (ADF), the display shows on the top line:

DOCUMENT READY

and on the bottom line, the default contrast value: "NORMAL".

TO ADJUST THE CONTRAST AND RESOLUTION

Before sending a document you can make some adjustments so as to optimize the printing quality.

TO ADJUST THE CONTRAST

1. Press the key:



The display shows:

MENU

RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU

FAX SET-UP ◆

3. Press the key:



The display shows:

FAX SET-UP

DATE AND TIME ◆

4. Press the keys



until the display shows:

FAX SET-UP

VARIOUS SETT. ◆

5. Press the key:



The display shows:

VARIOUS SETT.

ECM ◆

6. Press the keys



until the display shows:

VARIOUS SETT.

CONTRAST ◆

7. Press the key:






The display shows:

CONTRAST

NORMAL ◆

8. To view the other available options, "CONTRAST - DARK" and "CONTRAST - LIGHT", press the keys:




9. To confirm your choice, press the key: 
10. To return the fax machine to its initial stand-by mode, press the key: 
11. If you want to move back one function, press the key: 

The contrast should be regulated on the basis of the following criteria:



 

- **NORMAL**, if the document is **neither very light nor very dark**. "NORMAL" appears on the bottom line of the display.
- **LIGHT**, if the document is **dark**. "LIGHT" appears on the bottom line of the display.
- **DARK**, if the document is **light**. "DARK" appears on the bottom line of the display.

To ADJUST THE RESOLUTION


The document must be present in the automatic document feeder (ADF).

1. Press the key  until the desired resolution value appears on the display.


The resolution should be regulated on the basis of the following criteria:

- **STD (STANDARD)**, if the document contains **easily legible characters**. An "arrow" appears on the bottom line of the display in line with the " symbol printed on the console.
- **FINE**, if the document contains **very small characters or drawings**. An "arrow" appears on the bottom line of the display in line with the " symbol printed on the console.
- **HALF TONES**, if the document contains **shaded areas**. An "arrow" in line with the " symbol and an "arrow" in line with the " symbol printed on the console appear on the bottom line of the display.




To SEND A DOCUMENT

1. Insert the document in the automatic document feeder (ADF).
The display shows on the top line:
DOCUMENT READY
and on the bottom line, the default contrast value: "NORMAL".
The initial resolution value is: " (standard).
If you want, change the contrast and resolution values as described previously.
2. To dial the number of the correspondent to whom you wish to send the document, press the keys:



3. To start sending the document, press the key: 
If the document is sent correctly, once this operation has been completed, the display will show the message "TX COMPLETED" for a moment.



NOTE

To delete an incorrect digit, move the cursor, using the  keys, to the right of the incorrect digit and press the  key; if you want to delete the whole number, hold down the  key for a few seconds.



NOTE

If you want, you can dial the correspondent's number from the phone book, see "To program the phone book" and "To send a document using the quickest method".


NOTE

If you want to **abort the transmission in progress**, press the  key. The fax machine unloads the document from the ADF and returns to its initial stand-by mode. If the document to be removed consists of more than one sheet, before pressing  to unload the first, **remove all the others by hand**.

To HEAR THE DIALING TONE WHEN SENDING A DOCUMENT

1. Insert the document in the automatic document feeder (ADF).
The display shows on the top line:
DOCUMENT READY
and on the bottom line, the default contrast value: "NORMAL".
The initial resolution value is: " (standard).
If you want, change the contrast and resolution values as described previously.
2. To hear the dialing tones, press the key: 
The display shows:
ON LINE
and the length of the transmission in minutes and seconds in the top right-hand corner.
3. To dial the number of the correspondent to whom you wish to send the document, press the keys:



4. As soon as you hear the tone of your correspondent's fax machine, press the key: 
Transmission is started. The message "CONNECTING" appears on the display.
If the document is sent correctly, once this operation has been completed, the display will show the message "TX COMPLETED" for a moment.

To SEND A DOCUMENT WITH THE RECEIVER RAISED

1. Insert the document in the automatic document feeder (ADF).

The display shows on the top line:

DOCUMENT READY

and on the bottom line, the default contrast value: "NORMAL".

The initial resolution value is: "☒" (standard).

If you want, change the contrast and resolution values as described previously.

2. Lift the receiver to engage the line.



The display shows:

ON LINE

and the length of the transmission in minutes and seconds in the top right-hand corner.

3. To dial the number of the correspondent to whom you wish to send the document, press the keys:



If your correspondent's fax machine is set up for **automatic reception**, you will hear the **fax machine signal**.

If it is set up for **manual reception**, the correspondent himself will answer so you can ask him to press the **start key** on his fax machine, after which you will hear the **fax machine signal**.

4. To start sending, press the key:



The message "CONNECTING" appears on the display.

If the document is sent correctly, once this operation has been completed, the display will show the message "TX COMPLETED" for a moment.

AUTOMATIC REDIAL

If no connection is established due to line errors or because the correspondent's number is busy, the fax machine **automatically redials** the number of times laid down by the legislation in your country.

To SEND A DOCUMENT TO SEVERAL CORRESPONDENTS

The fax machine's **memory** allows you to **send a document** (even at a preset time: "Delayed transmission") **to several correspondents** (max. 10): "Broadcast transmission". See "To send a document from the memory".

To SEND A DOCUMENT FROM THE MEMORY

1. Insert the document in the automatic document feeder (ADF).

The display shows on the top line:

DOCUMENT READY

and on the bottom line, the default contrast value: "NORMAL".

The initial resolution value is: "☒" (standard).

If you want, change the contrast and resolution values as described previously.

2. Press the key:



The display shows:

MENU

RECEPT. SET-UP ◆

3. Press the keys



until the display shows:

MENU

TX FROM MEMORY ◆

4. Press the key:



The display shows:

TX FROM MEMORY

NEW SETTING ◆

5. Press the key:



The fax machine starts to save the document. Once saved, the display shows the message "DOC.N. XXXX" and then:

TYPE TIME

HH:MM

6. To type the time at which you wish to send the document, for example "16:50", press the keys:



7. To confirm both the current time and the time set in step 6, press the key:



The display shows:

TYPE NUMBER

8. Type your correspondent's number directly on the numeric keypad, by pressing the keys:



9. If you like, you can find your correspondent's number in the phone book (see "To program the phone book").

To do this:

1. Press the key

2. Press the keys ◆ to find the desired number.

or

1. Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.

10. Press the key:



The fax machine prompts you to enter another number:

TYPE NUMBER

If you want to send the document to more than one correspondent, repeat the previous two steps once for each correspondent.

If you want to send the document to one correspondent only, move straight on to the next step without typing any numbers.

11. Press the key:



The display shows:

PRINT SETTINGS

NO ◆

12. To choose the other option, "PRINT SETTINGS - YES", press the keys:



13. To confirm your choice, press the key:



In either case, the display shows:

CONFIRM SETTINGS

YES ◆

14. To choose the other option, "CONFIRM SETTINGS - NO", press the keys:



15. To confirm your choice, press the key:



If you chose "CONFIRM SETTINGS - YES", the fax ends the procedure and the display shows the messages "AUTOMATIC 00" on the first line ("AUTOMATIC" **on the base model**) and "TX FROM MEMORY" on the second line.

If you chose "CONFIRM SETTINGS - NO", the fax allows you to modify the previous settings, for example: the correspondent's number or the time at which you want to send the document.



If there is a **power failure**, the transmission from the memory will be cancelled.

TO CHANGE/REPEAT/DELETE A TRANSMISSION FROM THE MEMORY THAT IS ALREADY SET

1. Press the key:



The display shows:

MENU

RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU

TX FROM MEMORY ◆

3. Press the key:



The display shows:

TX FROM MEMORY

NEW SETTING ◆

4. Press the keys



until the display shows:

TX FROM MEMORY

EDIT ◆

You can choose any of the following options:

TX FROM MEMORY - EDIT - To change the correspondent's number or the time at which you want to send the document.

TX FROM MEMORY - PRINT - To print the memory transmission parameters only. When it has finished printing, the fax machine returns automatically to its initial stand-by mode.

TX FROM MEMORY - DELETE - To clear the setting. The fax machine returns to its initial stand-by mode.

5. To view the other available options, press the keys:



6. To confirm your choice, press the key:



If you chose "TX FROM MEMORY - EDIT", the display shows:

TYPE TIME

HH:MM

From this point on, follow the procedure described in "To send a document from the memory" from step 6.

TO RECEIVE A DOCUMENT

You can set up the fax machine to receive the documents sent by your correspondents in **four separate modes**:

- **Manual reception**, for all occasions in which you are **present** and you can therefore answer the calls yourself.
- **Automatic reception**, for all occasions in which you are **out** but want to receive documents anyway. This is the mode originally set on your fax machine.
- **Telephone / Fax reception - automatic reception with recognition of the type of call**. In this reception mode, after a given number of rings (default setting: 2 rings), the fax machine connects to the telephone line and is capable of recognizing whether the incoming call is a fax call or a telephone call.
- **TAD / Fax reception - reception with telephone answering device (model with a built-in telephone answering device and base model with an external telephone answering device)**. In this reception mode, the TAD receives the calls, records any messages left by the correspondent and, if he wants to send you a document, enables the fax machine to receive it. See "The Telephone Answering Device".

TO CHOOSE THE RECEPTION MODE

1. Press the key:



The display shows:

MENU

RECEPT. SET-UP ⬆

2. Press the key:



The display shows:

RECEPT. SET-UP

RECEPTION MODE ⬆

3. Press the key:



The display shows:

RECEPTION MODE

AUTOMATIC ⬆

4. To view the other available options, "RECEPTION MODE - MANUAL", "RECEPTION MODE - PHONE/FAX" and "RECEPTION MODE - TAD/FAX" (model with a built-in telephone answering device and base model with an external telephone answering device), press the keys:



5. To confirm the setting, press the key:



6. To return the fax machine to its initial stand-by mode, press the key:



7. If you want to move back one function, press the key:



NOTE

To activate reception with **TAD mode**, you must first record the **OUTGOING MESSAGE 1** (see "The Telephone Answering Device").

TO RECEIVE DOCUMENTS IN THE VARIOUS RECEPTION MODES

MANUAL RECEPTION

1. When the telephone rings, lift the handset to engage the line.



The display shows:

ON LINE

2. As soon as you hear the fax machine signal or if the correspondent asks you to receive a document, press the key:



The display shows:

CONNECTING

3. Hang up.



The fax machine starts to receive and the display shows some information about the reception in progress, including your correspondent's fax number or, if programmed, his name.

Once the document has been received, the display shows the message "RX COMPLETED" for a few seconds and then the initial stand-by mode.

AUTOMATIC RECEPTION

After two rings, the fax machine prepares to receive a document. The document is received as in manual reception mode.

TELEPHONE / FAX RECEPTION - AUTOMATIC RECEPTION WITH RECOGNITION OF THE TYPE OF CALL

The action taken by the fax machine in this reception mode depends on who is calling:

- If the caller is another fax machine, after two rings your fax machine automatically prepares to receive a document.
- If the caller is a telephone, after two rings, the fax machine emits an acoustic signal for about 20 seconds and the display shows "LIFT HANDSET". If you do not lift the receiver within 20 seconds, the fax machine automatically prepares to receive a document.


If you lift the receiver before the fax machine connects to the telephone line and you hear the dialling tone, proceed as follows:

1. Press the key:



2. Hang up.



Any kind of reception may be stopped by pressing the  key. The fax machine then returns to its initial stand-by mode.

PHONE BOOK

The fax can also **store several numbers** and associate a name to them, thus creating an **electronic diary** which not only saves time but also eliminates the risk of making mistakes in dialling numbers.

Each number in the phone book may be assigned one of the 4 ring tunes to make it even easier to recognize the caller (for all new numbers added, the default ring tune is number 1). In addition, the telephone number or fax number that you associated with each of the **10 numeric keys (0 - 9)** may be **dialled quickly** simply by pressing and holding down the relevant key for more than a second.

TO PROGRAM THE PHONE BOOK

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys
◆ until the display shows:

MENU
PHONE BOOK ◆

3. Press the key:



The display shows:

PHONE BOOK
NEW NUMBER ◆

4. Press the key:



The display shows:

TYPE POSITION
{00-99} 00

5. Choose the position where you want to save the telephone number or fax number, for example: 01.
To do this, press the keys:



6. To confirm the setting, press the key:



The display shows:

01:TYPE NUMBER
—

If a number has already been saved in position 01, the fax machine will display "ALREADY PROGRAM."

7. Dial your correspondent's telephone number or fax number.
To do this, press the keys:



8. To leave a space, to correct typing mistakes or to enter characters or special symbols, proceed as explained in "**All that is missing now is your name and fax number**", chapter "**How to get started quickly**".

9. To confirm the setting, press the key:



The display shows:

01:TYPE NAME
—

10. Enter the correspondent's name (max. 16 characters) as you did for your name (see "**All that is missing now is your name and fax number**", chapter "**How to get started quickly**").

11. To confirm the setting, press the key:



The display shows:

RING TYPE
RING TYPE 1 ◆

12. To view the other available ring types, "RING TYPE 2", "RING TYPE 3" and "RING TYPE 4", press the keys:



When switching from one ring tune to another, the fax machine plays the first few seconds of the tune.

13. To confirm the setting, press the key:



The display shows:

PHONE BOOK
NEW NUMBER ◆

At this point, you can **terminate** the procedure or you can **program** another **number**.

14. To abort the procedure, press the key:



15. To program other numbers, repeat the procedure from step 4.

16. If you want to move back one function, press the key:



TO MODIFY A NUMBER FROM THE PHONE BOOK

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys
◆ until the display shows:


MENU
PHONE BOOK ◆

3. Press the key:



The display shows:

PHONE BOOK
NEW NUMBER ◆

4. Press the keys  until the display shows:

PHONE BOOK


EDIT 

5. To confirm the setting, press the key:



The display shows the number and the name associated with the first of the 100 available positions (00-99) saved previously.

6. To find the telephone number or name you want to modify, you can:

1. Press the keys  until the desired number or name appears on the display.

or

2. Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.

7. To confirm the setting, press the key:



From this step on, to modify the number, repeat the procedure "To program the phone book" from step 7.


TO DELETE A NUMBER FROM THE PHONE BOOK


1. Press the key:



The display shows:

MENU

RECEPT. SET-UP 

2. Press the keys  until the display shows:

MENU

PHONE BOOK 


3. Press the key:



The display shows:

PHONE BOOK

NEW NUMBER 

4. Press the keys  until the display shows:

PHONE BOOK


DELETE 

5. To confirm the setting, press the key:



The display shows the number and the name associated with the first of the 100 available positions (00-99) saved previously.

6. To find the telephone number or name you want to delete, you can:

1. Press the keys  until the desired number or name appears on the display.

or

2. Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.

7. Press the key:



The display shows:

DELETE?

NO 

8. To choose the other option, "DELETE? - YES", press the keys:



9. To confirm the setting and delete the number, press the key:



The display shows:

PHONE BOOK

DELETE 

At this point, you can terminate the procedure or delete another number.

10. To abort the procedure, press the key:



11. To delete other numbers, repeat the procedure from step 5.

12. If you want to move back one function, press the key:




TO PRINT DATA FROM THE PHONE BOOK


1. Press the key:



The display shows:

MENU

RECEPT. SET-UP 

2. Press the keys  until the display shows:

MENU

PHONE BOOK 

3. Press the key:



The display shows:

PHONE BOOK

NEW NUMBER 

4. Press the keys



until the display shows:

PHONE BOOK

PRINT PHONE B.

5. To confirm the setting, press the key:



Having printed the report, the fax machine automatically returns to its initial stand-by mode.

To SEND A DOCUMENT USING THE PHONE BOOK SEARCH FUNCTION

If you can't remember the position with which you associated a given number, you can send the document from the phone book as follows:

1. Insert the document in the automatic document feeder (ADF). The display shows on the top line:

DOCUMENT READY

and on the bottom line, the default contrast value: NORMAL.

The initial resolution value is: " " (standard).

If you want, change the contrast and resolution values as described previously.

2. Press the key:



The display shows the fax number or telephone number and the name associated with the first of the 100 available positions (00-99) saved previously.

3. To locate the fax number or name of the correspondent to whom you wish to send your document, you can:

1. Press the keys until the desired number or name appears on the display.

or

2. Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.

4. To start sending, press the key:



To SEND A DOCUMENT USING THE QUICKEST METHOD

1. Insert the document in the automatic document feeder (ADF). The display shows on the top line:

DOCUMENT READY

and on the bottom line, the default contrast value: NORMAL.

The initial resolution value is: " " (standard).

If you want, change the contrast and resolution values as described previously.

2. Press the number key (0-9) under which you previously saved the fax number to which you want to send the document, for example, , for more than one second:



The display shows the digits in the fax number that you assigned to it (see "To program the phone book"). If the name has also been saved, the display shows this, too.

3. Once the number has been dialled, transmission continues in the ordinary way.

To PRINT REPORTS AND LISTS

REPORTS

By printing out reports, the fax machine enables you to check the result of all the transactions carried out (transmission and reception), the volume of documents handled and provides a lot of other useful information.

The fax machine prints the following reports:

- **Power failure report:** it is **always** and **automatically** printed after a **power failure**, if there are documents in the memory.
Once normal operating conditions have been restored, the fax machine will automatically print a report indicating the number of pages in the memory up to that time that you have lost. In this case, it is advisable to print the activity report to track down the number or name of the persons who sent you the documents that were lost.
- **Activity report:** contains information about the **last 42 transactions** carried out (transmission and reception operations), which the fax machine keeps in its memory and is **printed automatically** after the thirty-second transaction or **on request**.
- **Last transmission report:** contains information about the **last transmission** and can be **printed**, once programmed, **always and automatically** after each transmission or **on request** at the desired moment.
- **Failed transmission report:** also contains information about the **last transmission** but is **printed automatically only when the transmission has failed**. The fax machine is set by default to print this kind of report automatically, if you want to disable it, see the relevant paragraph.
- **Last broadcast transmission report:** contains information about the **last broadcast transmission** and may be **printed always and automatically after each broadcast transmission** or **on request** at the desired moment.

HOW TO READ THE REPORTS

• Act.N.	Progressive number of the transactions (transmission/reception) carried out.
• Type	Type of transaction: TX or TX ECM for transmission. RX, RX ECM or RX POLLING for reception.
• Doc.N	Reference number of document stored, assigned directly by the fax machine.
• Dialled Number	Fax number of the correspondent you called.
• Name	Name of the correspondent you called. Only displayed if you have saved it in the phone book. This field is not printed on the activity report.
• Remote Id	Number (and, sometimes, name) of the correspondent called. This number corresponds to the number you dialled, only if the correspondent set his own fax number correctly. Otherwise, it may be different or not be present at all.
• Date/Time	Date and time at which the transaction was carried out.
• Duration	Length of transaction (in minutes and seconds).
• Pages	Total number of pages sent/received.
• Result	Result of the transaction: - OK: if the transaction was completed successfully. - ERROR CODE XX: if the transaction was not completed due to the cause indicated by the error code (see "Error codes", chapter "Troubleshooting guide").

TO ENABLE/DISABLE THE AUTOMATIC PRINTING OF THE TRANSMISSION AND FAILED TRANSMISSION REPORT

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
FAX SET-UP ◆

3. Press the key:



The display shows:

FAX SET-UP
DATE AND TIME ◆

4. Press the keys



until the display shows:

FAX SET-UP
VARIOUS SETT. ◆

5. Press the key:



The display shows:

VARIOUS SETT.
ECM ◆

6. Press the keys



until the display shows:

VARIOUS SETT.
TX REPORT ◆

7. Press the key:



The display shows:

TX REPORT
FOR FAILED TX ◆

You can choose any of the following options: "TX REPORT - ALWAYS" and "TX REPORT - NO".

TX REPORT - FOR FAILED TX - the fax machine will automatically print a report only after each failed transmission.

TX REPORT - ALWAYS - the fax machine will automatically print a report after each transmission irrespective of the result.

TX REPORT - NO - the fax machine will not print any report.

8. To view the other available options, press the keys:



9. To confirm the setting, press the key:



10. To return the fax machine to its initial stand-by mode, press the key:



11. If you want to move back one function, press the key:



To PRINT THE TRANSMISSION, ACTIVITY, BROADCAST TRANSMISSION AND CALLER ID REPORTS ON REQUEST

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
PRINT REPORT ◆

3. Press the key:



The display shows:

PRINT REPORT
LAST TX REPORT ◆

You can choose any of the following options: "PRINT REPORT - LAST BROADCAST", "PRINT REPORT - ACTIVITY REPORT" and "PRINT REPORT - CALLER ID LIST".

4. To view the other available options, press the keys:



5. To confirm the setting, press the key:



Having printed the report, the fax machine automatically returns to its initial stand-by mode.

LISTS

At any time, you can **print a complete list of the installation parameters, set-up parameters and disabled numbers** as well as **print the data saved in the phone book**. By printing out the lists of installation and setup parameters, you will obtain an up to date report of the default values and those that you have set to adapt it to your operating requirements.

To PRINT THE LIST OF INSTALLATION PARAMETERS

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
INSTALLATION ◆

3. Press the key:



The display shows:

INSTALLATION
STATION NAME ◆

4. Press the keys



until the display shows:

INSTALLATION
PRINT INSTALL. ◆

5. To confirm the setting, press the key:



Having printed the report, the fax machine automatically returns to its initial stand-by mode.

To PRINT THE LIST OF SETUP PARAMETERS

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
FAX SET-UP ◆

3. Press the key:



The display shows:

FAX SET-UP
DATE AND TIME ◆

4. Press the keys



until the display shows:

FAX SET-UP
PRINT CONFIG. ◆

5. To confirm the setting, press the key:



Having printed the report, the fax machine automatically returns to its initial stand-by mode.

To PRINT THE LIST OF RECEPTION SETUP PARAMETERS

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the key:



The display shows:

RECEPT. SET-UP
RECEPTION MODE ◆

3. Press the keys



until the display shows:

RECEPT. SET-UP
PRINT CONFIG. ◆

4. To confirm the setting, press the key:



Having printed the report, the fax machine automatically returns to its initial stand-by mode.

To PRINT THE BLACK LIST NUMBERS

Once programmed (see "To set the black list", chapter "More sophisticated operations"), the fax machine can disable a series of correspondents from whom you do not wish to receive any documents whatsoever. This function is useful to avoid receiving undesired documents such as: advertisements, propaganda, etc. All you have to do is save the undesired numbers on a list. Having done this you will not receive any documents from the correspondents whose numbers appear on the list (see "To print the black list", chapter "More sophisticated operations").

To PRINT THE DATA SAVED IN THE PHONE BOOK

As described previously, you can print a list of the telephone numbers and fax numbers that you have saved in the phone book, see "To program the phone book" and "To print data from the phone book".

THE TELEPHONE ANSWERING DEVICE

If you have purchased the model of fax equipped with a built-in **telephone answering device** you can perform the same functions as those performed by external telephone answering devices.

You can therefore:

- **record outgoing messages** which will be **played automatically** when you're out, to request callers to leave a message or call back later;
- **record memos**;
- **listen to the outgoing messages**;
- **change the outgoing messages**;
- **record the messages** left by callers when you're out, to ensure that your **calls** do not get lost;
- **listen to the messages and memos recorded**;
- **delete the messages and memos recorded**;
- **transfer messages to a remote telephone**;
- **control the TAD from a remote location**.

The TAD's **recording capacity** depends on the size of the memory available (30 minutes), which may be less according to the number of pages in the memory. The **length of the messages is programmable** and may be **30 or 60 seconds**, see "To set the length of memos and incoming messages".

TO TURN ON THE TAD


The answering machine may only be activated after recording outgoing message 1. See "Outgoing messages and memos", and, in particular, "To record outgoing message 1".


In addition, **the fax must be set to "TAD/FAX" reception mode**. See the "To choose the reception mode" procedure of the "Reception" section in the first part of the manual.

In "TAD/FAX" reception mode, the fax machine automatically prepares to receive when it is called by another fax machine, to prevent documents sent to you from getting lost.

THE TAD CONSOLE

Keys only present on model with a telephone answering device:

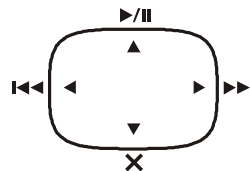



 To start playing new messages and memos. If there are any messages or memos that you have not heard, start with the memos from the first one you have not heard.

Momentarily to stop playing messages and memos. When pressed again, resumes the play function.

 To start recording "MEMOS" (personal memos).

To move, while playing messages and memos, to the start of the next message or memo.

 To return, while playing messages and memos, to the previous message or memo.

 **(DELETE)**
To delete messages and memos that have already been played.


 **INDICATOR LED (MESSAGES)**

On, to indicate that there are **messages or memos that have already been played** in the memory.

Blinking, to indicate that there are **new messages or memos** in the memory.

Off, to indicate that there are **no messages or memos** in the memory.

Keys required to use the telephone answering device:

 To provide access to the TAD configuration menu.

 To select submenu.

To select the available options of a parameter.

 To start recording or playing.

To confirm the selection of the menus for setting up the TAD, submenus, parameters and settings, and to switch to the next condition.

 To stop recording or playing.

To abort the current programming function.

To return the fax machine to the initial stand-by mode.

 To remove an incorrect setting from the display.

To move one function back during the programming phase.

SECURITY AND ACCESS FUNCTIONS

To operate the TAD from a remote location (except to leave messages), you must set a four-digit **numeric code** which you can change or delete at any time (see "To change/delete the TAD access code").

The same code may also be used to:

- **prevent** unauthorized subscribers from playing the messages left for you and from modifying the set-up parameters you have set on the telephone answering device in local mode (see "To enable/disable access to the telephone answering device in local mode").

TO SET THE TAD ACCESS CODE

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
TAD SET-UP ◆

3. Press the key:



The display shows:

TAD SET-UP
ICM ON SPEAKER ◆

4. Press the keys



until the display shows:

TAD SET-UP
SECURITY ◆

5. Press the key:



The display shows:

SECURITY
SET ACCESS CODE ◆

6. Press the key:



The display shows:

SET ACCESS CODE
[0-9]:

7. Enter the code, for example "0001", pressing the keys:



The display shows:

SET ACCESS CODE
[0-9]: 0001

8. To confirm the setting, press the key:



9. To return the fax machine to the initial stand-by mode, press the key:



10. If you want to move back one function, press the key:



TO CHANGE/DELETE THE TAD ACCESS CODE

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
TAD SET-UP ◆

3. Press the key:



The display shows:

TAD SET-UP
ICM ON SPEAKER ◆

4. Press the keys



until the display shows:

TAD SET-UP
SECURITY ◆

5. Press the key:



The display shows:

SECURITY
SET ACCESS CODE ◆

6. Press the key:



The display shows the code set previously, for example "1234":

SET ACCESS CODE
[0-9]: 1234

7. To change the code, press the following key once for each digit you have to replace:



and then type in the new digit.

8. If you like, you can delete the entire code by holding down the key:



The display shows:

SET ACCESS CODE
[0-9]:

9. To confirm the setting, press the key:



10. To return the fax machine to the initial stand-by mode, press the key:



11. If you want to move back one function, press the key:



TO ENABLE/DISABLE ACCESS TO THE TELEPHONE ANSWERING DEVICE IN LOCAL MODE

Follow the procedure described in "To set the TAD access code" to step 5, then carry out the procedure indicated here below:

1. Press the keys



until the display shows:

SECURITY
ACCESS LOCK ◆

2. Press the key:



The display shows:

ACCESS LOCK
NO ◆

3. To stop unauthorized users from playing the messages received on the telephone answering device, press the keys:



The display shows:

ACCESS LOCK
YES ◆

4. To confirm the setting, press the key:



5. To return the fax machine to the initial stand-by mode, press the key:



6. If you want to move back one function, press the key:



OUTGOING MESSAGES AND MEMOS

You can record **several different types of outgoing messages**:

- **OGM 1**, which has a maximum length of 20 seconds, prompting the caller to leave a message on the TAD, for example: *"You have called the telephone number ... I'm out at the moment. You can leave a message after the beep or press the Start button on your fax machine if you want to send a fax. Thanks"*.
- **OGM 2**, which has a maximum length of 10 seconds, may be recorded:
 - if you are **out** and have selected the "TAD/FAX" reception mode, to inform the caller that the answering device cannot receive messages because its memory is full, for example: *"I'm sorry but I can only receive faxes at the moment. If you need to speak to me, please call back later"*;
 - if you are **in** but have selected "PHONE/FAX" mode, to tell the caller not to hang up, for example: *"Please wait"*.
- **OGM 3 (CALL TRANSFER MESSAGE)**, which has a maximum length of 10 seconds, to inform you on a **remote telephone that there are new messages for you** on the telephone answering device. To actually transfer the new messages, you must:
 - have set up the telephone answering device correctly (see "To transfer messages and memos to a remote telephone" later in this chapter).
 - activate the functions that enable you to operate the telephone answering device from a remote location (see "To operate the telephone answering device from a remote location").
- **MEMOS (Voice)**, which have a length that may be programmed to 30 or 60 seconds, for personal memos. This message is never played when an incoming call is received.

TO RECORD OUTGOING MESSAGE 1

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
TAD SET-UP ◆

3. Press the key:



The display shows:

TAD SET-UP
ICM ON SPEAKER ◆

4. Press the keys



until the display shows:

TAD SET-UP
OGM 1 ◆

5. Press the key:



The display shows:

OGM 1
PLAY

6. Press the keys



until the display shows:

OGM 1
RECORD

7. Press the key:



The display shows:

LIFT HANDSET

8. Lift the handset.




The display shows:

<|> TO RECORD

 
9. To start recording the message, press the key:



You have 20 seconds (counted on the display) to record your message:

- if the message lasts **less than 20 seconds**, when you reach the end of the message hang up or press the  key or the **X** key.
- the fax machine automatically plays back the message you have recorded.

NOTE

If the **volume** of the message is **too low** or **too high** you can regulate it, during playback, using the  key. The display shows the volume level set on the bottom line.

TO LISTEN TO OUTGOING MESSAGE 1

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP

2. Press the keys



until the display shows:

MENU
TRD SET-UP

3. Press the key:



The display shows:

TRD SET-UP
ICM ON SPEAKER

4. Press the keys



until the display shows:

TRD SET-UP
OGM 1

5. Press the key:



The display shows:

OGM 1
PLAY

6. To listen to message 1 recorded previously, press the key:



The display shows:

PLAYING

When it gets to the end of the message, the fax machine automatically prepares to record a new OUTGOING MESSAGE 1. In this case, if you like, you can change or replace the message recorded previously by repeating the recording procedure.

7. To return the fax machine to the initial stand-by mode, press the key:



8. If you want to move back one function, press the key:



TO RECORD OUTGOING MESSAGE 2

Record outgoing message 2 as you recorded OUTGOING MESSAGE 1, modifying the **step 4** as follows:

Press the  keys until the display shows:

TRD SET-UP
OGM 2

NOTE

Bear in mind however that you only have 10 seconds.

TO LISTEN TO OUTGOING MESSAGE 2

Play back outgoing message 2 as you played back OUTGOING MESSAGE 1, modifying the **step 4** as follows:

Press the  keys until the display shows:

TRD SET-UP
OGM 2

TO ERASE OUTGOING MESSAGE 2

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP

2. Press the keys



until the display shows:

MENU
TRD SET-UP

3. Press the key:



The display shows:

TRD SET-UP
ICM ON SPEAKER ◆

4. Press the keys



until the display shows:

TRD SET-UP
OGM 2 ◆

5. Press the key:



The display shows:

OGM 2
PLAY ◆

6. Press the keys



until the display shows:

OGM 2
DELETE ◆

7. To erase outgoing message 2 recorded previously, press the key:



The display shows:

DELETE?
NO ◆

8. To view the other available option, "DELETE? - YES", press the keys:



9. To confirm the setting, press the key:



10. To return the fax machine to the initial stand-by mode, press the key:



To RECORD THE TRANSFER MESSAGE

Record the transfer message as you recorded OUTGOING MESSAGE 1, modifying the **step 4** as follows:

Press the ◆ keys until the display shows:

TRD SET-UP
OGM 3 ◆

N O T E

Bear in mind however that you only have 10 seconds.

To LISTEN TO THE TRANSFER MESSAGE

Play back the transfer message as you played back OUTGOING MESSAGE 1, modifying the **step 4** as follows:

Press the ◆ keys until the display shows:

TRD SET-UP
OGM 3 ◆

To RECORD MEMOS

As mentioned previously, the telephone answering device may be used to record one or more memos, which are handled in the same way as incoming messages.

1. Press the key:



The display shows:

RECORD MEMO MSG
LIFT HANDSET

2. Lift the handset.



The display shows:

RECORD MEMO MSG
<|> TO RECORD

3. To start recording, press the key:



The display shows:

RECORDING 30

N O T E

You have **30 or 60 seconds** at your disposal (see "To set the length of memos and incoming messages") to record your memo in the same way as OUTGOING MESSAGES 1 and 2.

To SET THE LENGTH OF MEMOS AND INCOMING MESSAGES

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
TRD SET-UP ◆

3. Press the key:



The display shows:

TRD SET-UP
ICM ON SPEAKER ◆

4. Press the keys



until the display shows:

TRD SET-UP
ICM REC.TIME ◆

5. Press the key:



The display shows:

ICM REC.TIME
30 SECS ◆

6. To view the other available value, "ICM REC.TIME - 60 SECS", press the keys:



7. To confirm the setting, press the key:



8. To return the fax machine to the initial stand-by mode, press the key:



9. If you want to move back one function, press the key:



To LISTEN TO INCOMING MESSAGES AND MEMOS

If there is one or more incoming messages or memos in the memory of the telephone answering device that have not yet been played back, the (MESSAGES) LED indicator blinks and the display shows the total number of messages recorded (including the memos), for example, 03:

TRD/FAX 03
01-Sep-07 10:32

At this point, you can listen to all the messages (through the speaker or the handset), including the memos - which are recorded in the memory and numbered progressively up to a maximum of 49 - starting from the first that you have not yet played. Whenever a message is played, the display shows the day and time at which the message was received.

You can listen to the messages **through the speaker** of the fax machine, which plays them in sequence, separating them by a brief audible signal.

To do this, press the key:



You can also listen to the messages without anyone else hearing.

To do this:

1. Press the key:



2. Lift the handset.




Having played back the last message, the fax machine emits two short beeps and returns automatically to the initial stand-by mode. The (MESSAGES) indicator LED stops blinking and will remain on steady.

To DELETE MESSAGES AND MEMOS YOU HAVE ALREADY LISTENED TO


You cannot **delete** a message or a memo **until you have started listening to it**.

Incoming messages and memos that have not been played back cannot be deleted. The memory cannot therefore be completely cleared until all the messages and memos present in it have been played back.

TO DELETE THE MESSAGE OR MEMO YOU ARE LISTENING TO


- To start listening to the messages or memos, press the key:
▶/|| The display shows:
PLAY MSG 01 03
01-Sep-07 10:32
- To delete the message you are listening, press the key:
✗ The display shows:
PAUSE
DELETE/<▽>
- To delete the message, press the key:
✗
If you wish to continue listening to the messages, press the key:
 The TAD moves to the next message and the display shows:
PLAY MSG 01 02
01-Sep-07 10:32
- To delete the next message, press the key:
✗
Proceed in the same way for all the messages you want to delete.

NOTE


If you do not want to delete any messages, press the  key.

TO DELETE ALL MESSAGES ALREADY PLAYED

Let's suppose there are 6 messages on the TAD of which 3 have already been played back:

- Press the key:
✗ The display shows:
DELETE OLD MSG?
NO ◆
- To view the other available value, "DELETE OLD MSG? - YES", press the keys:
◆
- To confirm the setting, press the key:
 The display shows the initial stand-by status and the number of messages remaining after deletion. In this case, 3.





NOTE

If you do not want to delete any messages, press the  key.

TO TRANSFER MESSAGES AND MEMOS TO A REMOTE TELEPHONE

If you wish, **you can program the TAD to call you on a remote telephone** at a given time to let you listen to any new messages received.

In addition to the time and number at which you wish to be called, **you can program** the way in which the transfer is to be made (**once only** or **once a day**).

- Press the key:
 The display shows:
MENU
RECEPT. SET-UP ◆
- Press the keys
◆
until the display shows:
MENU
TAD SET-UP ◆
- Press the key:
 The display shows:
TAD SET-UP
ICM ON SPEAKER ◆
- Press the keys
◆
until the display shows:
TAD SET-UP
FORWARD MSG ◆
- Press the key:
 The display shows:
FORWARD MSG
NEW SETTING ◆
- To view the other available modes, "FORWARD MSG - DELETE" and "FORWARD MSG - CHANGE", press the keys:
◆
FORWARD MSG - DELETE - To cancel the transfer of incoming messages and memos to a remote telephone.
FORWARD MSG - CHANGE - To modify the parameters of a transfer already set: transfer time, frequency and telephone number to be called.
- To confirm the setting, press the key:
 The display shows:
FORWARD MSG
NO ◆
- To view the other available modes, "FORWARD MSG - ONE TIME" and "FORWARD MSG - DAILY", press the keys:
◆
FORWARD MSG - ONE TIME - To transfer incoming messages and memos to a remote telephone once only.
FORWARD MSG - DAILY - To transfer incoming messages and memos every day at the same time.

9. To confirm the setting, press the key:



The display shows:

TYPE TIME
HH:MM

10. Type the time at which you want the messages to be transferred, for example: "11:45", by pressing the keys:



11. To confirm the setting, press the key:



The display shows:

TYPE NUMBER

12. Type the telephone number at which you want to be called, by pressing the keys:



13. To confirm the setting, press the key:



If you haven't recorded the transfer message yet, see "**To record the transfer message**". If you have recorded it, the fax machine will return to stand-by mode.

NOTE

The message transfer setting is **cancelled by a power failure**.

NOTE

To change or replace the transfer message, see "**To record the transfer message**".

Now that you have programmed the TAD to transfer new messages to a remote location, you can listen to them by operating the TAD in the same way as in the "**To operate the telephone answering device from a remote location**" section below.

TO OPERATE THE TELEPHONE ANSWERING DEVICE FROM A REMOTE LOCATION

You can operate the TAD not only directly using specific keys on the operator console of the fax machine, but also from any other location providing the telephone used operates in **tone** mode, **for example: a mobile phone**.

To operate the TAD from a remote location, you must set the fax machine in "**TAD/FAX**" or "**PHONE/FAX**" reception mode and, **once the fax has answered the call**, you must also **type in the access code set previously** (see "**To set the TAD access code**").

The remote functions available are activated by another numeric code consisting of one or two digits (see the table below). **If the code has two digits, it is advisable to wait for the confirmation signal between one digit and the other.**

CODE	OPERATING FUNCTION
1	Plays new messages.
2	Plays all messages.
3	Stops playing current message and returns to previous message.
4	Stops playing current message and skips to next message.
5	Playing outgoing message 1.
6 + 6	Deletes all played messages.
CODE	PROGRAMMING FUNCTION
# 1	Disables the " TAD/FAX " reception mode and enables the " AUTOMATIC " reception mode.
# 2	Sets up the fax machine for " TAD/FAX " reception mode.
# 3	Enables the OUTGOING MESSAGE 1 to be recorded.
# 4	Enables the OUTGOING MESSAGE ONLY to be played.
# 5	Disables the transfer of messages and memos to a remote telephone.

Typing **0** after an operating sequence **from 1 to 6** aborts the function in progress.

Typing **0** after a programming sequence **from #1 to #5** aborts the programming function in progress and returns to the operating functions. In this case, to resume the programming phase, press **#** again.

If any code is typed during the recording of outgoing message 1 (programming **#3**), the TAD will stop immediately and confirm the recording.

To perform both the remote playback and programming functions, you must:

- Dial the fax number on the remote telephone. The TAD will answer the call and play OUTGOING MESSAGE 1.
- Type the access code on the remote telephone keypad.
- If the code is correct, the TAD will confirm the operation by emitting a beep.
- Choose the function that you want to perform and type its code with reference to the table above.

The TAD confirms the operation by emitting a beep.

Terminate communication using the method applicable to the telephone you are using.

SPECIAL FUNCTIONS OF THE TELEPHONE

ANSWERING DEVICE

You can set up the TAD for the following special functions:

- TOLL SAVER
- OUTGOING MESSAGE ONLY
- SILENT RECEPTION OF INCOMING MESSAGES

TOLL SAVER

Using this function, when you access the TAD from a remote location to listen to any messages, the fax machine will answer as follows:

- if **there are no new messages**, it will answer the call **two rings after** the number preset;
- if **there are some new messages**, it will answer the call **after the preset number of rings** (see "To change the number of rings", chapter "More sophisticated operations").

Therefore, if you hear **one ring more** than the preset number, you will know that **there are no new messages** and you can **hang up before** the fax machine answers the call.

This function may only be enabled by the customer engineering service and is not available in all countries.

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
TAD SET-UP ◆

3. Press the key:



The display shows:

TAD SET-UP
ICM ON SPEAKER ◆

4. Press the keys



until the display shows:

TAD SET-UP
TOLL SAVER ◆

5. To confirm the setting, press the key:



The display shows:

TOLL SAVER
NO ◆

6. To view the other available option, "TOLL SAVER - YES", press the keys:



7. To confirm the setting, press the key:



8. To return the fax machine to the initial stand-by mode, press the key:



9. If you want to move back one function, press the key:



OUTGOING MESSAGE ONLY

Using this function, whenever an incoming call is received, the TAD plays the OGM 1 but does not record any incoming messages.

You can use this function when you expect to be away for a long time and it would not be possible to record all messages received in your absence.

In this case, in place of the ordinary outgoing message, it is advisable to record a different one, for example:

"From 22nd June to 19th September only faxes will be accepted. No incoming messages will be recorded".

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
TAD SET-UP ◆

3. Press the key:



The display shows:

TAD SET-UP
ICM ON SPEAKER ◆

4. Press the keys



until the display shows:

TAD SET-UP
ANNOUNCE ONLY ◆

5. To confirm the setting, press the key:



The display shows:

ANNOUNCE ONLY
NO ◆

6. To view the other available option, "ANNOUNCE ONLY - YES", press the keys:



7. To confirm the setting, press the key:



The display shows:

OGM 1
RECORD ◆

- To confirm the setting, press the key:



The display shows:

RECORD OGM 1
LIFT HANDSET

If you have already recorded OGM 1, the display will show the message "PLAYING" and the TAD will play it back.

If you have not recorded it, the display will show the message "OGM NOT RECORDED".

- To change the outgoing message recorded previously or to record a new one, lift the handset.



The display shows:

RECORD OGM 1
<|> TO RECORD

- To start recording, press the key:



The display shows:

RECORDING 20

SILENT RECEPTION OF INCOMING MESSAGES

Using this function you can receive messages confidentially. In other words, the TAD receives messages without playing them over the speaker so that any other persons present cannot hear your messages.

- Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

- Press the keys



until the display shows:

MENU
TAD SET-UP ◆

- Press the key:



The display shows:

TAD SET-UP
ICM ON SPEAKER ◆

- Press the key:



The display shows:

ICM ON SPEAKER
NO ◆

- To view the other available option, "ICM ON SPEAKER - YES", press the keys:



- To confirm the setting, press the key:



- To return the fax machine to the initial stand-by mode, press the key:



- If you want to move back one function, press the key:



TO PRINT THE TAD CONFIGURATION

PARAMETERS

- Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

- Press the keys



until the display shows:

MENU
TAD SET-UP ◆

- Press the key:



The display shows:

TAD SET-UP
ICM ON SPEAKER ◆

- Press the keys



until the display shows:

TAD SET-UP
PRINT SET-UP ◆

- To start printing, press the key:



Once this operation has been completed, the fax machine automatically returns to its initial stand-by status.

OTHER USEFUL RECEPTION SETTINGS

TO REDUCE THE AREA OF A DOCUMENT RECEIVED

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
FAX SET-UP ◆

3. Press the key:



The display shows:

FAX SET-UP
DATE AND TIME ◆

4. Press the keys



until the display shows:

FAX SET-UP
PRINTER PARAM. ◆

5. Press the key:



The display shows:

PRINTER PARAM.
PAPER SIZE ◆

6. Press the keys



until the display shows:

PRINTER PARAM.
REDUCTION ◆

7. Press the key:



The display shows:

REDUCTION
94% ◆

8. To choose one of the available reduction ratios, "80%", "76%", "70%" and "NO", press the keys:



9. To confirm your choice, press the key:



10. To return the fax machine to its initial stand-by mode, press the key:



11. If you want to move back one function, press the key:



TO RECEIVE A DOCUMENT THAT IS LONGER THAN THE PAPER SIZE USED

If you receive a document that is longer than the paper size used, you can have the surplus text printed by your fax machine on another sheet.

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
FAX SET-UP ◆

3. Press the key:



The display shows:

FAX SET-UP
DATE AND TIME ◆

4. Press the keys



until the display shows:

FAX SET-UP
PRINTER PARAM. ◆

5. Press the key:



The display shows:

PRINTER PARAM.
PAPER SIZE ◆

6. Press the keys



until the display shows:

PRINTER PARAM.
SURPLUS ◆

7. Press the key:



The display shows:

SURPLUS
AUTOMATIC ◆

8. To choose one of the other available settings, "SURPLUS - NO" or "SURPLUS - YES", press the keys:



9. To confirm your choice, press the key:



10. To return the fax machine to its initial stand-by mode, press the key:



11. If you want to move back one function, press the key:



NOTE

If you choose the "SURPLUS - AUTOMATIC" setting, the fax machine will print the surplus text on another sheet providing the surplus exceeds 8 mm.

If you choose the "SURPLUS - YES" setting, the fax machine will always print the surplus text on another sheet.

If you choose the "SURPLUS - NO" setting, the fax machine will not print the surplus text.

TO ENABLE/DISABLE SILENT RECEPTION

In the "AUTOMATIC", "PHONE/FAX" and "TAD/FAX" reception modes, you can set up the fax machine to **receive documents without any rings being emitted when an incoming call is received.**

When this function is enabled, the behaviour of the fax machine depends on the reception mode selected and the caller:

- in "AUTOMATIC" and "TAD/FAX" modes, the fax machine **will never ring** when an incoming call is received;
- in "PHONE/FAX" mode, when an incoming call is received, the fax machine **will only not ring if the caller is another fax machine.** If the call is a **telephone call**, the fax machine will emit an **acoustic signal**, in place of the ring, to prompt you to lift the handset.

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the key:



The display shows:

RECEPT. SET-UP
RECEPTION MODE ◆

3. Press the keys



until the display shows:

RECEPT. SET-UP
SILENT RX ◆

4. Press the key



until the display shows:

SILENT RX
NO ◆

5. To select one of the other available options, "SILENT RX - DAILY" and "SILENT RX - YES", press the keys:



6. To confirm your choice, press the key:




7. To return the fax machine to its initial stand-by mode, press the key:



8. If you want to move back one function, press the key:



NOTE

If you have confirmed the option "SILENT RX - DAILY", the fax machine will prompt you to enter the time at which it is to start and end silent reception. Once you have set the time, press the  key to confirm.

NOTE


The daily silent reception setting ("SILENT RX - DAILY") is **cancelled by a power failure.**

TO DISPLAY THE CALLER ID

This function, which may be activated by the telephone company on request by the user, **is only available in some countries** and **conforms to the ETSI ETS 300 778-1 standard.**

This function **tells you immediately who is calling.** In this way, you will be able to decide whether to answer the call or not.

When this function is enabled, if the fax machine is in **stand-by mode**, whenever a call is received, it **always shows one of the following items of information:**

- **number or name of the correspondent** who called you;
 - **PRIVATE:** if the correspondent has chosen not to reveal his identity to you;
 - **UNAVAILABLE:** if the correspondent is connected to a telephone exchange that does not support this service.
- If you are **programming** your fax machine and, when an incoming call is received, want to **know who is calling you, you must press** the  key before answering the call.

It may however happen, if you are connected to a particular kind of telephone network, that the number of the caller is not displayed on the fax machine. If this happens, call your local customer engineering service centre.


The fax machine is **already set up to display the caller ID.** You may however set it up not to display it, as follows:

1. Press the key:





The display shows:

MENU
RECEPT. SET-UP ◆



2. Press the keys  until the display shows:

MENU



INSTALLATION 
3. Press the key: 

The display shows:

INSTALLATION



STATION NAME 
4. Press the keys  until the display shows:

INSTALLATION



TEL.LINE SETUP 
5. Press the key: 

The display shows:

TEL.LINE SETUP






LINE TYPE 
6. Press the keys  until the display shows:

TEL.LINE SETUP

CALLER ID 
7. Press the key: 

The display shows:

CALLER ID

YES 
8. To view the other available option, "CALLER ID - NO", press the keys: 
9. To confirm your choice, press the key: 
10. To return the fax machine to its initial stand-by mode, press the key: 
11. If you want to move back one function, press the key: 

N O T E


With this function enabled, the date and time will be brought up to date whenever a call is received.

To CHANGE THE NUMBER OF RINGS

This function is only enabled in some countries.



If set in "AUTOMATIC", "PHONE/FAX" or "TAD/FAX" reception mode, the fax machine automatically answers calls after a certain number of rings.

If you want, you can change the number of rings, as follows:

1. Press the key: 



The display shows:

MENU



RECEPT. SET-UP 
2. Press the key: 

The display shows:

RECEPT. SET-UP






RECEPTION MODE 
3. Press the keys  until the display shows:

RECEPT. SET-UP

RINGS NUMBER 
4. Press the key: 

The display shows:

RINGS NUMBER

2 
5. To view the other available values, "RINGS NUMBER - 1", "RINGS NUMBER - 3", "RINGS NUMBER - 4", "RINGS NUMBER - 5", "RINGS NUMBER - 6", "RINGS NUMBER - 7" and "RINGS NUMBER - 8", press the keys: 
6. To confirm your choice, press the key: 
7. To return the fax machine to its initial stand-by mode, press the key: 
8. If you want to move back one function, press the key: 

N O T E

If you connect an **external telephone answering device**, make sure that the number of rings after which the answering device is activated is less than the one set on the fax machine.

TO CHANGE THE RING VOLUME

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the key:



The display shows:

RECEPT. SET-UP
RECEPTION MODE ◆

3. Press the keys



until the display shows:

RECEPT. SET-UP
RING VOLUME ◆

4. Press the key:



The display shows the preset volume level, for example 4:

RING VOLUME
LEVEL 4 ◆

5. To turn the volume up/down, press the keys:



6. To confirm your choice, press the key:



7. To return the fax machine to its initial stand-by mode, press the key:



8. If you want to move back one function, press the key:



TO ENABLE/DISABLE RECOGNITION OF THE RING FREQUENCY

In some countries, local telephone companies offer the possibility of **assigning the same telephone line two or more numbers**, corresponding to different users. When an incoming call is received, a **different ring frequency** will indicate which user is to answer the call.

This function is extremely useful at home or in small offices, where the same telephone line is shared by more than one person.

Your fax machine is capable of "learning" one of these frequencies (see the procedure that follows). In this way, when a call with the specific ring frequency is received, the fax machine (in "PHONE/FAX" and "TAD/FAX" reception modes) prepares exclusively to receive a document.

This function is **particularly useful when associated with silent reception** in that the fax machine will only ring if the call is coming from a telephone.

We recommend you disconnect the TAD, if connected, from the power supply before carrying out the recognition procedure.

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
INSTALLATION ◆

3. Press the key:



The display shows:

INSTALLATION
STATION NAME ◆

4. Press the keys



until the display shows:

INSTALLATION
DISTINCT. RING ◆

5. Press the key:



The display shows:

DISTINCT. RING
SET OPTION ◆

6. To view the other available option, "DISTINCT. RING - SET PATTERN", press the keys:



7. To confirm the setting, press the key:



The display shows:

AUTODETECT RING

8. Call the fax machine with the desired frequency so that the fax machine detects it.

The display shows:

RING DETECTED

At this point you can enable the new ring frequency.

9. To enable the new ring frequency, return to the point at which the display shows:

DISTINCT. RING
SET OPTION ◆

10. Press the key:



The display shows:

SET OPTION
NO ◆

11. To view the other available option, "SET OPTION - YES", press the keys:



12. To confirm your choice, press the key:



13. To return the fax machine to its initial stand-by mode, press the key:



14. If you want to move back one function, press the key:



NOTE

If the fax machine cannot detect that particular frequency, the display will show the message "RING NOT DETECT.". At this point, press the key and repeat the procedure.

TO CHANGE THE LENGTH OF THE ACOUSTIC SIGNAL

This function is only enabled in some countries.

When the fax machine is set up for **automatic reception with recognition of the type of call**, it behaves as follows:

- if it is being called by a **fax machine**, it will automatically prepare to receive a document after the preset number of rings
- if it is being called by a **telephone**, it will emit an **acoustic signal** for a time of 20 seconds, after which, if you still have not lifted the handset, it will automatically prepare to receive a document.

If you want, you can change the length of the acoustic signal as follows:

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
INSTALLATION ◆

3. Press the key:



The display shows:

INSTALLATION
STATION NAME ◆

4. Press the keys



until the display shows:

INSTALLATION
TEL.LINE SETUP ◆

5. Press the key:



The display shows:

TEL.LINE SETUP
LINE TYPE ◆

6. Press the keys



until the display shows:

TEL.LINE SETUP
FAX/TEL TIMER ◆

7. Press the key:



The display shows:

FAX/TEL TIMER
20 SECS ◆

8. To view the other available values, "FAX/TEL TIMER - 15 SECS", "FAX/TEL TIMER - 30 SECS" or "FAX/TEL TIMER - 40 SECS", press the keys:



9. To confirm your choice, press the key:



10. To return the fax machine to its initial stand-by mode, press the key:



11. If you want to move back one function, press the key:



TO CHANGE THE SILENCE LAPSE

When a call is received with the fax machine in "TAD/FAX" reception mode, if the TAD hears no answering message within the programmed time (silence lapse), it stops recording and returns to the initial stand-by mode.

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
INSTALLATION ◆

3. Press the key:



The display shows:

INSTALLATION
STATION NAME ◆

4. Press the keys



until the display shows:


INSTALLATION
TEL.LINE SETUP ◆



5. Press the key:





The display shows:




TEL.LINE SETUP
LINE TYPE ◆

6. Press the keys  until the display shows:

TEL.LINE SETUP
SILENCE LAPSE 
7. Press the key: 

The display shows:


SILENCE LAPSE
6 SECS 
8. To view the other available values, "SILENCE LAPSE - 3 SECS", "SILENCE LAPSE - 4 SECS", "SILENCE LAPSE - 8 SECS", "SILENCE LAPSE - 10 SECS" or "SILENCE LAPSE - NO", press the keys: 

If you select "SILENCE LAPSE - NO", the fax machine will not interrupt the recording in any case.
9. To confirm your choice, press the key: 
10. To return the fax machine to its initial stand-by mode, press the key: 
11. If you want to move back one function, press the key: 


NOTE

If you connect an **external telephone answering device**, make sure that the silence lapse on the fax machine is less than the one set on the answering device.



TO CHANGE THE REMOTE CONTROL CODE


If the fax machine is connected to an **extension** that operates in **tone dialling mode** and is set up for **manual reception**, whenever there is a call from a correspondent wishing to send you a document, you can **set it to receive** the document by typing the code * * on the extension. This operation has the same effect as pressing the  key on the fax machine.


You can replace the second "asterisk" of this code using digits from 0 to 9.

1. Press the key: 



The display shows:



MENU
RECEPT. SET-UP 
2. Press the keys  until the display shows:

MENU
INSTALLATION 



3. Press the key: 



The display shows:

INSTALLATION
STATION NAME 
4. Press the keys  until the display shows:



INSTALLATION
TEL.LINE SETUP 
5. Press the key: 

The display shows:







TEL.LINE SETUP
LINE TYPE 
6. Press the keys  until the display shows:

TEL.LINE SETUP
REMOTE CONTROL 
7. Press the key: 




The display shows:

REMOTE CONTROL
YES 
8. Press the key: 

The display shows the code you set previously, for example:

SET ACCESS CODE
{0-9,} *8*
9. To type the new code, press the keys:   
10. To confirm the new code, press the key: 
11. To return the fax machine to its initial stand-by mode, press the key: 
12. If you want to move back one function, press the key: 

NOTE

If you want to disable this function, after step 7, press the  keys to display "REMOTE CONTROL - NO", then press the  key to confirm and the  key to return the fax machine to its initial stand-by mode.

To SET THE BLACK LIST


As mentioned previously, you can save a series of unwanted numbers on a black list (max. 10) so as to avoid receiving documents from the correspondents on this list.

1. Press the key:

 The display shows:


MENU
RECEPT. SET-UP ◆

2. Press the key:

 The display shows:


RECEPT. SET-UP
RECEPTION MODE ◆

3. Press the keys

 until the display shows:


RECEPT. SET-UP
BLACK LIST ◆

4. Press the key:

 The display shows:

BLACK LIST
NEW NUMBER ◆

5. Press the key:

 The display shows:

0:TYPE NUMBER

—


6. Dial the fax number you wish to inhibit.

To do this, press the keys:



7. To leave a space, to correct typing mistakes or to enter characters or special symbols, proceed as explained in "All that is missing now is your name and fax number", chapter "How to get started quickly".

8. To confirm the setting, press the key:

 The display shows:

BLACK LIST
NEW NUMBER ◆

At this point, you can abort the procedure or inhibit another number.

9. To abort the procedure, press the key:



10. To block another number, repeat the procedure from step 5.


To MODIFY THE BLACK LIST

1. Press the key:

 The display shows:


MENU
RECEPT. SET-UP ◆

2. Press the key:

 The display shows:


RECEPT. SET-UP
RECEPTION MODE ◆

3. Press the keys

 until the display shows:


RECEPT. SET-UP
BLACK LIST ◆

4. Press the key:

 The display shows:


BLACK LIST
NEW NUMBER ◆

5. Press the keys

 until the display shows:

BLACK LIST
MODIFY NUMBER ◆


6. To confirm the setting, press the key:

 The display shows the first number on the black list.

7. To find the number you wish to modify, press the keys:



8. To confirm the setting, press the key:

 From this point on, to change the number, repeat the "To set the black list" procedure from step 6.


To DELETE THE BLACK LIST

1. Press the key:

 The display shows:


MENU
RECEPT. SET-UP ◆

2. Press the key:








 The display shows:

RECEPT. SET-UP
RECEPTION MODE ◆





3. Press the keys



 until the display shows:

RECEPT. SET-UP
BLACK LIST ◆

4. Press the key:
 The display shows:
BLACK LIST
NEW NUMBER ◆
5. Press the keys
 until the display shows:
BLACK LIST
DELETE NUMBER ◆
6. To confirm the setting, press the key:
 The display shows the first number on the black list.
7. To find the number you wish to delete, press the keys:

8. To confirm the setting, press the key:
 The display shows:
DELETE?
NO ◆
9. To view the other available option, "DELETE? - YES", press the keys:

10. To confirm the setting, press the key:
 The display shows:
BLACK LIST
DELETE NUMBER ◆
11. From this point on, to delete other numbers from the list, repeat the procedure from step 6.

To PRINT THE BLACK LIST

1. Press the key:
 The display shows:
MENU
RECEPT. SET-UP ◆
2. Press the key:
 The display shows:
RECEPT. SET-UP
RECEPTION MODE ◆
3. Press the keys
 until the display shows:
RECEPT. SET-UP
BLACK LIST ◆
4. Press the key:
 The display shows:
BLACK LIST
NEW NUMBER ◆

5. Press the keys
 until the display shows:
BLACK LIST
PRINT LIST ◆
6. To confirm the setting, press the key:
 Having printed the report, the fax machine automatically returns to its initial stand-by mode.







OTHER USEFUL TRANSMISSION SETTINGS


To CHANGE THE POSITION OF YOUR NAME AND FAX NUMBER


The information in the heading of the document to be sent (name, fax number, date and time and number of pages) may be received by your correspondent's fax machine outside the text area immediately below the top edge of the sheet or inside the text area, slightly lower down than in the previous case.




Your fax machine is designed to send this information inside the text area.

To change the position

1. Press the key:
 The display shows:
MENU
RECEPT. SET-UP ◆
2. Press the keys
 until the display shows:
MENU
FAX SET-UP ◆
3. Press the key:
 The display shows:
FAX SET-UP
DATE AND TIME ◆
4. Press the keys:
 The display shows:
FAX SET-UP
VARIOUS SETT. ◆
5. Press the key:
 The display shows:
VARIOUS SETT.
ECM ◆
6. Press the keys
 until the display shows:
VARIOUS SETT.
FAX HEADER ◆


7. Press the key:
 The display shows:


FAX HEADER
INSIDE ◆
8. To select the alternative parameter, press the keys:
 The display shows:


FAX HEADER
OUTSIDE ◆
9. To confirm the setting, press the key:

10. To return the fax machine to its initial stand-by mode, press the key:

11. If you want to move back one function, press the key:



TO HEAR THE LINE SIGNALS


The fax machine is set up so that you can hear the **dialling tones** during the dialling phases as well as the **connection** signals exchanged between your fax machine and your correspondent's fax machine. If you cannot hear them, program the function as follows:

1. Press the key:
 The display shows:


MENU
RECEPT. SET-UP ◆
2. Press the keys
 until the display shows:


MENU
INSTALLATION ◆
3. Press the key:
 The display shows:





INSTALLATION
STATION NAME ◆
4. Press the keys
 until the display shows:

INSTALLATION
TEL.LINE SETUP ◆
5. Press the key:
 The display shows:

 
TEL.LINE SETUP
LINE TYPE ◆


6. Press the keys
 until the display shows:



TEL.LINE SETUP
LINE MONITOR ◆
7. Press the key:
 The display shows:

LINE MONITOR
NO ◆
8. To view the other available option, "LINE MONITOR - YES", press the keys:

9. To confirm the setting, press the key:

10. To return the fax machine to its initial stand-by mode, press the key:

11. If you want to move back one function, press the key:


TO REGULATE THE SPEAKER VOLUME

If the volume of the dialling tones and connection signals is **too low** or **too high**, regulate it using the  key.

1. Press the key:
 The display shows:

ON LINE
2. To raise or lower the volume of the speaker, press the key:
 The display shows the volume level set on the top line.
3. To return the fax machine to its initial stand-by mode, press the key:


To REGULATE THE BUZZER VOLUME

The buzzer indicates particular operating conditions and faults or errors.

The volume of the buzzer may be set to eight levels, or may be turned off altogether.

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
FAX SET-UP ◆

3. Press the key:



The display shows:

FAX SET-UP
DATE AND TIME ◆

4. Press the keys:



The display shows:

FAX SET-UP
VARIOUS SETT. ◆

5. Press the key:



The display shows:

VARIOUS SETT.
ECM ◆

6. Press the keys



until the display shows:

VARIOUS SETT.
BUZZER VOLUME ◆

7. Press the key:



The display shows the preset volume level, for example 4:

BUZZER VOLUME
LEVEL 4 ◆

8. To turn the volume up/down, press the keys:



9. To confirm your choice, press the key:



10. To return the fax machine to its initial stand-by mode, press the key:



11. If you want to move back one function, press the key:



To ENABLE/DISABLE THE FLASH FUNCTION

If the fax machine is connected to a private branch exchange (PBX) with Flash pulse management, this function enables a call to be made on the public line.

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
INSTALLATION ◆

3. Press the key:



The display shows:

INSTALLATION
STATION NAME ◆

4. Press the keys



until the display shows:

INSTALLATION
TEL.LINE SETUP ◆

5. Press the key:



The display shows:

TEL.LINE SETUP
LINE TYPE ◆

6. Press the keys



until the display shows:

TEL.LINE SETUP
PBX FLASH ◆

7. Press the key:



The display shows:

PBX FLASH
NO ◆

8. To view the other available option, "PBX FLASH - YES", press the keys:



9. To confirm your choice, press the key:




10. To return the fax machine to its initial stand-by mode, press the key:



11. If you want to move back one function, press the key:



NOTE

Having enabled the Flash function, to switch from the private branch exchange (PBX) to the public line, press the  key before dialling the number (the letter "E" appears on the display).

TO ENABLE/DISABLE ECM

The **ECM (Error Correction Mode)** is a system for correcting the errors caused by interference on the line. This function only has effect if it has been enabled both on your fax machine and on your correspondent's fax machine and is indicated by a letter "E" appearing on the display.

The fax machine is set up to send documents in this mode. However, you can set it up to send documents in normal mode, as follows:

1. Press the key:

The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys

until the display shows:

MENU
FAX SET-UP ◆

3. Press the key:

The display shows:

FAX SET-UP
DATE AND TIME ◆

4. Press the keys:

The display shows:

FAX SET-UP
VARIOUS SETT. ◆

5. Press the key:

The display shows:

VARIOUS SETT.
ECM ◆

6. Press the key:

The display shows:

ECM
YES ◆

7. To view the other available option, "ECM - NO", press the keys:

8. To confirm your choice, press the key:



9. To return the fax machine to its initial stand-by mode, press the key:



10. If you want to move back one function, press the key:



RECEIVING A DOCUMENT IN POLLING MODE

FIRST OF ALL, WHAT POLLING IS

It is a request by which a fax machine instructs an enabled terminal to send the document requested automatically. There are two main characteristics of communication using the polling method:

- **the user who is to receive the document requests transmission.** In other words, a user may connect to an enabled terminal and instruct it to send a (specially prepared) document to him, even when the user at the other end of the line is out.
- **the transaction is paid for by the person who requested transmission** (that is, the user who receives the document) and not the person whose fax machine sends the document.

TO MAKE A TRANSMISSION REQUEST (POLLING RECEPTION)

Inform your correspondent of the time at which you intend to request transmission so that he has time to put the document to be sent in his enabled terminal. Then set up your fax machine to receive the document, by programming the dialling mode to be used to call your correspondent and the time at which you wish to receive the document.

1. Press the key:

The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys

until the display shows:

MENU
POLLING RX ◆

3. Press the key:



The display shows:

POLLING RX
NEW SETTING ◆

4. Press the key:



The display shows:

TYPE TIME
HH:MM

At this point, you can confirm the current time or overwrite the time with the correct one, for example "18:20".

5. To overwrite the new time, press the keys:



6. To confirm both the current time and the new time, press the key:



The display shows:

TYPE NUMBER

—

7. Type your correspondent's number directly on the numeric keypad.

To do this, press the keys:



8. If you like, you can find your correspondent's number in the phone book (see "To program the phone book").

To do this:

1. Press the key

2. Press the keys ◆ to find the desired number.

or

1. Press the key bearing the first letter of the name you are looking for. The fax machine will search for the name in alphabetical order.

9. To confirm the setting, press the key:



The fax machine shows the message "POLL SET" for a few seconds and then returns automatically to its initial stand-by mode. The second line of the display shows: "POLL RX 18:20".

TO CHANGE A POLLING RECEPTION THAT HAS BEEN SET

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
POLLING RX ◆

3. Press the key:



The display shows:

POLLING RX
NEW SETTING ◆

4. Press the keys



until the display shows:

POLLING RX
CHANGE ◆

5. Press the key:



The display shows:

TYPE TIME
HH:MM

From this point on, follow the procedure described in "To make a transmission request (polling reception)" from step 5.

TO DELETE A POLLING RECEPTION THAT HAS BEEN SET

1. Press the key:



The display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
POLLING RX ◆

3. Press the key:



The display shows:

POLLING RX
NEW SETTING ◆

4. Press the keys



until the display shows:

POLLING RX

DELETE



5. Press the key:



The display shows:

DELETE?

NO



6. To view the other available option, "DELETE? - YES",
press the keys:



7. To confirm your choice, press the key:



Polling reception is cancelled automatically and the fax
machine returns automatically to its initial stand-by status.

WHAT HAPPENS IF THERE IS A POWER FAILURE

If a power failure occurs, the fax machine **keeps the following data in the memory: the numbers set in the phone book and the reports**, while the documents present in the memory will be lost.

The date and time will also be lost so they will have to be reset by carrying out the procedure described in the "**To set the date and time for the first time**" section of the "**How to get started quickly**" chapter.

WHAT HAPPENS IF THE PAPER OR INK HAS RUN OUT

If, during reception, the **paper runs out** or **gets jammed**, the **ink runs out**, the **print cartridge compartment cover is open**, the **paper support is closed** or the **operator console is raised**, the machine stops printing and the display shows the relevant message and the document you are receiving is **temporarily recorded in the memory**. Once the problem has been solved, the fax machine resumes printing.

IF THE TRANSMISSION IS UNSUCCESSFUL

If **transmission is not completed** due to errors on the line or fax machine, the error LED "●▲" lights up and a short beep is emitted; in this case, the fax machine automatically prints the **transmission report** (see "**To print reports and lists**", chapter "**Transmission and reception operations**"), on which an **error code** indicates the cause of the error (you will find a list of all the error codes later).

FOR MINOR PROBLEMS

The list below may be used as a guide to the solution of minor problems.

PROBLEM	SOLUTION
The fax machine displays no message at all.	Check that it is connected to the power outlet and the telephone socket.
The document is not fed in correctly.	Check that the document respects the recommendations listed in " What documents may be used ", chapter " Transmission and reception operations ".
The fax machine will not send a document.	Check that the document is not jammed. The line is busy: wait until it is free and then try sending the document again.
The fax machine will not receive a document automatically.	It is set for manual reception: set it up for automatic reception.
The fax machine will not copy or receive documents.	Check that no documents or sheets of paper are jammed. You are using an unsuitable kind of paper: check the characteristics of the paper listed in the " Technical data ".
The fax machine prints blank sheets.	Place the document in the correct position with the side to be copied facing upwards.

NOTE

Incorrect transmission or reception by the fax machine may also depend on factors other than those listed above, which will be signalled in the form of **error codes** on the "**Transmission report**" and "**Activity report**", see "**To print reports and lists**", chapter "**Transmission and reception operations**".

ERROR CODES

The error codes printed both on the transmission report and the activity report consist of **two digits** indicating the **cause** of the error. To save space, the two-digit code without any message is printed on the activity report.

CODE	MESSAGE	CAUSE OF ERROR	WHAT TO DO
OK	OK	Operation performed successfully.	No action.
02	IMPOSSIBLE CONNECTION CHECK WITH OTHER PARTY	The fax machine does not detect any dialling tone or receives an irregular signal.	Check that the fax machine is correctly connected to the telephone line and that the handset is not off the hook. Then try connecting again.
03	RECEIVER DOES NOT ANSWER	The correspondent is not answering or is a fax machine.	Check that the correspondent's number is correct.
04	ERR. WHILE TRANSMITTING RESEND FROM PAGE:	An error occurred during transmission.	Resume transmission from the page indicated in the report.
05	ERR. WHILE TRANSMITTING RESEND PAGES:	The correspondent's fax machine found errors during reception.	Resume transmission of the pages indicated in the report.
06	LINE BUSY	The line is busy.	Retry when the line is free.
07	DOCUMENT TOO LONG	The document to be sent is too long. The time taken to send it exceeds the allowed limits.	Split up the document to be sent.
01 and 08	CHECK THE DOCUMENT	The optical reader cannot read the document.	Remove the document from the ADF and reinsert it. Then try connecting again.
09	STOP PRESSED	You aborted transmission.	No action.
10	ERRORS WHILE RECEIVING CHECK WITH OTHER PARTY	An error occurred during reception.	Call the correspondent and ask him to send you the document again.
11	IMPOSSIBLE RECEPTION MEMORY FULL	During reception, a printing error occurred. Reception continued in the memory but the space left in the memory was filled before reception was completed.	Correct the fault and wait for the document in the memory to be printed.
OK	OK?	The document was received but the printing quality is unsatisfactory.	Call the correspondent.
13	ERRORS WHILE POLLING CHECK WITH OTHER PARTY	The correspondent has not left any document in the ADF and has not set up his machine for polling transmission.	Call back the correspondent.

SIGNALS AND MESSAGES

Any **problems** that may arise are generally indicated by **acoustic signals** (accompanied, in some cases, by **visual signals**: error LED "●" indicator on) or by **error messages on the display**.

The fax machine also emits **acoustic signals** and shows **messages on the display**, which do **not indicate** an error condition.

ACOUSTIC ERROR SIGNALS

Short 1 second signal

- You pressed an incorrect key during an operating phase.

Long 3 second signal plus error LED indicator on

- Transaction not carried out correctly.

Continuous signal

- Request to hang up if you forgot to do so after an operation that required the handset to be lifted.

NOTE

To **turn off** the ERROR LED "●" indicator, press the  key.

ERROR MESSAGES ON THE DISPLAY

ALREADY ENTERED

You have already set a document transmission from the memory. You cannot set another at the same time.

ALREADY ENTERED

You have already set a polling reception. You cannot set another at the same time.

ALREADY PROGRAM.

You have chosen a position (00-99) in the phone book in which you have already stored a fax or telephone number: choose another position (see the "**To program the phone book**" section of the "**Transmission and reception operations**" chapter).

AUTOREDIAL MNM

No connection was established due to line errors or because the correspondent is busy: the fax machine prepares to redial automatically.


CHANGE CARTRIDGE

The ink in the cartridge has run out: replace the print cartridge (see "**To replace the print cartridge**", chapter "**Maintenance operations**").



CHECK CARTRIDGE

- The fax machine does not detect the presence of the print cartridge because you have forgotten to install it or you have installed it incorrectly: install/reinstall the print cartridge.
- Some of the print cartridge nozzles are damaged and are having a negative effect on the printing quality: clean the print cartridge (see "**Cleaning the print cartridge and testing the nozzles**", chapter "**Maintenance operations**").


CHECK DOCUMENT, PRESS <▽>

The document is not being fed correctly: replace the document on the ADF and press the  key to restore the fax machine's normal operation.

CHECK PAPER, PRESS <▽>

- The paper in the feeder has run out: add some more and press  to clear the message from the display.
- The paper is not being fed correctly: replace the paper in the feeder and press the  key to restore the fax machine's normal operation.

COPY INTERRUPTED

- You aborted the copy operation by pressing the  key.
- An error occurred during the document copying phase, preventing it from being printed: check the type of fault on the display and correct it.

DOC IN MEMORY

The document received was saved because an error occurred during the reception phase, preventing it from being printed immediately: check the type of error (paper out or jammed, ink out, etc.) and correct the fault.

EMPTY

You have tried to print the last transmission report but the fax machine has not sent any documents.

EMPTY LIST

- You are trying to change/delete a document transmission from the memory without having set one previously.
- You have tried to print an activity report but the fax machine has not executed any transactions (transmission/reception).
- You are trying to view/print the list of incoming/outgoing calls but the fax has not received any calls.

FULL LIST

- You are trying to add a fax or telephone number to the black list but the list is full: delete at least one number from the list (see "**To delete the black list**" in the "**More sophisticated operations**" chapter).
- You are trying to send a document from the memory to more than 10 correspondents. The fax machine allows you to send a document from the memory to a maximum of 10 correspondents (see "**To send a document to several correspondents**", in the "**Transmission and reception operations**" chapter).

ILLEGAL SETTING

The date and time have not been set correctly: see **"To set the date and time for the first time"** and **"To change the date and time"**, in the **"How to get started quickly"** chapter.

INSERT DOCUMENT

You are setting a document transmission from the memory without having inserted the document in the automatic document feeder (ADF): insert the document in the ADF.

MEMORY FULL

One or more documents received in the memory, due to an error that occurred during reception, have filled the memory: check the type of fault (missing or jammed paper, ink out, etc.) and correct it. The documents will be printed automatically thus freeing space in the memory.

NOT ALLOWED

You are trying to perform an operation that may not be performed on the fax machine.

NOT ENTERED

You are trying to delete/modify a document transmission from the memory without having set it previously.

NOT ENTERED

You are trying to delete/modify a polling reception without having set it previously.


NOT IDLE LINE

You are trying to carry out the ring frequency recognition procedure (see the **"To enable/disable recognition of the ring frequency"** section of the **"More sophisticated operations"** chapter) but the line is busy: try again later.

NOT PROGRAMMED

You have chosen a position (00 - 99) in the phone book in which you have not stored any fax or telephone number: choose another position or set the one you have just chosen (see **"To program the phone book"**, **"Transmission and reception operations"** chapter).

PAPER ERROR, PRESS <▽>

A sheet of printing paper got jammed during the copying or reception phase: press the  key and then, if the sheet is not unloaded automatically, check where it is jammed and remove it (see **"To remove jammed sheets of paper"**, chapter **"Maintenance operations"**).

PHONE BOOK EMPTY

You are trying to modify/delete a fax or telephone number from the phone book but the phone book is empty.



PHONE BOOK FULL

You are trying to store a fax or telephone number in the phone book but the phone book is full: delete at least one telephone or fax number from the phone book.


POLL.RETRY MNIN

You set polling reception and the connection was not established due to line errors or because the correspondent is busy: the fax machine prepares to redial automatically.

REMOVE DOCUMENT, PRESS <▽>

- A document jammed while the document was being copied or sent: press the  key then, if the document is not unloaded automatically, remove the jammed document by hand (see **"To remove jammed documents"**, chapter **"Maintenance operations"**).
- You aborted the document scanning phase by pressing the  key.


RX ERROR

The document was not received correctly: press the  key to turn off the "●" error LED indicator and clear the message from the display.

RX IN MEMORY

Reception continues in the memory because an error occurred during the reception of a document, preventing it from being printed: check the type of fault on the bottom line of the display and correct it.

TX ERROR

The document was not sent correctly: press the  key to turn off the "●" error LED indicator and clear the message from the display, and then send it again.

OTHER ACOUSTIC SIGNALS

Short 1-second signal

- Transaction carried out successfully.

Intermittent 20-second signal

- Prompt to lift the handset to answer a telephone call.

OTHER MESSAGES ON THE DISPLAY

CARTRIDGE LOW

The ink in the cartridge has almost run out.

CHECK PRINT OUT

1=EXIT 0=REPEAT

The fax machine has automatically tested the print cartridge nozzles and printed out the test sheet: check whether the printing quality is acceptable and make your choice.

CONNECTING

The fax machine is connecting to your correspondent's fax machine.

COVER OPEN

The cover is raised.

DIALLING

The fax machine is dialling the number of the correspondent you called.

DOC. N. XXXX

You have set a document transmission from the memory and the fax machine has just finished storing the document. "XXXX" corresponds to the number that identifies the document you have just stored.



DOCUMENT READY

You have inserted the document in the ADF correctly.

LIFT HANDSET

The correspondent has made a talk request: lift the handset to start the conversation.

LINE ON HOLD, PRESS HOLD

You have put a telephone call on hold by pressing the  key: press the  key again to resume the conversation with the correspondent.

NEW PRINT CART.? 1=YES 0=NO

You have installed a disposable print cartridge for the first time or you have removed and reinstalled it: select the relevant answer. If you answer yes but the print cartridge is not new, the fax machine will not detect the out of ink condition.

ON LINE

You have engaged the line by lifting the handset of the telephone connected.

PLEASE WAIT

The fax machine is carrying out a procedure.

POLL RX HH:MM

You have made a transmission request (Polling reception).

POLL SET

You have set a polling reception.

PRINTING

The fax machine is printing a report or a list.

PRINTING MEMORY

If the printing paper runs out or jams or the ink in the print cartridge runs out, the fax machine stores the documents received. Once the fax machine's normal operating conditions have been restored, it will print the documents present in the memory.

REPLACE HANDSET

You have selected "handsfree" mode: to start talking, replace the handset on its cradle.

RX INTERRUPTED

You aborted reception by pressing the  key.

STORING

The fax machine is saving the pages of the document to be copied.

TRANSMITTING

A document is being sent.

TRANSMITTING...

A document is being sent.


TX COMPLETED

Transmission was completed successfully.

TX FROM MEMORY

You have set transmission from the memory.

TX INTERRUPTED

You aborted transmission by pressing the  key.

TX SET


You have set a document transmission from the memory.

MAINTENANCE OPERATIONS


TO REPLACE THE PRINT CARTRIDGE

The print cartridge **must be replaced**, when the ink runs out (used print cartridges cannot be used) or when you notice a **deterioration in the print quality**.


In the former case, the fax machine automatically prints a sheet to remind you that the ink is about to run out and that you should replace it.

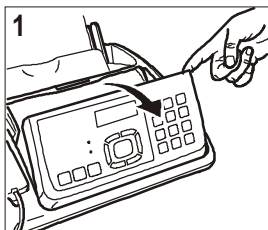


1. Flip open the console.

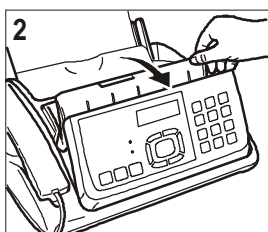


2. Lift the print cartridge compartment cover using the lever. To release the print cartridge, loosen the strap.

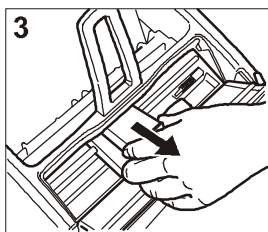

3. Pull the print cartridge from its seat.

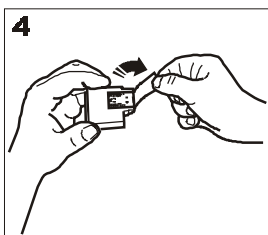


4. Hold the new print cartridge on both sides and peel off the film covering the nozzles.

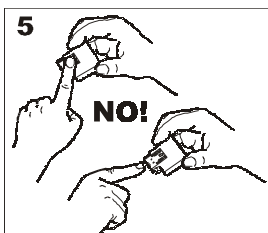


Warning!

5. Do not touch the nozzles or electrical contacts.

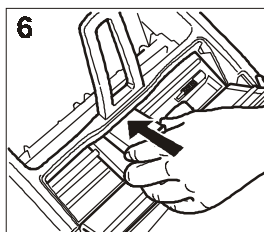

6. Replace the print cartridge in its seat. Ensure that the electrical contacts face downwards.

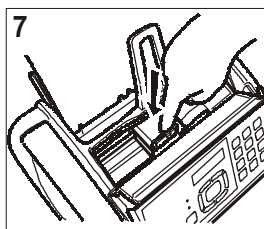

7. Push the print cartridge until it clicks into place.

8. Close the print cartridge compartment cover and the console.

NOTE

If you have replaced the cartridge because **the ink ran out**, when the operator console is closed, the fax machine will automatically recognize that the cartridge has been replaced and the **display will show** the message "NEW PRINT CART.? 1=YES 0=NO". Set the value 1.

At this point, the fax machine **automatically resets the cartridge and tests the nozzles**, and prints out a numbered scale and a message indicating that the cartridge has been replaced correctly on a sheet that it has loaded automatically. If the print quality of the numbered scale is not satisfactory, see "Insert the print cartridge" in the "How to get started quickly" chapter.

If you replaced the cartridge because of a **deterioration in print quality**, proceed as follows:

1. Press the key



until the display shows:

MENU
RECEPT. SET-UP ◆

2. Press the keys



until the display shows:

MENU
CART. MAINTEN. ◆

3. Press the key:



The display shows:

CART. MAINTEN.
NEW CARTRIDGE ◆

4. Press the key:



The display shows:

NEW CARTRIDGE
NO ◆

- To view the other available option, "NEW CARTRIDGE - YES", press the keys:



- Press the key:



The fax machine resets the cartridge and tests the nozzles, and then prints out the result of the diagnostic test. To interpret the diagnostic test result correctly, see "Insert the print cartridge" in the "How to get started quickly" chapter.

CLEANING THE PRINT CARTRIDGE AND TESTING THE NOZZLES

If you notice a **deterioration in print quality**, you can quickly clean the print cartridge and test the nozzles by following a procedure that ends by printing out the diagnostic test result with regard to its condition.

- Press the key



until the display shows:

MENU
RECEPT. SET-UP ◆

- Press the keys



until the display shows:

MENU
CART. MAINTEN. ◆

- Press the key:



The display shows:

CART. MAINTEN.
NEW CARTRIDGE ◆

- Press the keys:



The display shows:

CART. MAINTEN.
CLEAN CARTRIDGE ◆

- To confirm your choice, press the key:



The display shows:

CLEAN CARTRIDGE
NO ◆

- To view the other available option, "CLEAN CARTRIDGE - YES", press the keys:



- Press the key:



The fax machine resets the cartridge and tests the nozzles, and then prints out the result of the diagnostic test. To interpret the diagnostic test result correctly, see "Insert the print cartridge" in the "How to get started quickly" chapter.

NOTE

The procedure may be aborted at any time, if desired, by pressing the key.


NOTE

If the quality of the test result still fails to meet your expectations after carrying out the cleaning procedure, continue as follows, stopping when you get a satisfactory printing quality:


- Make a copy of a document with the desired type of graphics or text on the fax machine and evaluate its quality.
- Change the type of paper (the paper in use could be excessively porous) and repeat the procedure.
- Remove and reinsert the print cartridge.
- Remove the print cartridge and check that there are no foreign bodies on the print nozzles; if there are, remove them carefully, taking care not to touch the electrical contacts. Finally, reinstall the print cartridge.
- Remove the print cartridge and clean the electrical contacts both on the print cartridge and on the print cartridge carriage, see "To clean the electrical contacts of the print cartridge", below.
- Reinstall the print cartridge.
- Call the engineering service.

TO CLEAN THE ELECTRICAL CONTACTS OF THE PRINT CARTRIDGE


With the fax machine **disconnected from the power socket**:

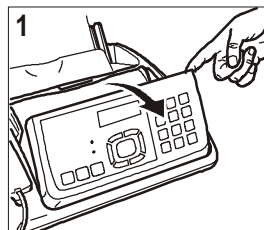


- Flip open the console.

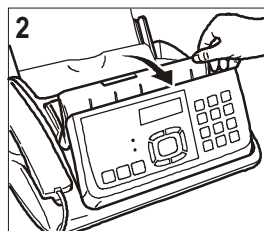


- Lift the print cartridge compartment cover using the lever. To release the print cartridge, loosen the strap.

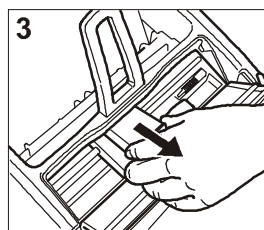

- Pull the print cartridge from its seat.

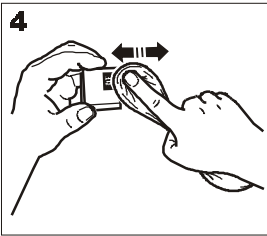

4. Clean the electrical contacts using a slightly damp cloth.
Warning!
 Do not touch the nozzles!

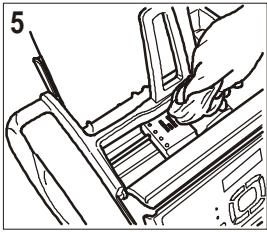


5. Clean the electrical contacts of the print cartridge carriage with a slightly damp cloth.


6. Replace the print cartridge in its seat. Ensure that the electrical contacts face downwards.
 7. Push the print cartridge until it clicks into place.
 8. Close the print cartridge compartment cover and the console.

TO CLEAN THE OPTICAL READER

Dust accumulating on the glass surface of the optical reader may cause problems in the scanning of documents. To avoid these problems, the glass should be cleaned every now and again as follows:
 With the fax machine **disconnected from the power socket**:

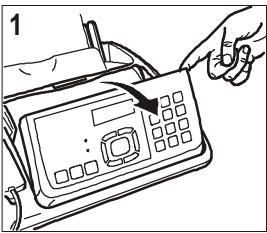

1. Flip open the console.

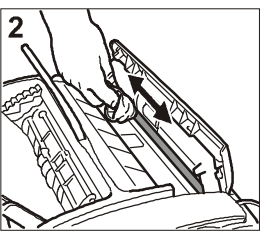

2. Clean the glass surface of the optical reader with a **cloth dampened** with a product designed specifically for cleaning glass and then dry it thoroughly.
Warning!
 Do not pour or spray the cleaning product directly onto the glass surface.

3. Close the operator console.

NOTE


To check whether the optical reader is clean, make a copy of a blank sheet. If any vertical lines appear on the copy and the optical reader looks perfectly clean, contact qualified technical staff.


TO CLEAN THE CASING

1. Unplug the fax machine from the power outlet and the telephone socket.
2. Use exclusively a soft, lint-free cloth dampened with a neutral detergent diluted with water.

TO REMOVE JAMMED DOCUMENTS

During **transmission** or **copying**, a **document** could get **jammed** (this condition is signalled by the display showing the message: "**REMOVE DOCUMENT, PRESS <▽>**").

Try to unload the document by pressing the  key. If the document is not unloaded, remove it manually as follows:

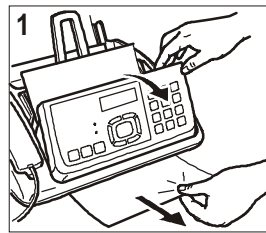


1. Open the console, remove the document from the ADF and close the console again.


NOTE

Never use pointed objects to remove jammed documents.


TO REMOVE JAMMED SHEETS OF PAPER

If the paper used to print received documents or to copy documents gets jammed (this error is signalled on the display by the message "**PAPER ERROR, PRESS <▽>**"), try to unload the sheet by pressing the  key. If the sheet is not unloaded, remove it manually as follows:

If the paper gets jammed in the ASF:

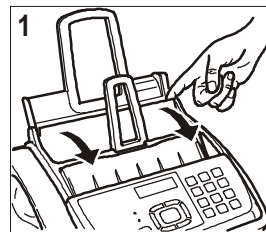


1. Open the ASF panel.

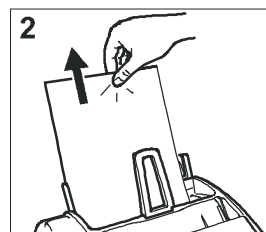

2. Remove the jammed sheet. Ensure that it does not tear.

If the paper gets jammed in the received/copied document output:

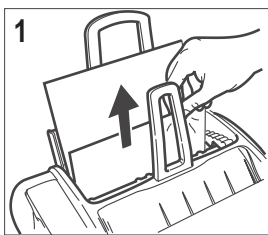

1. Remove the jammed sheet. Ensure that it does not tear.

N O T E

Never use pointed objects to remove jammed sheets of paper.

MANUFACTURER AND CUSTOMER SERVICE

MANUFACTURER

Olivetti S.p.A. con unico azionista
Gruppo Telecom Italia
Direzione e coordinamento di Telecom Italia S.p.A.
Via Jervis, 77 - 10015 IVREA (TO)
ITALY

CUSTOMER SERVICE

If the fax machine is not working as it should, or you want to ask the manufacturers something, call the number indicated on the "Warranty Card".

GENERAL CHARACTERISTICS

Model Desktop transceiver
Display LCD 16 + 16 char.
Capacity memory max. 150 pages
Dimensions
Width 350 mm
Depth 280 mm
Height 140 mm
Weight ca. 4.7 Kg

COMMUNICATION CHARACTERISTICS

Telephone network Public/private
Compatibility ITU
Communication speed 14400 - 9600 - 7200 - 4800 - 2400
 (with automatic "fall back")
Compression method MH, MR, MMR

POWER SUPPLY CHARACTERISTICS

Voltage 220-240 VAC or 110-240 VAC (data plate on base of fax machine)
Frequency 50-60Hz (data plate on base of fax machine)
Power absorbed:
 - in stand-by mode < 4 W
 - max. power max. 25 W

ENVIRONMENTAL CONDITIONS

Temperature from +5°C to +35°C (operating)
 from -15°C to +45°C (transport)
 from 0°C to +45°C (short and long-term storage)
Relative humidity 15%-85% (operating/short and long term storage)
 5%-95% (transport)

CHARACTERISTICS OF OPTICAL READER

Scanning method CIS
Scanning resolution:
 - Horizontal 8 pixel/mm
 - Vertical STANDARD 3.85 lines/mm
 - Vertical FINE 7.7 lines/mm

TRANSMISSION CHARACTERISTICS

Transmission speed ca. 7s (14400 bps) (*)
Capacity of document feeders **Automatic feeder (ADF):**
 20 sheets A4 (80 gr/m²)

RECEPTION CHARACTERISTICS

Printing system Printing on plain paper, bubble ink jet printer
Max. printing width 204 mm
Printing paper A4 (210 x 297 mm)
 US Letter (216 x 279 mm)
 US Legal (216 x 356 mm)
 Paper weight: 70-90 gr/m²
Paper feed Plain paper cassette (max 100 sheets of 80 gr/m²)

TELEPHONE ANSWERING DEVICE CHARACTERISTICS (ONLY MODEL WITH A BUILT-IN TELEPHONE ANSWERING DEVICE)

- Recording capacity: max. 30 minutes
- Memo
- 2 Outgoing messages
- Outgoing messages only function
- "Toll saver" function
- Transfer message
- Fast access from console and remote location
- Access code
- Message recording
- Retention of messages in case of a power failure.

TELEPHONE CHARACTERISTICS

- 4 ring tones, which can be associated with numbers in the phone book
- Possibility of storing up to 100 numbers in the phone book
- Handsfree operation
- Caller id function

(*) = Test Sheet Slerexe Letter with standard resolution, MMR compression.

		STANDARD FORM CCITT R1
THE SLEREXE COMPANY LIMITED SAPORS LANE · BOOLE · DORSET · BH 25 8 ER TELEPHONE BOOLE (0451) 51617 · TELEX 123456		
Our Ref. 350/PJC/EAC	4th April, 1984	
Dr. P. N. Cundall, Mining Surveys Ltd., Holroyd Road, Reading, Berks.		
Dear Pete,		
Permit me to introduce you to the facility of facsimile transmission.		
In facsimile a photocell is caused to perform a raster scan over the subject copy. The variations of print density on the document cause the photocell to generate an analogous electrical video signal. This signal is used to modulate a carrier, which is transmitted to a remote destination over a radio or cable communications link.		
At the remote terminal, demodulation reconstructs the video signal, which is used to modulate the density of print produced by a printing device. This device is scanning in a raster scan synchronised with that at the transmitting terminal. As a result, a facsimile copy of the subject document is produced.		
Probably you have uses for this facility in your organisation.		
		Yours sincerely,
		 P. J. CROSS Group Leader - Facsimile Research

A

- Access to the telephone answering device
 - to enable/disable 38
- Acoustic signals 62
- Automatic document feeder (ADF) 7, 17, 25
- Automatic redial 27

B

- Buzzer volume 55

C

- Casing
 - cleaning 66
- Cleaning
 - casing 66
 - electrical contacts 65
 - optical reader 66
- Components
 - external and internal 7
- Connection
 - connection sockets 7
 - of the telephone handset 8
 - to power supply 8
 - to the telephone line 8
- Console 5
- Contrast
 - adjustments 25
- Copy
 - contrast and resolution values 21
 - copy setting 21
 - to abort the copy 21
 - to make a copy 21
 - what documents can be copied 21
- Country
 - to change 9
 - to set 9
- Customer Service
 - Customer Service telephone number 68
- Customer Service telephone number 68

D

- Date and time
 - to change the date and time 11
 - to set the date and time 10
- Dialling
 - pulse 12
- Display 7
 - other messages 62
- Documents
 - automatic document feeder (ADF) 7, 17, 25
 - to remove jammed documents 66
 - what documents may be used 25

E

- ECM (Error Correction Mode) 56
- Electrical contacts
 - print cartridge carriage 65
- Environment
 - environmental recycling 3
- Environmental recycling
 - to dispose of our devices correctly 3
- Error codes 59, 60
- Error LED indicator 61

I

- Installation and setup parameters
 - about the installation and setup parameters 4
 - setting some parameters 9

L

- Line characteristics
 - to switch from a public line to a private line 12
- Line signals 54
- Lists
 - black list numbers 35
 - list of installation parameters 34
 - list of reception setup parameters 35
 - list of setup parameters 34

M

- Maintenance
 - cleaning the print cartridge 65
 - Customer Service telephone number 68
 - safety precautions 3
 - testing the nozzles 65
 - to clean the casing 66
 - to clean the electrical contacts 65
 - to clean the optical reader 66
 - to remove jammed documents 66
 - to remove jammed sheets of paper 66
 - to replace the print cartridge 64
 - troubleshooting
 - minor problems 59
 - power failure 59
 - the paper or ink has run out 59
 - the transmission is unsuccessful 59
- Manufacturer
 - telephone number 68
 - to contact 68
- Memory
 - transmission from the memory 27
 - to change/repeat/delete 28
- Memos
 - to record 40

Memos and incoming messages
length 41
to delete 41
to listen 41
to transfer to a remote telephone 42

Message language
to change 10
to set 9

Messages
error messages on the display 61
other messages on the display 62

O

Optical reader
cleaning 66

Outgoing message 1
to listen 39
to record 38

Outgoing message 2
to erase 39
to listen 39
to record 39

Outgoing messages and memos 38

P

Package
package contents 8

Paper
choosing the printing paper size 15
jammed paper 59
paper has run out 59
plain paper feed compartment (ASF) 7
to feed the print paper 14
to remove jammed sheets of paper 66

Phone book 30
associate a ring type with a number 30
changing a number 30
deleting a number 31
printing data from the phone book 31, 35
programming the phone book 30
sending a document using the search function 32

Plain paper feed compartment (ASF) 7, 14

Polling
polling reception 56
to change a polling reception 57
to delete a polling reception 57

Power supply
power failure 59

Print cartridge
cleaning the print cartridge / testing the nozzles 16, 65
to clean the electrical contacts 65
to install the print cartridge 15
to replace the print cartridge 64

R

Reception
automatic reception 18, 29
with recognition of the type of call 29
manual reception 18, 29
reception in "PHONE/FAX" mode 19
reception with telephone answering device 18
recognition of the ring frequency 49
silent reception 47
surplus text 46
to change the length of the acoustic signal 50
to change the number of rings 48
to change the remote control code 51
to change the ring volume 49
to change the silence lapse 50
to choose the reception mode 18, 29
to delete the black list 52
to display the caller ID 47
to modify the black list 52
to print the black list 53
to reduce the area of a document received 46
to set the black list 52

Remote control code 51

Reports
activity report 32
automatic printing 33
failed transmission report 32
how to read the reports 33
last broadcast transmission report 32
last transmission report 32
power failure report 32
to print on request 34

Resolution
adjustments 25

Ring types
associate a ring type with a no. in phone book 30

Ring volume 49

S

Safety
safety precautions 3
improper use 4
operating precautions 4
risk of accident 3
risk of an electric shock 3
risk of fire 3
risk of suffocation 3

Safety precautions 3

Security and access functions 37

Setup
certification requirements 4
setting some parameters 9

Signals
acoustic error signals 61
other acoustic signals 62

Station ID
fax number 13
name 13
name and fax number
position 14, 53

T

TAD access code

- to change 37
- to delete 37
- to set 37

TAD configuration parameters

- to print 45

TAD console 36

Technical data

- characteristics of optical reader 69
- communication characteristics 69
- environmental conditions 69
- general characteristics 69
- power supply characteristics 69
- reception characteristics 69
- telephone answering device characteristics 69
- telephone characteristics 69
- transmission characteristics 69

Telephone

- dialling a number before engaging the line 20
- to redial the last numbers 20
- to telephone by searching through the phone book 19
- to telephone using the quickest method 20
- using the telephone 19

Telephone answering device 36, 69

- length of memos and incoming messages 41
- outgoing messages and memos 38
- security and access functions 37
- special functions 44
 - outgoing message only 44
 - silent reception 45
 - toll saver 44

TAD console 36

- to change the TAD access code 37
- to delete incoming messages and memos 41
- to delete the TAD access code 37
- to enable/disable access to the TAD 38
- to erase outgoing message 2 39
- to listen to incoming messages and memos 41
- to listen to outgoing message 1 39
- to listen to outgoing message 2 39
- to listen to the transfer message 40
- to operate the TAD from a remote location 43
- to print the TAD configuration parameters 45
- to record memos 40
- to record outgoing message 1 38
- to record outgoing message 2 39
- to record the transfer message 40
- to set the TAD access code 37
- to transfer messages and memos 42
- to turn on the TAD 36

To delete the black list 52

To modify the black list 52

To operate the TAD from a remote location 43

To print the black list 53

To print the menu and its functions 16

To set the black list 52

To turn on the telephone answering device 36

Transfer message

- to listen 40
- to record 40

Transmission

- broadcast transmission 27
- sending a document using the quickest method 32
- to adjust the contrast and resolution 25
- to enable/disable ECM 56
- to enable/disable the Flash function 55
- to hear the dialling tone when sending 17, 26
- to hear the line signals 54
- to regulate the buzzer volume 55
- to regulate the speaker volume 54
- to send a document 17, 26
- to send a document from the memory 27
- to send a document with the receiver raised 17, 27
- to stop a transmission 26
- what documents may be used 17, 25

Transmitting

- formats 17, 25

Troubleshooting

- minor problems 59
- power failure 59
- the paper or ink has run out 59
- the transmission is unsuccessful 59



MANUFACTURER'S CE DECLARATION of CONFORMITY according to ISO/IEC 17050

OLIVETTI S.p.A. Via Jervis, 77 - IVREA (TO) - ITALY

Declares under its sole responsibility that:

the product described in this guide

is IN COMPLIANCE with directive 99/5/EC dated 9th march 1999

fulfills the essential requirements of **Electromagnetic Compatibility and of Electrical Safety** as prescribed by the Directives:

2004/108/EC dated 15th December 2004;

2006/95/EC dated 27th December 2006;

since designed and manufactured in compliance with the following European Harmonized Standards:

EN 55022/A2 : 2003 (Limits and methods of measurements of radio interference characteristics of Information Technology Equipment) / Class B;

EN 61000-3-2/A1 : 2002 (Electromagnetic Compatibility (EMC) - Part 2: Limits - Section 2: Limits for harmonic current emissions (equipment input current ≤ 16 A per phase);

EN 61000-3-3/A1 : 2002 (Electromagnetic Compatibility (EMC) - Part 3: Limits - Section 3: Limitation of voltage fluctuations and flicker in low voltage supply systems for equipment with rated current up to and including 16A);

EN 55024/A1 : 2002 (Electromagnetic Compatibility - Information technology equipment - Immunity characteristics - Limits and methods of measurement);

EN 60950-1/A1 : 2004 (Safety of Information Technology Equipment, including electrical business equipment).

Moreover the product is in compliance with following Standards:

ETSI TBR 38: May 1998 (Requirements for a terminal equipment incorporating an analogue handset function capable of supporting the justified case service when connected to the analogue interface of the PSTN in Europe);

ETSI ES 203 021: January 2006 Access and Terminal (AT); Harmonized basic attachment requirements for Terminals for connection to analogue interfaces of the Telephone Networks.

Compliance with the above mentioned essential requirements is shown by affixing the **CE marking** on the product.

Scarmagno, 11th July 2007

Olivetti S.p.A.

Notes: 1) CE Marking has been affixed in 2007.

2) The Quality System is in compliance with the UNI EN ISO 9000 series of Standards.

OLIVETTI ECO-FRIENDLY ORIGINAL CONSUMABLES RESPECT YOUR HEALTH AND THE ENVIRONMENT

Olivetti continues in its pursuit to improve the environmental conditions and protect the environment in which it operates. It provides its customers with safe and reliable consumables in respect of the best operating conditions, and strives to ensure the full environmental compatibility of its technologies and production processes.

Olivetti bases its production aims on respect of the principles of environmental protection and the conservation of natural resources for future generations.


To this aim, Olivetti has adopted the following environmental policy measures:

to conform to the provisions of the national laws by taking the necessary steps to change its management policy towards the safeguarding of the environment, to take environmental aspects into consideration right from the decision-making processes involved in the design of consumables, to use materials that have a lighter impact on the environment, to avoid using raw materials containing excipients that are believed to cause cancer, to avoid manufacturing consumables that, during normal use, may cause harm to man or the environment, and to collaborate with organizations that promote the principles of environmental protection.

To implement a schedule of periodic checks of environmental performance, with the spirit of prevention that comes from the improvement achieved, such as:

- To reduce in the estimate and design phase the production of waste and pollutants, by carrying out incoming tests on the goods received;
- To use thermal, electrical and transformation energy with high efficiency, to save non-renewable natural resources;
- To choose processes and equipment with a low energy consumption both inside the company and towards suppliers;
- To recover and recycle the materials and consumables that permit effective, concrete collection processes: paper, cardboard, aluminium/iron, PET, glass, packaging wood.

All consumables are manufactured in such a way as to limit the environmental impact and conform to the regulations in force. Olivetti has banned the use of a number of hazardous substances (chromium, cadmium, mercury, lead and others) in the manufacture of its products.

Olivetti consumables conform to the CONTROL OF POLLUTION FROM ELECTRONIC INFORMATION PRODUCTS SJ/T11363-2006 (CHINA RoHs) regulation in force since 1st March 2007 in the Republic of China and bear the  trademark "Free from hazardous substances".

In addition, Olivetti takes part in the process of implementation of the R.E.A.C.H. (Registration, Evaluation and Authorisation of Chemicals - CE 1907/2006) regulation, which establishes a single regulatory framework for the classification and registration of existing chemical substances and came into force on 1st June 2007 with a view to protecting health and the environment, using exclusively substances conforming to the regulation. The company:

- Requests suppliers to certify that the substances, preparations, consumables and packages conform to the general health and environmental protection specifications;
- Guarantees that no substances harmful for the ozone layer are used in the processes for the manufacture of consumables and packages;
- Reduces the quantity of material used, through efficient production processes;
- Prints cartridge installation instructions only in the machine's manual without adding leaflets to the cartridge packet, thus saving many tons of paper per year;
- Designs consumables and packages in such a way that they can be recycled easily.

In the pursuit of this policy, Olivetti has started to manufacture, also for its new fax machines, a new generation of ECO-FRIENDLY consumables, following the implementation of complete and constant improvements in its development and production processes. They meet environmental safety requirements and regulations right from the design phase, offering high levels of quality, performance and reliability, using fewer materials that are more efficient from the energy point of view and easy to recycle, and maximizing added value.

FJ63

THE ONLY CARTRIDGE TO BE USED
WITH YOUR FAX



380550N